


### N600 Wireless Dual Band Gigabit Router WNDR3700v3


#### Package Contents:




Resource CD

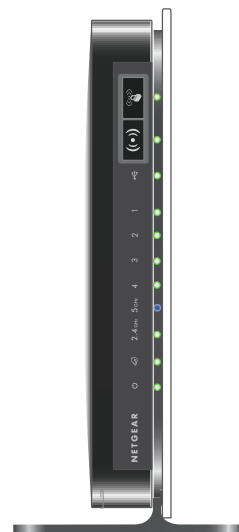

N600 Wireless Router

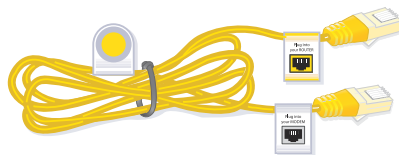


Ethernet cable

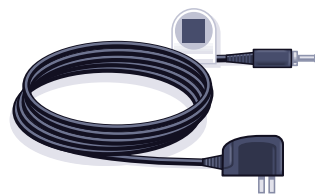


Power Adapter

**Step 1A:**  
Unplug or power off your modem.

**Step 1B:**  
Cable your modem.

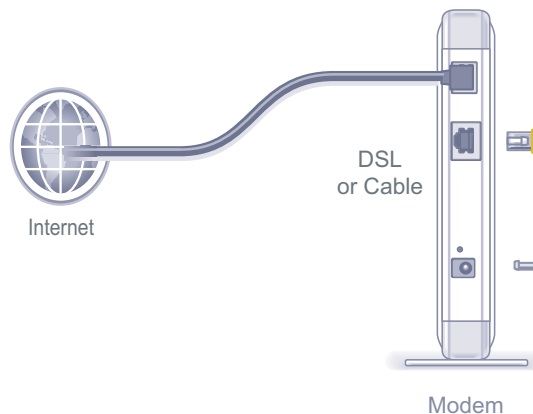


**Step 2:**  
Cable your router.

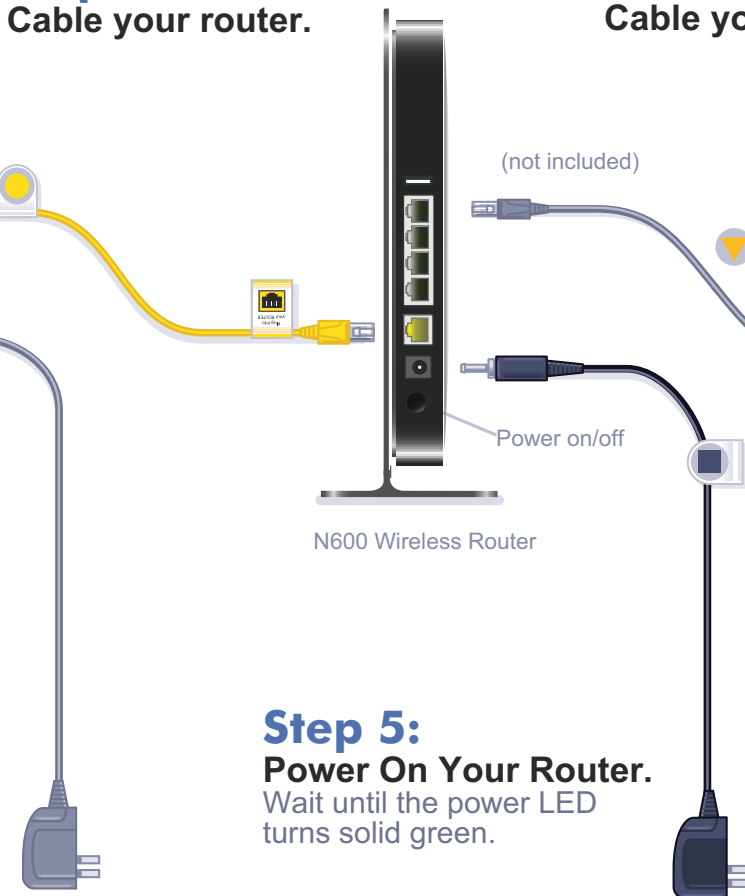

**Step 3:**  
Cable your computer.



Laptop or Desktop  
Computer

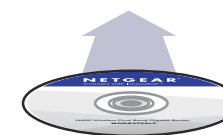

Resource CD

**Step 4:**  
**Power On Your Modem.**  
Wait until your modem cycles on  
(approximately 2 minutes).

**Note:** If you have a modem with a battery backup, remove and re-insert the battery before connecting your modem to power.

**Step 5:**  
**Power On Your Router.**  
Wait until the power LED  
turns solid green.

**Step 6:**  
**Insert Your CD.**  
Click **Router Setup** and follow  
the steps to set up a secure  
wireless network.

**Note:** If your laptop does not have a CD drive, see **"No CD Drive" Installation** on the back to complete your router setup.

# “No CD Drive” Installation


## Set up Internet access

1. In the address field of your browser, type <http://www.routerlogin.net> and click **Enter**.
2. Enter the router User Name **admin** and default Password **password** to open your router’s main settings page.
3. When the main settings page opens, you will be asked if you want to “Check for Update.” Click **Cancel**. You can always check for new firmware later after you are connected to the Internet.
4. Select the first menu item on the left: **Setup Wizard**. Make sure **Yes** is selected. Then click **Next** and follow the prompts to complete the Setup Wizard.



User name:  Password:   Remember my password

OK Cancel

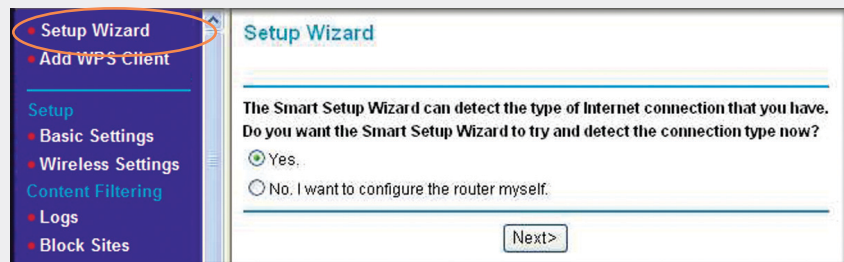

Setup Wizard

The Smart Setup Wizard can detect the type of Internet connection that you have. Do you want the Smart Setup Wizard to try and detect the connection type now?

Yes.  No. I want to configure the router myself.

Next>

When the Setup Wizard has completed detecting your connection, the Basic Settings page displays showing your settings. You are now connected to the Internet.


**Note:** If your ISP requires that you enter a User Name or Password, you will be prompted to enter this information. If you do not have this information, contact your ISP.

After connecting to the Internet, you can check for firmware updates by selecting **Router Upgrade** and following the on-screen prompts.

## Set up wireless security

You should set up a secure wireless network. Once your router security is established, your wireless laptops, gaming devices (such as Wii or Play station 3 with wireless), or other wireless equipment can safely and securely connect to the Internet.

1. From the main menu page, select **Wireless Settings**.\*

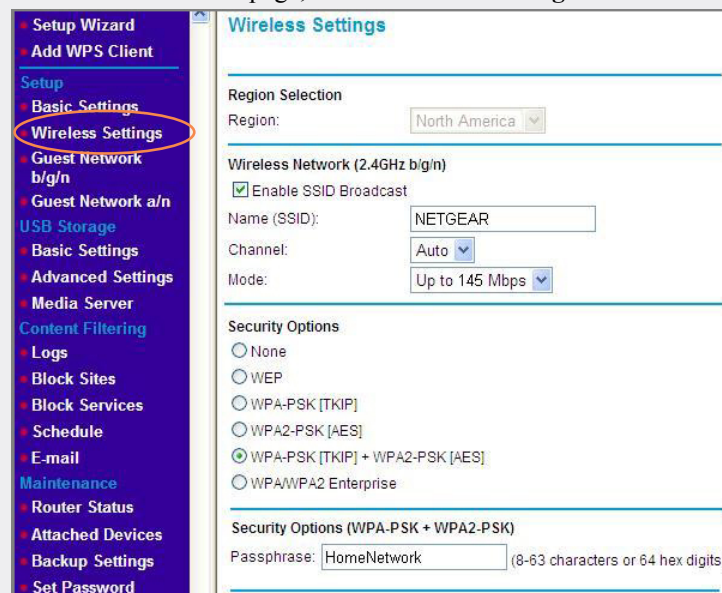

Wireless Settings

Region Selection  
Region: North America

Wireless Network (2.4GHz b/g/n)  
 Enable SSID Broadcast  
Name (SSID): NETGEAR  
Channel: Auto  
Mode: Up to 145 Mbps

Security Options  
 None  
 WEP  
 WPA-PSK [TKIP]  
 WPA2-PSK [AES]  
 WPA-PSK [TKIP] + WPA2-PSK [AES]  
 WPA/WPA2 Enterprise

Security Options (WPA-PSK + WPA2-PSK)  
Passphrase: HomeNetwork (8-63 characters or 64 hex digits)

\*Your router menu may display different or additional features not shown in this image.

2. First, name your wireless network. (For dual band routers, you will define both the 2.4 and 5GHz wireless networks.) Choose a name that is easy for you to remember. You might want to write it down here: \_\_\_\_\_ (the default name is NETGEAR).
3. Select your security method. NETGEAR recommends WPA-PSK (TKIP) +WPA2-PSK (AES). Then, enter a Passphrase. In the example, we entered HomeNetwork. You might want to write your Passphrase down here: \_\_\_\_\_.  
**Note:** Name (SSID) and Passphrase are case sensitive. Your Network name, Security method and Passphrase must be the same on all the wireless devices connected to your router.
4. Perform steps 2 and 3 for both wireless networks, and click **Apply**.

# Connect Wireless Devices to Your Router

Enter your wireless information here:

Wireless Network Name (SSID) \_\_\_\_\_



Wireless Security Passphrase \_\_\_\_\_

If you don’t remember your Passphrase, type <http://www.routerlogin.net> into your browser and log in by entering your User Name **admin** and Password (default is **password**). Then, select **Wireless Settings** to retrieve your Passphrase.

You can add wireless computers and other equipment to your wireless network:

1. Open the wireless software that manages your wireless connections on the wireless device (iPhone, laptop computer, gaming device) that you want to connect to your router.
2. The wireless software will scan for all wireless networks in your area. Look for your network—the one you named when you set up your router. Select it.
3. If you set up security, you will be prompted for a Passphrase or network key. Enter the Passphrase you selected and click **Connect**.

If your wireless device supports WPS (WiFi Protected Setup)—NETGEAR calls this method Push 'N' Connect—you might be prompted to press a WPS button on the router instead of entering a Passphrase. Then:

1. Press the WPS button on the router. It will look similar to  or .
2. Within 2 minutes, follow the wireless software instructions on the wireless device to complete the WPS process.  
The device will then be connected to your router. Repeat this process to add other wireless devices.

After installing your device, go to <http://www.netgear.com/register>. Registration is required before you can use our telephone support service. Go to <http://support.netgear.com> for product updates, documentation, and support.

For complete DoC visit the NETGEAR EU Declarations of Conformity website at: [http://support.netgear.com/app/answers/detail/a\\_id/11621/](http://support.netgear.com/app/answers/detail/a_id/11621/)

For GNU General Public License (GPL) related information, visit [http://support.netgear.com/app/answers/detail/a\\_id/2649](http://support.netgear.com/app/answers/detail/a_id/2649)

NETGEAR, the NETGEAR logo, and Connect with Innovation are trademarks and/or registered trademarks of NETGEAR, Inc. and/or its subsidiaries in the United States and/or other countries. Information is subject to change without notice. Other brand and product names are registered trademarks or trademarks of their respective holders. © 2011 NETGEAR, Inc. All rights reserved.



201-13725-03



October 2011



This symbol was placed in accordance with the European Union Directive 2002/96 on the Waste Electrical and Electronic Equipment (the WEEE Directive). If disposed of within the European Union, this product should be treated and recycled in accordance with the laws of your jurisdiction implementing the WEEE Directive.