


[KODAK Store](#) |
 [KODAK Gallery](#) |
 [Experience Kodak](#) |
 [Tips & Projects Center](#) |
 [Organize, Print & Share](#) |
 [Support](#)

KODAK EASYSHARE SV710 Digital Picture Frame Firmware

Published 10/05/2010 01:40 AM | Updated 04/19/2011 10:10 AM | Answer ID 17210

This firmware version provides the following improvements: error handling and messaging; audio and video playback; music and slideshow playback; file/folder display.

 Before downloading, [print](#) or write down the installation instructions below.

Version 2007.7.03

Release Date 2007-07

File Name Kodak_UpgradeFW_7.img

File Size 1 megabytes


System Requirements

Operating System Compatibility	WINDOWS 7, WINDOWS XP, WINDOWS VISTA, WINDOWS 2000, WINDOWS 98, WINDOWS ME, MAC OS X 10.3.x, MAC OS X 10.4.x, MAC OS X 10.5.x, MAC OS X 10.6.x
Processor Speed	PENTIUM II, 233 MHz
Memory	128 MB minimum
Hard Disk Space	200 megabytes
Language Support	English, French, German, Italian, Portuguese, Japanese, Spanish, Chinese, Russian, Swedish, Turkish

Installation Instructions

Determine If Your Frame Needs This Firmware Upgrade

1. Locate the serial number sticker on the back of your frame.
2. If Model Code VY appears on the sticker, your frame has the latest firmware and does not need this upgrade. If any other code appears, review the installation instructions, then click Download to upgrade the firmware on your frame.

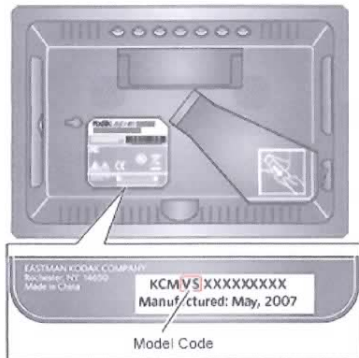

IMPORTANT: *Print this page before continuing.*

Determine Your Current Firmware Version

1. Turn on your frame.
2. If a USB cable is connected to your frame, disconnect it.
3. On your remote control, press **Home**.
4. Press the 4-way button to select **Settings**, then press **OK**. The Setup screen appears.
5. Select **About**, then press **OK**. The Setup - About screen appears and displays your current firmware version.
6. Press **OK** then press **Home**.

Upgrade the Firmware on your Digital Picture Frame

1. Download the .img file to your computer.

2. Copy the .img file to the root directory (not in a folder or subfolder) of a memory card or USB flash drive, then insert the memory card or USB flash drive into your frame.
3. On your remote control, press **Home**.
4. Press the 4-way button to select **Settings**, then press **OK**.
5. Select **Upgrade firmware**, then press **OK**. The current firmware version on your frame and the version on the memory card or flash drive appears.
6. Select **Upgrade firmware**, then press **OK** to begin the upgrade.
CAUTION: Do not turn off your frame or remove the memory card or USB flash drive during the upgrade. The upgrade is complete when the progress bar completely fills. A check mark may appear on the some frame models.
7. Remove the memory card or USB flash drive from your frame.
8. Turn off your frame.
9. Wait 5 seconds, then turn on your frame.
10. If prompts appear, such as language selection, follow the prompts until the Home screen appears.
11. Verify that the firmware is upgraded. See the above instructions, Determine Your Current Firmware Version.

[Download](#)

By downloading from Kodak, you agree to the terms and conditions outlined in the [license agreement](#).