

Cat. No. 12-250
OWNER'S MANUAL



Please read before using this equipment.

**7 Channel WRSAME
Weatheradio® with Alert**



RadioShack®

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

	CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

©1999 Tandy Corporation.
All Rights Reserved.
RadioShack, Plug 'n Power, and Weatheradio are registered trademarks used by Tandy Corporation.
X-10 is a registered trademark of X-10 (USA) Inc.

DECLARATION OF CONFORMITY

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product:	7 Channel WRSAME Weatheradio with Alert
Model:	12-250
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-3200

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.



FEATURES

Your RadioShack 7 Channel WRSAME Weatheradio is the next generation of weather alert technology. Your Weatheradio uses SAME (Specific Area Message Encoding) circuitry to provide more complete information about weather conditions in your immediate area, letting you avoid hearing alerts for geographical areas that do not interest you.

Your Weatheradio's features include:

SAME Operation — lets you program up to 15 different geographical codes into the Weatheradio's memory, so the Weatheradio sounds an alert only when a weather emergency is declared in any of those locations.

7 Weather Channels — let you select the frequency for your local National Oceanic and Atmospheric Administration (NOAA) weather broadcasts.

Selectable Alert Function — lets you set the Weatheradio so it sounds an alert when it receives a weather emergency broadcast from NOAA. You can also set the Weatheradio so it does not alert you when it receives some types of warnings.

8-Character Liquid Crystal Display — the Weatheradio's large, easy-to-read display clearly shows a description of the type of alert in progress (such as a tornado warning, flood watch, and so on).

Alert Status Indicators — help you determine at a glance the type of alert the Weatheradio is receiving.

Adjustable Display Backlight — helps you read the display in low light situations. You can set the light to turn on for about 10 seconds when you press a key, or remain on until you turn it off.

Alert Volume Control — lets you adjust the volume of an alert so you will be sure to hear it.

External Alert Terminals — let you connect an external controller system (such as a Plug 'n Power® or X-10® system) to the Weatheradio, then set that system to indicate an alert based on signals received by the Weatheradio. This lets you hear or see the alert in a location (such as the garage) that might be some distance from where you installed the Weatheradio.

External Antenna Connector — lets you connect an optional external antenna to the Weatheradio to improve reception in remote areas.

We recommend you record your Weatheradio's serial number here. The number is on the bottom of the radio.

Serial Number: _____

CONTENTS

How Your Radio Works	8
When a Weather Alert Occurs	9
New Alert Types	10
NWS Weather Alert Descriptions	10
Understanding FIPS Codes	17
Obtaining Your Area's FIPS Code(s)	18
Preparation	19
Powering the Weatherradio	19
Connecting the Weatherradio to AC Power	20
Installing the Backup Battery	21
Using the Built-In Antenna	22
Choosing a Location and Mounting the Weatherradio ..	23
Connecting the Weatherradio to an External System ..	25
Programming the Weatherradio	26
Testing the Weatherradio	31
Manually Testing the Alert Tone	32
Testing the Alert Siren/Display	33
Operation	35
Listening to a Weather Broadcast	35
Using the Alert Function	36
Setting the Alert Volume	37
Changing/Checking the Alert Pattern	37
Enabling/Disabling Alert Tones	39
Using the Weatherradio's 'All Signals' Code	41
Reviewing Overlapping Alerts	42
When a Test or Demo Alert Occurs	43
Using the Backlight	44
Troubleshooting	45
Care and Maintenance	48
The FCC Wants You to Know	49
Specifications	50

HOW YOUR RADIO WORKS

Traditional weather radios simply receive NOAA's weather broadcast (usually within a 50-mile radius) then sound an alarm if any emergency code was transmitted along with the broadcast. This means that people who live outside an affected area are often alerted even when their area is not affected, causing many of them to ignore potentially real weather warnings that can save lives.

 
In 1994, the National Oceanic and Atmospheric Administration (NOAA) began broadcasting coded signals called FIPS (Federal Information Processing System) codes along with their standard weather broadcasts from stations in your area. These codes identify the type of emergency and the specific geographic area (such as a county) affected by the emergency. Your Weatheradio receives, interprets, and displays information about the codes so you can determine if the emergency might affect your area. **Only SAME-compatible weather radios (such as this Weatheradio) are able to take advantage of this new technology.**

Each FIPS code identifies a specific geographic area (defined by the National Weather Service), so your Weatheradio sounds an alert only when a weather emergency is declared in that area. This helps you more efficiently track the weather conditions in and around your area.

WHEN A WEATHER ALERT OCCURS

When the Weatheradio receives a weather alert:

- it sounds an alert (siren or beep)
- a description of the alert appears



- an indicator on the front of the Weatheradio lights

Note: If the Weatheradio receives more than one weather alert at the same time, it displays information about each alert.

The alert descriptions your Weatheradio can display are based on a list of specific weather alert types published by the NWS. For a list of all the alert descriptions that your Weatheradio can display, see “NWS Weather Alert Descriptions” on Page 10.

Caution: The NWS uses sophisticated weather models to determine an alert’s effective time. However, the end of an alert does not necessarily mean that the related weather emergency is over.

New Alert Types

Your Weatheradio is designed to recognize all common weather alert types currently used by the NWS. However, the NWS occasionally creates and broadcasts *new* alert types (for which the Weatheradio's memory does not contain a specific, corresponding description). If your Weatheradio receives a signal for a new alert type, it is preset (if the alert function is turned on) to display **UNKNOWN**, the alert description (**EMERGENC**, **STATEMNT**, **WARNING**, or **WATCH**), and **TUNE TV**, then sound a siren alert.

NWS WEATHER ALERT DESCRIPTIONS

Your Weatheradio can display these NWS weather alert descriptions. For easy reference, this list also shows the type of alert (siren or beep) that sounds during each alert.

Weather/Alert Description	You See	You Hear
Avalanche warning	AVALANCH WARNING	Siren
Avalanche watch	AVALANCH WATCH	Siren

Weather/Alert Description	You See	You Hear
Blizzard warning	BLIZZARD WARNING	Siren
Civil danger warning	CIVIL DANGER WARNING	Siren
Civil danger watch	CIVIL DANGER WATCH	Siren
Civil emergency — turn on the TV for information or, if no information is available on TV, call your local NWS office	TUNE TV	Siren
Note: TUNE TV might also indicate the Weatheradio has received a signal for a condition not defined in the Weatheradio's memory (see "Testing the Alert Siren/ Display" on Page 33).		
Coastal flood warning	COASTAL FLOOD WARNING	Siren
Coastal flood watch	COASTAL FLOOD WATCH	Siren

Weather/Alert Description	You See	You Hear
Emergency action warning	EMERGENC ACTION WARNING	Siren
Emergency action termination	EMERGENC ACTION TERMINAT	Beeps
Evacuate immediately	EVACUATE IMMEDIAT	Siren
Fire warning	FIRE WARNING	Siren
Flash flood statement	FLASH FLOOD	Beeps
Flash flood warning	FLASH FLOOD WARNING	Siren
Flash flood watch	FLASH FLOOD WATCH	Siren
Flood statement	FLOOD	Beeps
Flood warning	FLOOD WARNING	Siren
Flood watch	FLOOD WATCH	Siren

Weather/Alert Description	You See	You Hear
Hazardous material warning	HAZARD MATERIAL WARNING	Siren
Hazardous material watch	HAZARD MATERIAL WATCH	Siren
High wind warning	HIGH WIND WARNING	Siren
High wind watch	HIGH WIND WATCH	Siren
Hurricane statement	HURRICAN	Beeps
Hurricane warning	HURRICAN WARNING	Siren
Hurricane watch	HURRICAN WATCH	Siren
Immediate evacuation warning	IMMEDIAT EVACUATE WARNING	Siren
Law enforcement warning	LAW ENFORCE WARNING	Siren

Weather/Alert Description	You See	You Hear
Local area emergency	LOCAL AREA EMERGENC	Siren
National information center	NATIONAL INFO CENTER	Siren
Periodic national test	NATIONAL PERIODIC TEST	Beeps
Practice/Demo	DEMO MESSAGE	Nothing
Radiological hazard warning	RADIOLOG HAZARD WARNING	Siren
Radiological hazard watch	RADIOLOG HAZARD WATCH	Siren
Required monthly test	MONTHLY TEST	Beeps
Required weekly test	WEEKLY TEST	Beeps
Severe thunderstorm warning	SEVERE THUNDER WARNING	Siren

Weather/Alert Description	You See	You Hear
Severe thunderstorm watch	SEVERE THUNDER WATCH	Siren
Severe weather statement	SEVERE WEATHER	Beeps
Shelter in-place warning	SHELTER IN-PLACE WARNING	Siren
Special marine warning	SPECIAL MARINE WARNING	Siren
Special weather statement	SPECIAL WEATHER	Beeps
Test message	TEST MESSAGE	Nothing
Tornado warning	TORNADO WARNING	Siren
Tornado watch	TORNADO WATCH	Siren
Tsunami warning	TSUNAMI WARNING	Siren
Tsunami watch	TSUNAMI WATCH	Siren


Weather/Alert Description	You See	You Hear
Unrecognized code ending in S	UNKNOWN STATEMENT TUNE TV	Siren
Unrecognized code ending in W	UNKNOWN WARNING TUNE TV	Siren
Unrecognized code ending in A	UNKNOWN WATCH TUNE TV	Siren
Unrecognized code ending in E	UNKNOWN EMERGENCY TUNE TV	Siren
Volcano warning	VOLCANO WARNING	Siren
Volcano watch	VOLCANO WATCH	Siren
Winter storm warning	WINTER STORM WARNING	Siren
Winter storm watch	WINTER STORM WATCH	Siren

Note: An authorized service center can add memory for up to 5 additional weather/alert descriptions to your Weatheradio's memory. Contact your local RadioShack store for more information.

UNDERSTANDING FIPS CODES

For the purpose of broadcasting weather information, the NWS has divided the United States into regions by state and county (or parish, where applicable) then assigned a 6-digit FIPS code to identify each county or parish. For example, the code for Tarrant County, Texas, is 048439.

The first digit in a FIPS code identifies the county subdivision, the next two digits identify the state, and the last three digits identify the county or parish.

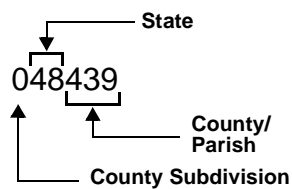

Note: Most FIPS codes begin with 0, which means the code represents an entire county. The NWS, however, plans to eventually subdivide some large counties. When that happens, each subdivision will be assigned a digit from 1–9, resulting in codes such as 148439, 248439, and so on.

Your Weatheradio can receive all SAME alert signals broadcast within about a 50-mile radius of where you installed it. To receive SAME alerts and broadcasts

about weather occurring only in particular counties within that area, you can program up to 15 FIPS codes into the Weatheradio's memory. For example, this lets you avoid hearing an alert that applies to an area within a 50-mile radius but not necessarily to your county or parish.

Obtaining Your Area's FIPS Code(s)

To obtain the FIPS code for the location where you installed your Weatheradio, contact your local RadioShack store or call the NWS toll free at 1-888-NWR-SAME (1-888-697-7263). If you call the NWS, follow the instructions you hear.

Note: If you are close to a county or parish line, you might want to obtain the codes for the nearby counties or parishes.

Hint: Since you can program up to 15 FIPS codes into the Weatheradio's memory, you might want to obtain the codes for other local areas that you frequently travel through (as long as those areas are within a 50 mile radius of your location and within an area covered by your local NWS broadcast station). That way, you can program those codes into the Weatheradio and receive broadcasts covering those locations, too.

PREPARATION

POWERING THE WEATHERADIO

Your Weatheradio uses standard AC power for normal operation and one 9V battery (not supplied) for backup power when AC power fails or is temporarily disconnected. For the best performance and longest life, we recommend a RadioShack alkaline battery.

Cautions:


- Use only a fresh battery of the required size and recommended type.
- Do not use a rechargeable battery in your Weatheradio.

Notes:


- A fresh backup battery will power the Weatheradio for up to 1 hour with the weather broadcast turned on, or up to 8 hours in alert standby mode (see "Using the Alert Function" on Page 36). However, we recommend you always connect the Weatheradio to AC power for normal use.
- If the backup battery becomes weak, your Weatheradio might not sound a tone when an emergency or test alert is broadcast. Test your radio's reception periodically (see "Testing the Weatheradio" on Page 31), and replace the battery if the tone does not sound.

Connecting the Weatheradio to AC Power

1. If the Weatheradio's display is on, rotate **VOLUME** to the right until it clicks to turn off the Weatheradio.

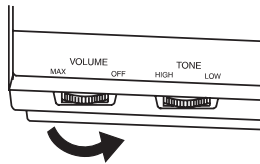


2. Plug the Weatheradio's power cord into a standard AC outlet.

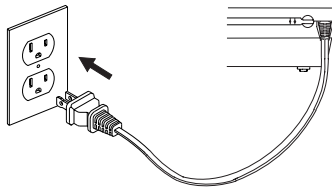


Caution: Your Weatheradio's power cord has a polarized plug (one blade is wider than the other). If you have difficulty inserting the plug into the outlet, do not force it! Turn the plug over and try again.

Installing the Backup Battery

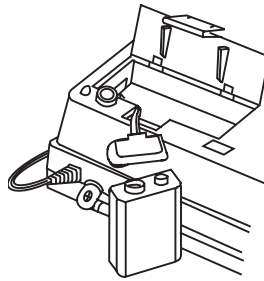

1. If the Weatheradio's display is on, rotate **VOLUME** to the right until it clicks to turn off the Weatheradio.
2. Press the tab on the battery compartment cover then lift up the cover to remove it.
3. Snap a 9V battery onto the battery terminals inside the compartment, then place the battery inside the compartment.
4. Replace the cover.

 When **REPLACE** then **BATTERY** appears, or the Weatheradio stops operating when it is unplugged from AC power, replace the battery.



Cautions:

 
- Dispose of an old battery promptly and properly. Do not burn or bury it.
- Always remove an old or weak battery. Batteries can leak chemicals that can destroy electronic parts.

Note: **REPLACE** then **BATTERY** also appears if no backup battery is installed and the Weatheradio is connected to AC power and then turned on.


USING THE BUILT-IN ANTENNA

The Weatheradio's built-in telescoping antenna lets you receive strong local signals. To use the built-in antenna, lift it up so it is vertical, then fully extend it.

To improve reception in remote areas, you can connect an external antenna to your Weatheradio using an optional adapter cable with a phono plug (available by special order from your local RadioShack store) to the Weatheradio's **EXT ANT** jack. Your local RadioShack store sells a wide variety of antennas.



To connect an external antenna to the Weatheradio, connect one end of the adapter cable to **EXT ANT** on the back of the Weatheradio then connect the other end to the antenna.

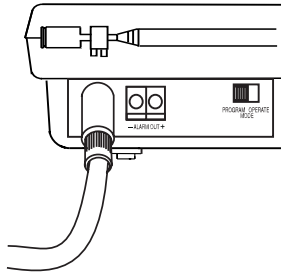

CHOOSING A LOCATION AND MOUNTING THE WEATHERADIO

You can set your Weatheradio on any flat surface (such as a shelf or counter top), or you can mount it on a wall using the supplied mounting bracket and two screws (not supplied) with heads that fit the key-hole slots on the mounting bracket.


For the best reception, place your Weatheradio where:

- it can receive alert signals (see “When a Test or Demo Alert Occurs” on Page 43)
- you can hear its alert tone (see “Setting the Alert Volume” on Page 37)


Note: Make sure the Weatheradio is away from obstructions such as metal cabinets or bookshelves. (Higher frequencies are noticeably affected by obstructions.) Do not place the Weatheradio near any metal surface such as a refrigerator, a metal door or wall, or a water pipe hidden behind a wall. This greatly reduces the Weatheradio's ability to receive signals.

Follow these steps to mount the Weatheradio on a wall.


1. Select a mounting location near an AC outlet and drill two holes $2\frac{1}{8}$ inches apart. Then thread a screw into each mounting hole until the head extends about $\frac{1}{8}$ inch from the wall.

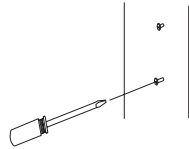

2. Insert the tabs on the bracket into the slots on the Weatheradio. Then, while making sure any cords connected to the Weatheradio are aligned with the cutouts in the bracket, press the bracket toward the Weatheradio until it clicks into place.

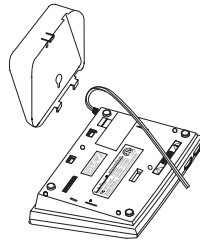

-
-
3. Align the keyhole slots in the mounting bracket with the screws on the wall. Then press the Weatheradio toward the wall then downward to secure it.

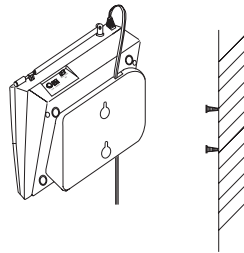

CONNECTING THE WEATHERADIO TO AN EXTERNAL SYSTEM

Your Weatheradio's **ALARM OUT** jacks let you connect it to an external module interface (Plug 'n Power or X-10, such as RSU 10037745) using twin-lead 20-gauge cable (not supplied). Then you can set the interface to indicate an alert (sound a buzzer or flash a light, for example) on a connected appliance when the Weatheradio receives a weather emergency alert broadcast.

Note: Your local RadioShack store carries a wide selection of cable and audible or visible alert accessories you can use with the recommended external module interface.


To connect your Weatheradio to an external system, connect the Weatheradio's positive (+) and negative (-) **ALARM OUT** quick-connect terminals to the corresponding (+ and -) terminals on the external system.

When the Weatheradio's alert function is turned on and it receives an NWS alert broadcast, the Weatheradio sends a 7.5VDC signal to the connected module interface, and an alert sounds on both the Weatheradio and the connected system.

To remove the wires you connected to your Weatheradio's **ALARM OUT** terminals, gently pull out the wires while using a pointed object such as a straightened paper clip to press the orange tabs under the wires.

PROGRAMMING THE WEATHERADIO

Note: Some of the Weatheradio's keys (such as **0–9**) are located under the cover on top of the Weatheradio. Slide off the cover to access the keys.

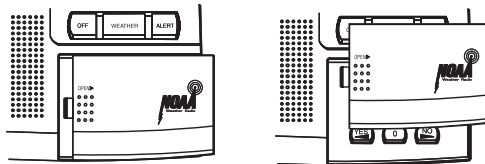


The first time you use your Weatheradio, it is automatically set to use the NOAA weather broadcast frequency 162.400 MHz (Channel 1) and receive all SAME alert signals broadcast within a 50-mile radius of where you installed it.


Your Weatheradio is preprogrammed to receive broadcasts for the FIPS code stored in its first memory location (called *single mode*), and is preprogrammed with the seven national NOAA broadcast frequencies (Channels 1–7). Depending on your location, you might need to set the Weatheradio to its *multiple mode* and select a different channel.

Follow these steps to select a different broadcast frequency and set the Weatheradio to its single or multiple mode (if necessary), and store or change FIPS codes in the Weatheradio's memory (to narrow the area for which you receive SAME alerts).


1. To turn on the Weatheradio, turn **VOLUME** to the left until it clicks.

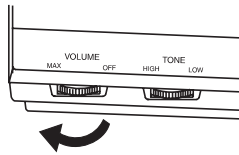

2. Set **MODE** to **PROGRAM**. The Weatheradio displays the last selected weather broadcast channel and frequency number.

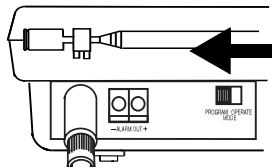

-
- Press **WEATHER** (if necessary) to turn on the weather broadcast, then rotate **VOLUME** so you can hear the broadcast as you make your selection.

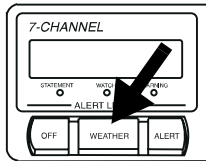

Note: If you do not press a key for about 45 seconds during Steps 4–8, the Weatheradio exits the programming mode and saves only those changes stored before the last keypress. To continue, set **MODE** back to **OPERATE**, then start over at Step 2.


- Press a number key (1–7) to listen to the broadcast on that channel. The Weatheradio displays the selected channel and its corresponding frequency.

Channel	Frequency (MHz)
1	162.400
2	162.425
3	162.450
4	162.475
5	162.500
6	162.525
7	162.550


Repeat this step until you find the channel broadcasting in your area.

Note: If you receive a NOAA broadcast on more than one channel, the one with the best reception *might not* be the one broadcasting information for your location. Contact your local RadioShack store or the NWS to find out which frequency NOAA is using to broadcast from the station nearest your location, then select that channel.

5. Press **YES** three times. The currently selected mode (**SINGLE** or **MULTIPLE**) appears.
6. To select the other setting (**SINGLE** or **MULTIPLE**), press **NO**.
7. Press **YES**. The FIPS code stored in the first memory location appears.

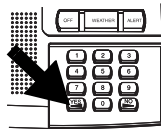

8. To change the code in the first memory location, press **NO**. _____ appears.

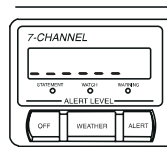

Or, to add or change a code in a different position, repeatedly press **YES** until you see the first unused memory location or the code you want to change, then press **NO**. _____ appears.

9. Use the number keys (**0–9**) to enter the 6-digit FIPS code you want to store.

Notes:

- If you make a mistake while entering the code, press **NO** to clear all digits (_____ reappears), then enter the correct digits.
 - To reset the Weatheradio to receive all SAME signals within a 50-mile radius, simply enter **99** in the first memory location (see “Using the Weatheradio’s ‘All Signals’ Code” on Page 41).
 - For easy reference, use a pencil to write down each FIPS code you store in memory on the supplied label. Then affix the label behind the Weatheradio’s keypad cover.
10. Press **YES** to store the code in the Weatheradio’s memory.

If you set the Weatheradio to its multiple mode, the code (if any) stored in the next memory position appears. Repeat Steps 7–9 for each code (up to 15) you want to change or add.

Note: When you press **YES** to store a code in the last (15th) memory position, weather alert

descriptions appear (see “NWS Weather Alert Descriptions” on Page 10).

11. When you finish, set **MODE** to **OPERATE**. The current alert status appears (see “Using the Alert Function” on Page 36).

TESTING THE WEATHERADIO

For your Weatheradio to be effective, you must place it where it can receive an emergency alert broadcast and where you can hear its alert tone.

In the United States, the NWS broadcasts a test alert every week on Wednesday between 11 AM and 1 PM. To find out the specific test schedule in your area, contact your local NOAA or NWS office. These offices are usually listed in the telephone book under “US Government, Department of Commerce.”

Important: The fact that you get clear reception of a weather broadcast signal does *not* guarantee that an emergency alert broadcast will trigger your Weatheradio’s alert function. Be sure you choose the proper location for the Weatheradio (see “Choosing a Location and Mounting the Weatheradio” on Page 23) and regularly check the Weatheradio to be sure it is operating properly (see “When a Test or Demo Alert Occurs” on Page 43).

Manually Testing the Alert Tone


To manually test the Weatheradio's alert tone, turn off the Weatheradio, hold down **OFF**, turn on the Weatheradio by turning **VOLUME** to the left until it clicks, then release **OFF** and press **ALERT**. The Weatheradio sounds the alert tone. Then, as the tone sounds, walk around the area where you keep the Weatheradio to make sure you can hear the tone.

Important Notes:

- To make sure your Weatheradio will sound the alert tone when it receives an emergency signal, always keep the built-in antenna fully extended (unless you connected an external antenna).
- Testing the alert tone only ensures that the Weatheradio's alert tone can be heard. It does not test the Weatheradio's receiver or guarantee you will receive an emergency alert.
- If the Weatheradio does not sound an alert tone, you are either out of range of the broadcast or the backup battery is weak.
- An emergency alert broadcast might not trigger your Weatheradio's alert tone, even if it receives voice transmissions clearly or if the alert tone sounds when you manually test it. Also, if you are in a fringe area, your Weatheradio might be triggered by a broadcast when it is placed in one area, but not be triggered if you place it somewhere else (even close by).

Testing the Alert Siren/Display

1. Turn off the Weatheradio.
2. While holding down **OFF**, turn **VOLUME** to the left until it clicks to turn on the Weatheradio. **TESTMODE** appears.

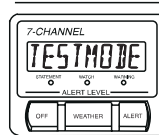

3. Press a number key to select the desired setting. The Weatheradio tunes to the corresponding channel, and one of the following appears.

You Press:	The Weatheradio Displays:
1	CH. 1
2	CH. 2
3	CH. 3
4	CH. 4
5	CH. 5
6	CH. 6
7	CH. 7
8	DEFAULT (reset to default)

You Press:	The Weatheradio Displays:
9	DEMO ON or DEMO OFF (the Weatheradio's demo mode)

Your Weatheradio can also perform these test functions while **TESTMODE** appears:

- If you press **ALERT**, the Weatheradio continuously sounds its alert siren. Press **ALERT** again to turn off the siren.
 - If you press **YES**, **STATEMENT**, **WATCH**, and **WARNING** light at the same time.
 - If you press **NO**, **STATEMENT**, **WATCH**, and **WARNING** turn off at the same time.
 - If you press **WEATHER**, all display characters appear at the same time.
4. Turn **VOLUME** toward off until it clicks to turn off the Weatheradio and store your selection. Then turn it back on to begin using the new setting.

OPERATION

To turn on the Weatheradio, turn **VOLUME** to the left until it clicks. **WEATHER** then **ALRT** (alert) **ON** appears.



Note: **VOLUME** also controls the Weatheradio's audio broadcast volume. To set the alert volume, see "Setting the Alert Volume" on Page 37.

To listen to a weather broadcast, see "Listening to a Weather Broadcast."


To have the Weatheradio sound an alert, see "Using the Alert Function" on Page 36.

To turn off the Weatheradio, rotate **VOLUME** to the right until it clicks and the display clears.

LISTENING TO A WEATHER BROADCAST


Your Weatheradio is preprogrammed with the seven NOAA weather broadcast frequencies (Channels 1–7). To select a frequency broadcast in your area, follow Steps 2–4 and 9 in "Programming the Weatheradio" on Page 26.

To listen to a weather broadcast, make sure **MODE** is set to **OPERATE**, press **WEATHER**, then adjust **VOLUME** to the desired listening level. To turn off the weather broadcast, press **WEATHER** again.

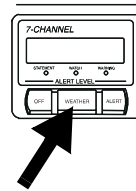

USING THE ALERT FUNCTION

To set the Weatheradio to sound an alert when the NWS broadcasts a warning, watch, or statement, hold down **ALERT** for 2 seconds until **WEATHER** then **ALRT ON** appears. The Weatheradio beeps once.

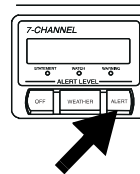


Notes:

- If you programmed more than one FIPS code into memory, be sure the Weatheradio is set to its multiple mode (see Steps 5 and 6 under “Programming the Weatheradio” on Page 26). Otherwise, the Weatheradio will only receive broadcasts for the FIPS code you stored in the first memory position.
- If severe weather threatens, do not wait for an alert tone; turn on the weather broadcast and monitor the weather information.

To set the Weatheradio so it does not sound an alert, hold down **ALERT** for 2 seconds until **WEATHER ALRT OFF** appears. The Weatheradio beeps twice.

Setting the Alert Volume

To set your Weatheradio's alert volume, turn on the alert tone (see "Manually Testing the Alert Tone" on Page 32), then rotate **TONE** toward **HIGH** to increase the volume or toward **LOW** to decrease it.

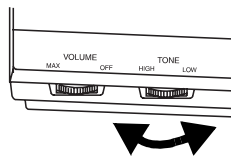

We recommend you set the alert volume to the highest volume setting, then decrease it as needed.

Changing/Checking the Alert Pattern

You can set the Weatheradio to respond to an NWS alert broadcast in one of two ways.

VOICE — the Weatheradio sounds an alert for about 8 seconds, then automatically turns on the weather (voice) broadcast for 5 minutes. Then it returns to standby mode. It also displays the alert description (such as **TORNADO WARNING**) until the alert's effective time received as part of the NWS broadcast code expires. An alert could be in effect for several hours.

(Continuous) ALERT — the Weatheradio sounds an alert and displays an alert description until the alert's effective time expires. To turn off the alert sooner, press **OFF**. To turn on the NWS voice broadcast, press **WEATHER**.


Note: When the Weatheradio's alert ends or you turn it off, you hear the NWS alert tone (which sounds different than the Weatheradio's tone) for a few seconds before you hear the voice broadcast.

The Weatheradio automatically selects the **ALERT** setting the first time you turn it on. To change the alert pattern setting (or check which setting is currently selected), follow these steps.

1. Set **MODE** to **PROGRAM**.

Note: If you do not press a key for about 45 seconds during Steps 2–4, the Weatheradio exits the programming mode without storing any change. To continue, set **MODE** back to **OPERATE**, then start over at Step 1.

2. Press **YES** once. The currently selected alert pattern (**VOICE** or **ALERT**) appears.

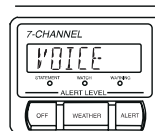

3. To select the other setting (**VOICE** or **ALERT**), press **NO**. The setting you selected appears.

-
-
4. Press **YES** again to store your selection, then set **MODE** to **OPERATE**. The current alert status (**WEATHER ALRT ON** or **WEATHER ALRT OFF**) appears.

Enabling/Disabling Alert Tones

You can turn on or off the alert tone for certain weather alert types received by your Weatheradio. For example, you can turn off the alert tone for a volcano warning if you do not live near a volcano.

Notes:

- The Weatheradio still detects and displays information about alerts even after you disable the tone for those alerts.
- If you set the Weatheradio so it turns itself on when it receives a specific warning, disabling the alert tone for that warning means that the Weatheradio will not turn itself on when it receives that warning.

You can set the Weatheradio so it does not sound an alert tone during *only* the following types of alerts:

Avalanche Warning	Avalanche Watch
Blizzard Warning	Coastal Flood Warning
Coastal Flood Watch	Flash Flood Statement

Flash Flood Warning	Flash Flood Watch
Flood Statement	Flood Warning
Flood Watch	High Wind Warning
High Wind Watch	Hurricane Statement
Hurricane Watch	Practice/Demo
Required Monthly Test	Severe Thunderstorm Watch
Severe Weather Statement	Special Marine Warning
Special Weather Statement	Test Message
Unknown Statement	Unrecognized code ending in S
Volcano Warning	Volcano Watch
Winter Storm Warning	Winter Storm Watch

Follow these steps to enable or disable alert tones.

1. Set **MODE** to **PROGRAM**.

Note: If you do not press a key for about 45 seconds during Steps 2–4, the Weatheradio exits the programming mode without storing any change. To continue, set **MODE** back to **OPERATE**, then start over at Step 1.

-
-
2. When your Weatheradio displays weather alert information for an alert type you want to change, press **YES** to enable the alert tone (if the tone is not already sounding) or **NO** to disable it (if the tone is sounding).

When there are no more alerts being displayed, **SELECT CHECK** appears.

3. To view each alert type, repeatedly press **YES**. The alert type and **ON** (if the alert is turned on) or **OFF** (if the alert is turned off) appears.
4. To resume normal operation, set **MODE** to **OPERATE**.

Using the Weatheradio's 'All Signals' Code

Your Weatheradio is preset to use a default "all signals" code of 99, which lets it receive any weather alert broadcast within the Weatheradio's reception range (about a 50-mile radius in most locations). This code is preset in the Weatheradio's first memory location.

To set the Weatheradio to respond only to specific NWS FIPS codes you select, choose the codes (as many as 15) you want to program (see "Understanding FIPS Codes" on Page 17 and "Obtaining Your Area's FIPS Code(s)" on Page 18), program those codes into memory locations 2–15, and set the Weatheradio to its multiple mode (see Steps 5 and 6 under "Programming the Weatheradio" on Page 26).

To reset the Weatheradio to use the “all signals” code again, follow the steps under “Programming the Weatheradio” on Page 26, setting the Weatheradio to its single mode in Steps 5 and 6, and storing 99 in the first memory position in Step 9.

Reviewing Overlapping Alerts

Your Weatheradio can store up to three different alerts (with overlapping effective times) in its memory. If the Weatheradio receives a new alert while a previous alert is still in effect, it automatically displays the alert description and sounds the new alert.

To scroll forward or backward through the Weatheradio’s memory and review all effective alerts, press **NO** (to scroll forward) or **YES** (to scroll backward).

Notes:

- The Weatheradio sounds a high-pitched tone if you try to scroll past the first or last alert in memory. To continue, press **YES** to begin scrolling in the opposite direction.
- If the Weatheradio receives a new alert while three previous alerts are still in effect, it stores the newest alert and clears the oldest alert from memory.

When a Test or Demo Alert Occurs

The NWS sends out weekly test signals you can use to confirm that your Weatheradio is working properly. To find out the specific test schedule in your area, contact your local NOAA or NWS office. Those offices are usually listed in the telephone book under *US Government, Department of Commerce*.

When the Weatheradio's alert function is turned on and the Weatheradio receives a test broadcast for a FIPS code you programmed into its memory, it responds in one of these ways:

NWS Alert Type	You See	You Hear
Demo Message (sent at random times)	Demo Message	No sound
Required Weekly SAME Test	Weekly Test	Beeps
Required Monthly SAME Test	Monthly Test	Beeps

Note: The Weatheradio does not turn on an indicator during a test/demo broadcast.

If your Weatheradio is turned on and properly set but it does not respond to a test broadcast, see "Troubleshooting" on Page 45.


USING THE BACKLIGHT

Your Weatheradio's backlight automatically turns on while you listen to the weather broadcast and for about 10 seconds each time you press a key. For extended use in low light situations, you can set the backlight so it remains on until you turn it off.

Note: You can turn on your Weatheradio's backlight so it stays on continuously *only* if the Weatheradio is connected to AC power.

Follow these steps to turn the backlight on or off.

1. Set **MODE** to **PROGRAM**.
2. Within 45 seconds, press **YES** twice so **CONTINUO** (continuous) and **BACKLITE** alternately flash on the display, then press **YES** to turn on continuous backlight or **NO** to turn it off.

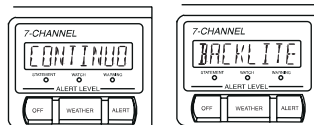

Note: If you do not press a key for about 45 seconds, the Weatheradio automatically exits the programming mode. Set **MODE** back to **OPERATE**, then start over at Step 1.

3. Set **MODE** to **OPERATE**.

TROUBLESHOOTING

If your Weatheradio is not working as it should, these suggestions might help you eliminate the problem. If the Weatheradio still does not operate normally, take it to your local RadioShack store for assistance.

Problem(s)	Suggestion(s)
No power.	Make sure the Weatheradio is connected to AC power and a backup battery is installed (if AC power has failed). See "Powering the Weatheradio" on Page 19.
No sound.	Adjust VOLUME or ALERT TONE . See "Reviewing Overlapping Alerts" on Page 42 or "Setting the Alert Volume" on Page 37.
Multiple FIPS codes are stored, but the Weatheradio only responds to weather alert broadcasts for one code.	Make sure the Weatheradio is set to its multiple mode (see Steps 5 and 6 under "Programming the Weatheradio" on Page 26).
One or more FIPS codes are stored in memory, but the radio responds to weather alert broadcasts for areas <i>not</i> covered by those codes.	Make sure the Weatheradio's all-signals code (99) is not stored in memory. See "Using the Weatheradio's 'All Signals' Code" on Page 41.

Problem(s)	Suggestion(s)
<p>No weather broadcast when you press WEATHER.</p>	<p>Make sure the telescoping antenna is fully extended. See "Using the Built-In Antenna" on Page 22.</p>
	<p>If you connected an external antenna, make sure that it is connected properly and the telescoping antenna is lowered. See "Using the Built-In Antenna" on Page 22.</p>
	<p>Make sure the Weatheradio is set to the NOAA channel that is being broadcast in your area. See "Programming the Weatheradio" on Page 26.</p>
<p>The Weatheradio's continuous alert tone sounds intermittent or seems to warble.</p>	<p>The Weatheradio constantly monitors the channel you set it to, even while it is sounding a continuous alert. Each time the Weatheradio receives a signal on that channel, it pauses very briefly to compare that signal against those stored in its memory. If the Weatheradio pauses frequently (depending on how often it receives a signal), it might make the Weatheradio's continuous alert tone sound intermittent. This is not a malfunction.</p>

Problem(s)	Suggestion(s)
<p>The radio is not responding properly to NWS weather alert broadcasts.</p>	<p>Make sure you programmed the correct FIPS code(s) into the Weatheradio's memory. See "Programming the Weatheradio" on Page 26.</p>
	<p>Make sure WEATHER ALERT ON appears. If not, press ALERT. See "Using the Alert Function" on Page 36.</p>
	<p>Make sure MODE is set to OPERATE.</p>
	<p>Make sure the Weatheradio is set to receive new alert types. See "Testing the Alert Siren/Display" on Page 33.</p>
<p>CHECK OP (check operation) appears.</p>	<p>The Weatheradio has not received any type of SAME alert signal (including test or demo signals) for about one week. Make sure the FIPS code(s) stored in memory are correct. See "Programming the Weatheradio" on Page 26.</p>
	<p>Make sure the telescoping antenna is fully extended or the external antenna (if any) is properly connected. See "Using the Built-In Antenna" on Page 22.</p>

CARE AND MAINTENANCE

Your RadioShack 7 Channel WRSAME Weatheradio is an example of superior design and craftsmanship. The following suggestions will help you care for your Weatheradio so you can enjoy it for years.



Keep the Weatheradio dry. If it gets wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.



Use and store the Weatheradio only in normal temperature environments. Temperature extremes can shorten the life of electronic devices, damage batteries, and distort or melt plastic parts.



Keep the Weatheradio away from dust and dirt, which can cause premature wear of parts.



Handle the Weatheradio gently and carefully. Dropping it can damage circuit boards and cases and can cause the Weatheradio to work improperly.



Use only a fresh battery of the required size and recommended type. Batteries can leak chemicals that damage your Weatheradio's electronic parts.



Wipe the Weatheradio with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the Weatheradio.

Modifying or tampering with the Weatheradio's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If your Weatheradio is not performing as it should, take it to your local RadioShack store for assistance.

THE FCC WANTS YOU TO KNOW

Your Weatheradio might cause TV or radio interference even when it is operating properly. To determine whether your Weatheradio is causing the interference, turn off your Weatheradio. If the interference goes away, your Weatheradio is causing it. Try to eliminate the interference by:

- moving your Weatheradio away from the TV or radio
- contacting your local RadioShack store for help

SPECIFICATIONS

Frequency Coverage (MHz):

Channel 1	162.400
Channel 2	162.425
Channel 3	162.450
Channel 4	162.475
Channel 5	162.500
Channel 6	162.525
Channel 7	162.550

Receiving Sensitivity (at 12 dB SINAD) 0.3 μ V

FIPS Code Sensitivity

@ \pm 3 kHz Deviation/90% Success Rate 0.3 μ V

Signal to Noise Ratio 40 dB

Dual Tone Detection Range 1.2 to 2.4 kHz

Channel Selectivity \pm 25 kHz, 60 dB

Power Output (Maximum) 250 mW

Power Supply 120 Volts, 60 Hz, 5 Watts AC

Battery Back-up One 9-Volt Battery
(Cat. No. 23-553)

Antenna Telescoping Rod Antenna

Dimensions (HWD) $7^{1/20} \times 5^{1/2} \times 1^{17/20}$ Inches
(179 \times 140 \times 47 mm)

Weight 20.28 oz
(575 g)

Specifications are typical; individual units might vary.
Specifications are subject to change and improvement without notice.

NOTES

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

04/99