

## Tech Resource Online

Working together so we all get home on time.

[Home](#) » [Guides](#) » 63

[Go Back](#)

# Vista 20P Programming Cheat Sheet

## Ademco Vista 20-P

### Base programming with or without monitoring

Enter Programming	Installer Code + 8 + 00 (default 4112)
Reset / Initialize	*97 *96
*20 Installer Code	enter company installer code
*56 Zone Programming	See Manual for Zone Programing Page 19
*190 To Enable KP Address 17	1,0 1st digit = Partition, See manual for audio opt
*191-196 For KP address 18-23	Same as above
*21 Quick Arm Enable	1,0
*33 Alarm (Bell) Timeout	1
*34 Exit Delay	60
*35 Entry Delay	30
*37 Audible Exit Warning	1,1
*39 Power up previous state	1
*77 DST Month Start / End	3,11
*78 DST Weekend Start / End	2,1
*84 Auto Stay Arm Disable	0
*86 Alarm Cancel Display	0
*88 Program Lockout Mode	0
*91 Option Selection	8,1
*92 Phone Line Monitoring	0,0
*189 AUI Enable	1,1,1,1
*197 Exit Time Display	1
*199 ECP Fail Display	0
<b>If Monitored</b>	

*43	Primary Account Number	Last four digits only
*44	Second Account Number	Enter 2nd ACCT # if available
*48	Report Format	7,7
*50	Burglar Dialer Delay	0
*60	Trouble Report Code	10
*61	Bypass Report Code	10
*63	Low Batt Report Code	10
*64	Test Report Code	10
*67	RF Trans Low Batt Report Code	10
*68	Cancel Report Code	10
<b>Continue If Monitored</b>		
*70	Alarm Restore Code	1
*71	Trouble Restore Report Code	10
*74	Low Batt Restore Report Code	10
*75	RF Low Batt Restore Report Code	10
*76	Test Restore Report Code	10
*93	Reports in Armed Period	2
<b>If Monitored by Phone</b>		
*41	Primary Phone Number	Use Primary 800 monitoring center phone #
*42	Second Phone Number	Use 2nd monitoring phone number #
*92	Phone Line Monitoring	Residential 1,1 / Commercial 1,2 / If Radio Only 0,0
*94	Download Information	phone number for downloader (Add 1 for long distance)
*95	Ring Count	#15
<b>If Using Radio</b>		
*29	Enable IP/GSM	1,*,*
*54	Dynamic Signaling Delay	0
*55	Dynamic Signaling Priority	1
*91	Option Selection	8,2
<b>Residential Only</b>		
*21	Quick Arm Enable	1,0
*23	Quick (Forced) Bypass	1,0
<b>Commercial (If Monitored)</b>		

\*62 AC Restore Report Code 10

---

\*73 AC Restore Report Code 10

---

**ALL SYTEMS IF YOU WISH TO USE FUNCTION BUTTONS - No response unless monitored**

---

\*56 Zone Programming Program Zone 95 as type 09, Zone 96 as Type 08, Zone 99 as Type 06 for commercial (silent response) or 07 for residential (sirens will go off within system)

---

\*57 Assign KP Function Buttons A - Zone 95 (Fire), B - Zone 99 (Police), C - Zone 96 (Medical)

---

**Exit Programming**

---

\*99 Exit Programming, Allowing re-entry with installer code

---

Set Clock - Enter Installer Code + #63 + \* to move forward, # to move back, 1-pm, 2-pm (always 2 digits)

---

Change Master User Code - "Current Code" + 8,0,2 + "New code" + "New Code"

---

## Support Files

[Vista 20P Programming Guide- Master SSNW.pdf](#)

Manufacturer

[Honeywell](#)

Model

[Vista 20P](#)

Tags

[Form](#)

Product Type

[Burglar Alarm](#)