

# genie App

User Manual



October 2015 202-11496-02

350 East Plumeria Drive San Jose, CA 95134 USA



#### Support

Thank you for purchasing this NETGEAR product. You can visit *www.netgear.com/support* to register your product, get help, access the latest downloads and user manuals, and join our community. We recommend that you use only official NETGEAR support resources.

#### Conformity

For the current EU Declaration of Conformity, visit http://kb.netgear.com/app/answers/detail/a\_id/11621.

#### Compliance

For regulatory compliance information, visit *http://www.netgear.com/about/regulatory*.

See the regulatory compliance document before connecting the power supply.

#### Trademarks

© NETGEAR, Inc., NETGEAR and the NETGEAR Logo are trademarks of NETGEAR, Inc. Any non-NETGEAR trademarks are used for reference purposes only.

## Contents

#### Chapter 1 Getting Started

Router Requirements
Install the NETGEAR Desktop genie App on a Computer
Install the NETGEAR Mobile genie Apps on Smartphones and Tablets 8
Install the Android Mobile genie App 9
Install the iOS Mobile genie App
Manage the Desktop genie App Settings For Windows Computers
Enable or Disable Autostart
Show or Hide Network Connectivity Change
Manage Your Router Locally Using the genie App 10
Log In to Your Router Locally Using the Desktop genie App
Log In to Your Router Locally Using the Android Mobile genie App 12
Log In to Your Router Using the iOS Mobile genie App
View Information About the genie App and the Router
View Information about the Windows desktop genie App
View Information about the Mac Desktop genie App
View Information About the Android Mobile genie App
View Information About the iOS Mobile genie App

#### Chapter 2 Manage Your Internet Connection

Perform a Speed Test Using the Desktop genie App       20         Fix an Internet Connection Problem Using the Desktop genie App       21         Set Up Traffic Meter Locally       22         Set Up the Traffic Meter Locally Using the Desktop genie App       22         Set Up the Traffic Meter Locally Using the Android Mobile genie App       24         Set Up the Traffic Meter Using the iOS Mobile genie App       25		Monitor Your Internet Connection Using the Desktop genie App	20
Set Up Traffic Meter Locally       22         Set Up the Traffic Meter Locally Using the Desktop genie App.       22         Set Up the Traffic Meter Locally Using the Android Mobile genie App.       24		Perform a Speed Test Using the Desktop genie App	20
Set Up the Traffic Meter Locally Using the Desktop genie App 22 Set Up the Traffic Meter Locally Using the Android Mobile genie App 24		Fix an Internet Connection Problem Using the Desktop genie App	21
Set Up the Traffic Meter Locally Using the Android Mobile genie App 24	1	Set Up Traffic Meter Locally	22
		Set Up the Traffic Meter Locally Using the Desktop genie App	22
Set Up the Traffic Meter Using the iOS Mobile genie App		Set Up the Traffic Meter Locally Using the Android Mobile genie App	24
		Set Up the Traffic Meter Using the iOS Mobile genie App	25

#### Chapter 3 Manage Your WiFi Network

Manage WiFi Connections	. 28
Connect to a WiFi Network Using the Desktop genie App	28
Specify the Preferred Network Using the Desktop genie App	28
View the WiFi Channel Usage in Your Area Using the Desktop genie App	29
Change the WiFi Channel Using the Desktop genie App	29
Change the Router WiFi Settings Locally	30
Change the Router WiFi Settings Using the Desktop genie App	31
Change the Router WiFi Settings Using the Android Mobile genie App	32
Change the Router WiFi Settings Using the iOS Mobile genie App	33
Export Router WiFi Settings to a USB Device Using the Desktop genie App	35

#### NETGEAR genie App

View the Network Map Locally
View the Network Map Locally Using the Desktop genie App
View the Network Map Locally Using the Android Mobile genie App 38
View the Network Map using the iOS Mobile genie App
Modify Device Information in the Network Map Locally
Modify Device Information Locally Using the Desktop genie App
Modify Device Information Locally Using the Android Mobile genie App 43
Modify Device Information Locally Using the iOS Mobile genie App 45
Block or Allow Network Access Locally
Block or Allow Network Access Using the Desktop genie App
Block or Allow Devices Network Access Using the Android Mobile genie App49
Block or Allow Devices Network Access Using the iOS Mobile genie App 51
Set Up Parental Controls Locally
Enable or Disable Parental Controls Locally
Enable or Disable Parental Controls Using the Desktop genie App 62
Enable or Disable Parental Controls Using the Android Mobile genie App 62
Enable or Disable Parental Controls Using the iOS Mobile genie App63
Create a Bypass Account Using the genie App
Create a Bypass Account Using the Desktop genie App 64
Create a Bypass Account Using the Android Mobile genie App
Create a Bypass Account Using the iOS Mobile genie App
Set Parental Controls Filtering Levels Locally for Each Device
Set the Parental Controls Filtering Level Using the Desktop genie App 68
Set the Parental Control Filtering Level Using the Android Mobile genie App69
Set the Parental Control Filtering Level Using the iOS Mobile genie App 72
Set Up a Guest WiFi Network Locally
Set Up a Guest WiFi Network Locally Using the Desktop genie App 75
Set Up a Guest WiFi Network Locally Using the Android Mobile genie App 78
Set Up a Guest WiFi Network locally Using the iOS Mobile genie App 79
Connect to a WiFi Network Locally Using a QR Code
Display the WiFi Network QR Code
Display the WiFi Network QR Code on the Desktop genie App
Display the WiFi Network QR Code on the Android Mobile genie App84
Display the WiFi Network QR Code on the iOS Mobile genie App
Scan a WiFi Network QR Code Using Mobile genie App 86

#### Chapter 4 Remotely Access Your Router

Manage Your Home Network Remotely Using the genie App	89
Create a Remote Access Account	90
Create a Remote Access Account Using the Windows Desktop genie App .	90
Create a Remote Access Account Using the Android Mobile genie App	91
Create a Remote Access Account Using the iOS Mobile genie App	92
Register Your Router with your Remote Access genie Account	94
Register Your Router Using the Windows Desktop genie App	94
Register Your Router Using the Android Mobile genie App	95
Register Your Router Using the iOS Mobile genie App	
Remotely Access Your Router Using the genie App 1	00

Remotely Access Your Router from a Windows Computer	100
Remotely Access Your Router from an Android Mobile Device	102
Remotely Access Your Router from an iOS Device.	103
Remote Access Troubleshooting	106

#### Chapter 5 Share Files

Access Files on a USB Storage Device Attached to the Router
Access Files on a USB Storage Device Using the Desktop genie App110
Access Files on a USB Storage Device Using the Android Mobile genie App11
Access Files on a USB Storage Device Using the iOS Mobile genie App 112
Send Files With Turbo Transfer114
Send Files With Turbo Transfer Using the Desktop genie App114
Send Files With Turbo Transfer Using the Android Mobile genie App 116
Send Files With Turbo Transfer Using the iOS Mobile genie App 118
Enable or Disable the Turbo Transfer Power Saving Feature
Enable or Disable Turbo Transfer Power Saving On an Android Device 119
Enable or Disable Turbo Transfer Power Saving On an iOS Device120
View Turbo Transfer History121
View Turbo Transfer History Using the Mobile genie App for Android 121
View Turbo Transfer History Using Mobile genie App for iOS123

#### Chapter 6 Use MyMedia to Play and Share Media Files

Use Your Device to Play Media From Your Home Network	126
Play Media From Your Home Network on a Computer	
Play Media From Your Home Network on an Android Device	
Play Media on an iOS Device	
Share Media With Chromecast Using the Mobile genie App	
Share Media With Chromecast Using an Android Device	
Share Media With Chromecast Using an iOS Device	
MyMedia Views	
Change the MyMedia Player	
Change the MyMedia Player on a Computer	133
Change the MyMedia Player on an Android Device	134
Change the MyMedia Player on an iOS Device	134
Restart MyMedia Service on Mobile Devices	135
Restart MyMedia Service Using an Android Device	135
Restart MyMedia Service Using an iOS Device	136
Refresh the MyMedia Source Folders on Mobile Devices	138
Refresh the MyMedia Source Folders Using an Android Device	138
Refresh the MyMedia Source Folder Using an iOS Device	139
Allow Devices on the Network to Access Files	141
Allow Devices to Access Files on a Computer	141
Allow Devices to Access Files on an Android Device	142
Allow Devices to Access Files on an iOS Device	143
Allow Media Files to Play on Your Device	145
Allow Media Files to Play on Your Computer	145
Allow Media Files to Play on Your Android Device	146

Allow Media Files to Play on Your iOS Device	. 147
Change the Media File Settings Using the Desktop genie App	. 149
Change the Video File Settings Using the Desktop genie App	. 149
Change the Audio File Settings on the Using the Desktop genie App	. 151
Change the Image File Settings Using the Desktop genie App	. 153

#### Chapter 7 Set Up an AirPrint Printer Using the genie App

Set Up an AirPrint Printer Using the Desktop genie App	157
Print from an iOS Device Using AirPrint.	158

#### Chapter 8 View WiFi Analytics Using the Android Mobile genie App

View the WiFi Signal Strength	161
Test the WiFi in Different Rooms in Your Home	161
View the Network Status	162
View Channel Interference	163
View a Channel Graph	164
View a WiFi Signal Graph	165

#### Chapter 9 Administration and Troubleshooting

Register Your Product	
Register Your Product Using the Desktop genie App	
Register Your Product Using the Android Mobile genie	
Register Your Product Using the iOS Mobile genie App	
Update the Router Firmware Locally Using the Desktop genie	
Update the genie App	
Update the Desktop genie App	
Update the Android Mobile genie App	
Update the IOS Mobile genie App	
Reboot the Router Locally	
Reboot the Router Locally Using the Desktop genie App	
Reboot the Router Using the Android Mobile genie App	
Reboot the Router Using the iOS Mobile genie App	
Run a Ping Test Using the Desktop genie	177
Run the Trace Route Utility Using the Desktop genie App	
Perform a DNS Lookup Using the Desktop genie App	
View a Computer Profile Using the Desktop genie App	
View FAQs About the genie App Using the Desktop genie App	
Get Network Support Using the Desktop genie App	

## **Getting Started**

NETGEAR provides free desktop and mobile genie apps that let you manage your router. This manual guides you through the installation and setup procedures for both types of genie apps.

This chapter covers the following topics:

- Router Requirements
- Install the NETGEAR Desktop genie App on a Computer
- Install the NETGEAR Mobile genie Apps on Smartphones and Tablets
- Manage the Desktop genie App Settings For Windows Computers
- Manage Your Router Locally Using the genie App
- View Information About the genie App and the Router

To find out which desktop and mobile platforms are supported and get the downloads, visit the NETGEAR genie website at *http://www.netgear.com/genie.* 

For more information about NETGEAR product support, visit the support website at *http://support.netgear.com*.

Note that the images used in this manual were taken using the following versions of the genie app:

- Windows desktop genie app version 2.4.16
- Android mobile genie app version 2.4.20
- iOS mobile genie app version 2.5.18

### **Router Requirements**

To view a list of routers that can be managed using the genie app, visit *http://www.netgear.com/landing/en-us/netgear-genie-routers.aspx*.

The router in this user manual is the Nighthawk AC1900 Smart WiFi Router Model R7000 running firmware version 1.0.4.30.

### Install the NETGEAR Desktop genie App on a Computer

The desktop genie apps run on Windows XP SP3, Windows Vista, Windows 7, Windows 8, Windows 10, and Mac OS 10.6 or later.

You can use the genie desktop apps to do the following:

- Automatically repair common WiFi network problems.
- Get easy access to router features like parental controls, guest access, broadband usage meter, speed test, AirPrint compatibility, and more.
- Use the network map to view all the devices on your home network.

**Note:** To manage your router settings with genie app, you might need to update to new router firmware when it is available.

#### > To download the desktop genie app on your computer:

- 1. Visit the NETGEAR genie web page at www.NETGEAR.com/genie.
- 2. Click the appropriate **Download** button.

When you download and install the genie app, it starts automatically. If you want to use the genie app later, click the icon on your desktop or in the Windows taskbar.

## Install the NETGEAR Mobile genie Apps on Smartphones and Tablets

The mobile apps run on Android and iOS mobile devices like phones and tablets. You can see which smart devices are currently supported by visiting the *NETGEAR genie web page*.

You can use genie apps to do the following:

- Manage WiFi settings and guest access for your home network.
- Use Turbo Transfer to send and receive files in the network
- With ReadySHARE, share files on a USB storage device connected to your router
- Set up or manage parental controls.
- Use the traffic meter to check your Internet usage.
- With My Media, play media on devices on your network.

To use a mobile app, you need a WiFi connection from your Android or iOS device to your NETGEAR home network.

You can use the Apple App Store or the Google Play Store to download the genie app on your mobile device. You can also use the following QR codes to get to the app stores directly:



#### Install the Android Mobile genie App

- > To install the mobile genie app on an Android device:
  - 1. Open Google Play and search for NEGEAR genie.
  - 2. Tap the **INSTALL** button.
  - 3. Tap the **ACCEPT** button to accept any terms.

The genie app installs on your Android device.

4. To open the genie app, tap **OPEN**.

#### Install the iOS Mobile genie App

- > To install the mobile genie app on an iOS device:
  - 1. Open the App Store and search for NETGEAR genie.
  - 2. Tap GET > INSTALL.

The app installs on your iOS device.

3. To open the genie app, tap **OPEN**.

### Manage the Desktop genie App Settings For Windows Computers

The desktop genie app for Windows computers allows you to enable the app to start when you computer starts and show the network connectivity change.

#### **Enable or Disable Autostart**

You can set the genie app to automatically start when your Windows computer turns on. If you do don't wand the genie app to start, you can disable autostart.

- > To enable or disable autostart for the Windows desktop genie app:
  - 1. Right-click the genie app icon in your system tray.



- 2. Select Settings.
- 3. To enable autostart, select Enable Autostart.
- 4. To disable autostart, deselect Enable Autostart.

#### Show or Hide Network Connectivity Change

- > To show or hide the network connectivity change on a Windows computer:
  - 1. Right-click the genie app icon in your system tray.



- 2. Select Settings.
- 3. To show the network connectivity change, select **Show Network Connectivity Change**.
- 4. To hide the network connectivity change, deselect Show Network Connectivity Change.

## Manage Your Router Locally Using the genie App

You can use the genie app to log in to your router so that you can view or change its settings. If you are using a smartphone or tablet, you must join the router's WiFi network locally (at home). If you are using a computer, you can use WiFi or an Ethernet wired connection.

You can also manage you router remotely using the genie app. For more information, see *Chapter 4, Remotely Access Your Router*.

#### Log In to Your Router Locally Using the Desktop genie App

- > To log in to your router locally using the desktop genie app for Windows or a Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - 2. Click the **genie** icon **v** on your desktop or in the Windows taskbar.

			Retrieve w	vireless password About 🔔 🗙
	<b>IGEAR</b> <sup>®</sup> genie Network: NETGEAR96	6.		Select Language
Home Internet				
WiFi Connection Router Settings		- dill		
Network Map	Internet	WiFi Connect	tion	Router Settings
Parental Controls	STATUS GOOD	STATUS Connec	cted	Click here
ReadySHARE AirPrint My Media Network Support				• <del>~</del>
	Network Map	Parental Cont	rols	ReadySHARE
	Number of devices: 79	Click here		Click here
NETGEAR Nighthawk <sup>®</sup> AC190 Now with ReadyCLOUD <sup>®</sup> Secure personal access to USE			Searc	ch NETGEAR Support

3. Click the Router Settings button.

			Retrieve wireless passw	ord About _ ×
NETGEAR <sup>®</sup> ge	nie <sup>.</sup>			Select Language
Wireless Network: NETGEAR96				English 🗸
Home				
Internet				
WiFi Connection		Router Log	jin	
Router Settings	Login as:	At home	•	
Network Map	User Name: Password:	admin		
Parental Controls		ault is "passv	word")	
ReadySHARE	Remember p	assword		
AirPrint	Enter router's			
My Media	OF		Cancel	
Network Support	Login is required to		ese router settings:	
	-Readys			
	-Guest / -Traffic I	Meter		
	-Router	Update		]
NETGEAR			Search NETGE	AR Support
Get the NETGEAR genie app for your smart			Geardin NETGE	
to enrich your router experience.	AD NOW Coogle play			Search

- 4. In the Login as menu, click At home.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Click the OK button.

The Wireless Settings page displays.

#### Log In to Your Router Locally Using the Android Mobile genie App

- > To log in to your router locally using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.



3. Tap the Login button.

Back	Login	
Login as		
At home		•
User Name		
admin		
Password		
	(Default is "password")	
Remember password		
Enter router's IP address ma	anually	
	Cancel Login	
	Ē	⊾ 7:01╤ 🛯

- 4. In the Login as menu, tap At home.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap the Login button.

The app returns to the home page.

#### Log In to Your Router Using the iOS Mobile genie App

- > To log in to your router using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.

**2.** Launch the genie app.



3. Tap Login.

	●○○○ Sprint ᅙ 🐇	5:33 PM	● \$ 100% → +
•	< Back	Login	Options
	User Name	admin	
	Password	•••••	••
		Default is "pas	ssword"
	Remember Me		
	Enter router's IP A	ddress man	ually
	Cancel		Login

4. At the top of the page, tap **Options**.

●●○○○ Sprint 훅 🔆	5:33 PM	🕑 🕴 100% 🔲 <del>/</del>
< Back	Login	Options
	😪 At	home
User Name	Re	mote access
Password	•••••	••
	Default is "pas	sword"
Remember Me		
Enter router's IP A	ddress man	ually
Cancel		Login

- 5. Tap At home.
- **6.** Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

7. Tap Login.

The app returns to the home page.

#### View Information About the genie App and the Router

On the desktop genie app for Windows and Mac computers, the About page displays information about the genie app. On the mobile genie app for Android and iOS devices, the About page displays information about the genie app and the router.

#### View Information about the Windows desktop genie App

Use the Windows desktop genie app to view information about the genie app.

# > To view information about the app using the desktop genie app for Windows computers:

- 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
- 2. Launch the genie app

The Home page displays.

3. Click the **About** button.

The About page displays information about the app.

#### View Information about the Mac Desktop genie App

Use the desktop genie app for Mac computers to view information about the genie app.

- > To view genie desktop app information using the desktop genie app for Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - Launch the genie app

The Home page displays.

3. From the menu bar at the top of you computer, select **NETGEARGenie > About NETGEAR Genie**.

The About page displays information about the app.

#### View Information About the Android Mobile genie App

Use the mobile genie app for Android devices to view information about the router and the genie app.

- > To view information about the router using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - **2.** Launch the genie app.

The home page displays.

3. Tap the **About** button at the top of the page.

The About page displays information about the router and the app.

4. (Optional) Tap the License button.

The end-user license agreement (EULA) displays.

5. (Optional) Tap the **Private Policy** link.

The NETGEAR Privacy Policy web page displays.

#### View Information About the iOS Mobile genie App

Use the mobile genie app for iOS devices to view information about the router and the genie app.

- > To view information about the router using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - Launch the genie app.
     The home page displays.
  - Tap the Information button at the top of the screen (i).
     The About page displays.
  - (Optional) Tap the License button.
     The end-user license agreement (EULA) displays.
  - (Optional) Tap the **Private Policy** button.
     The NETGEAR Privacy Policy web page displays.

# Manage Your Internet Connection

2

This chapter contains the following sections:

- Monitor Your Internet Connection Using the Desktop genie App
- Perform a Speed Test Using the Desktop genie App
- Fix an Internet Connection Problem Using the Desktop genie App
- Set Up Traffic Meter Locally

## Monitor Your Internet Connection Using the Desktop genie App

- To monitor your Internet connection using the desktop genie app for Windows and Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - 2. Launch the genie app

The Home page displays.

3. Click the Internet button.

	_	About _ X
Home Internet WiFi Connection	genie	Internet
Router Settings Network Map	www.netgear.com Speed Test or go to http://www Enter a website to test its downloading speed, or click the link to test your ISP connection	
Parental Controls	NETGEAR is not associated with http://www.speedtest.net.	Disclaimer
ReadySHARE	🖉 🗖 Download 🔍 🗖 Upload	
AirPrint	41Mbps	
My Media	4.	
Network Support		0.05Mbps Q

The status of your Internet connection displays.

### Perform a Speed Test Using the Desktop genie App

- To perform a speed test using the desktop genie app for Windows and Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - Launch the genie app

The Home page displays.

3. Click the Internet button.

		Retrieve wireless password About _ ×
	TGEAR <sup>®</sup> genie <sup>®</sup>	Select Language
Home		
Internet	genie	
WiFi Connection		
Router Settings		
Network Map	www.netgear.com Enter a website to test its downloading speed, or click the	Speed Test or go to http://www.speedtest.net link to test your ISP connection speed.
Parental Controls	NETGEAR is not associated with http://www.speedtest.ne	
ReadySHARE	🖉 🗖 Download 🔍 🖬 Upload	
AirPrint	41Mbps	
My Media	4. 4.	
Network Support		
	A REAL PROPERTY AND A REAL	e hundle
	10Mbps I High Traffic Threshold	👚 0.03Mbps 🦊 0.05Mbps 🔍

- 4. In the **Speed Test** field, type the URL for a website.
- 5. Click the Speed Test button.

The download speed from the website displays.

# Fix an Internet Connection Problem Using the Desktop genie App

- > To fix an Internet connection problem using the desktop genie app for Windows and Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - 2. Launch the genie app

The Home page displays.

3. On the left, click the Internet button

If your Internet connection is not working, the Internet pane on the Home screen is red.

NET	GEAR <sup>®</sup> genie <sup>®</sup>	Retrieve wireless password About _ X Select Language English V
Home Internet WiFi Connection Router Settings	genie	<b>*</b>
Network Map	71	
Parental Controls Ready SHARE AirPrint My Media Network Support	Fixing network. Do not ca This may take several r	
	Show details	Fix it Cancel

The genie app tries to detect and fix the problem:

The screen adjusts based on the results:

- If the Internet connection is restored, the screen shows a green line between the router and the Internet.
- If the Internet connection does not work, genie displays information about the problem, for example, genie might have discovered a disconnected cable.

#### Set Up Traffic Meter Locally

The traffic meter measures Internet traffic on your network. You can view traffic for today, yesterday, this week, this month, or last month. Each time period includes data for:

- Connection time
- Upload/average
- Download/average
- Total/average

You can also set up the traffic meter remotely using the genie app. For more information about how to remotely access your router using the genie app, see *Chapter 4, Remotely Access Your Router*.

#### Set Up the Traffic Meter Locally Using the Desktop genie App

- To set up the traffic meter locally using the desktop genie for Windows and Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - 2. Launch the genie app

The Home page displays.

3. Click the Router Settings button.

The Router Login page displays.

- 4. In the Login as menu, click At home.
- 5. Enter the router password.


The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Click the OK button.

The Wireless Settings page displays.

7. Click the Traffic Meter tab.

If you do not see the **Traffic Meter** tab, use the arrows to display more tabs.

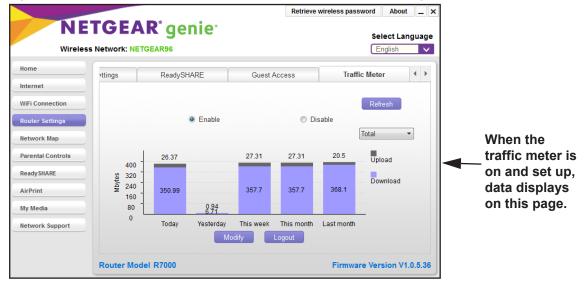

8. If the traffic meter is not on, select the **Enable** radio button.

The genie app sends the message to your router to turn on the traffic meter.

- 9. To change a traffic meter setting, click the **Modify** button and change the setting:
  - **Monthly Limit**. Traffic limit by MB per month.
  - **Counter Start Day**. The date to restart the counter. Select a number from 1 to 28. (Each month includes at least 28 days.)
  - Counter Start Time. The time to restart the counter.
  - Traffic Volume Limit. Select an option: No Limit, Download Only, or Upload/Download.
- **10.** When you finish, click the **Save** button.

# Set Up the Traffic Meter Locally Using the Android Mobile genie App

- > To set up the traffic meter locally using the mobile genie app on your Android device:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

- 3. Tap the Login button.
- 4. In the Login as menu tap At home.
- **5.** Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap the Login button.

The app returns to the home page.

Back T	raffic Meter	Refresh	
Traffic Meter			
Monthly limit		>	
Counter Start Day		>	
Counter Start Time		>	
Traffic Volume Limit		>	
	Total		
312 234 156 78 0 Today Vesterday	20.8 20.8 310.63 310.63 This week This month	a68.1	When the traffic meter is on and up, data displays on this page.
Da	aily Average		
50 2.97 40 30 20 0 0 This week		0.68 1227 Lastmonth moda = Uplaad	

If the traffic meter is not on, tap the Traffic Meter check box.
 The genie app sends the message to your router to turn on the traffic meter.
 The page adjusts.

- 9. To change a traffic meter setting, tap the setting:
  - Monthly Limit. Traffic limit by MB per month.
  - **Counter Start Day**. The date to restart the counter. Select a number from 1 to 28. (Each month includes at least 28 days.)
  - Counter Start Time. The time to restart the counter.
  - Traffic Volume Limit. Select an option: No Limit, Download Only, or Upload/Download.
- **10.** When you finish, tap the **Save** button.

Your settings are saved.

#### Set Up the Traffic Meter Using the iOS Mobile genie App

- > To set up the traffic meter using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.


The home page displays.

- 3. Tap Login.
- **4.** At the top of the Login page, tap **Options > At home**.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap Login.

The app returns to the home page.

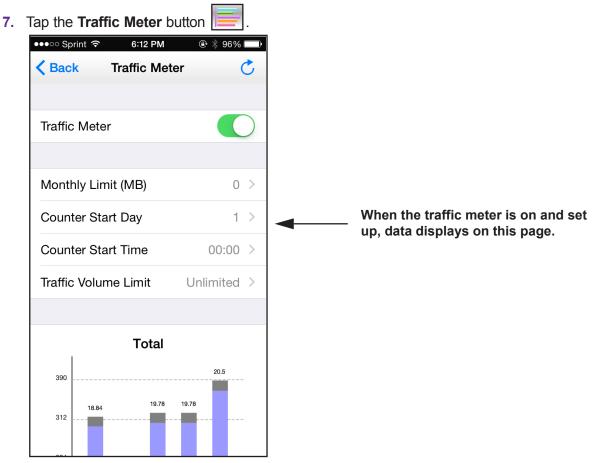

8. If the traffic meter is not on, slide the **Traffic Meter** slider to the right.

A message displays asking you if you want to enable the traffic meter.

9. Tap the **OK** button.

The genie app sends the message to your router to turn on the traffic meter.

The screen adjusts.

- **10.** To change a traffic meter setting, tap the setting:
  - Monthly Limit. Traffic limit by MB per month.
  - **Counter Start Day**. The date to restart the counter. Select a number from 1 to 28. (Each month includes at least 28 days.)
  - Counter Start Time. The time to restart the counter.
  - Traffic Volume Limit. Select an option: No Limit, Download Only, or Upload/Download.
- **11.** When you finish, tap **Save**.

Your settings are saved.

## Manage Your WiFi Network

This chapter contains the following sections:

- Manage WiFi Connections
- View the WiFi Channel Usage in Your Area Using the Desktop genie App
- Change the WiFi Channel Using the Desktop genie App
- Change the Router WiFi Settings Locally
- Export Router WiFi Settings to a USB Device Using the Desktop genie App
- View the Network Map Locally
- Modify Device Information in the Network Map Locally
- Block or Allow Network Access Locally
- Set Up Parental Controls Locally
- Enable or Disable Parental Controls Locally
- Create a Bypass Account Using the genie App
- Set Parental Controls Filtering Levels Locally for Each Device
- Set Up a Guest WiFi Network Locally
- Connect to a WiFi Network Locally Using a QR Code

## Manage WiFi Connections

You can connect to a different WiFi network. When you connect to a WiFi network, genie adds that network to a list of WiFi networks. The preferred network is at the top of the list. You can change the preferred WiFi network.

#### Connect to a WiFi Network Using the Desktop genie App

- To connect to a different WiFi network using the desktop genie app for Windows and Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - 2. Launch the genie app 🐋

The Home page displays.

- On the left, click the WiFi Connection button.
   The Connect WiFi page displays a list of WiFi networks in your area.
- 4. Select a network and click the **Connect** button.
- **5.** If prompted, enter the password for the network. Your computer or device joins the network.

#### Specify the Preferred Network Using the Desktop genie App

- To specify the preferred network using the desktop genie app for Windows and Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - Launch the genie app

The Home page displays.

3. On the left, click the WiFi Connection button.

The Connect WiFi page displays.

4. Click the Manage button.

The Preferred Networks page displays.

5. To change the order of the list, select a network and click the **Move up** or **Move down** button.

# View the WiFi Channel Usage in Your Area Using the Desktop genie App


- > To view WiFi channel usage in your area using the desktop genie app for Windows and Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - 2. Launch the genie app

The Home page displays.

3. On the left, click the WiFi Connection button.

The Connect WiFi page displays.

4. Click the WiFi Channel tab.

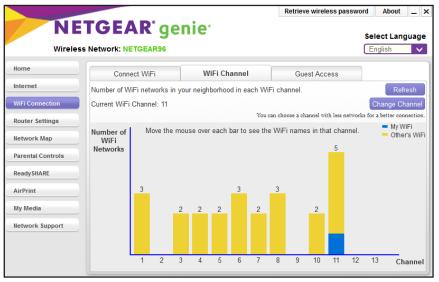

Your network displays in blue. Yellow shows other networks in your area. In many countries and geographic locations, laws or guidelines specify which channels can be used. Depending on your location, some channels might not be available.

### Change the WiFi Channel Using the Desktop genie App

If many WiFi networks at your location are using the same channel as your WiFi network, you might experience interference. You can change the channel to avoid the interference. In some countries and regions, channel selection is restricted.

- To change the WiFi channel using the desktop genie app for Windows and Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.

2. Launch the genie app

The Home page displays.

3. On the left, click the WiFi Connection button.

The Connect WiFi page displays.

4. Click the WiFi Channel tab.

									F	Retrieve	e wirel	ess pa	assword	Α	bout	_ >
	TGEA		-	en	ie	•							_	elect Englis	Lang	uage
Home	Conn	ect Wi	Fi		W	'iFi Ch	annel			Gue	st Acc	ess				
Internet WiFi Connection	Number of W Current WiFi			n you	neigh	borhoo	id in ea	ach Wi	Fi cha	innel.				Chan	Refre ge Cha	_
Router Settings	Number of	N	love the	mour		reach	har to			ose a cha i names			networks f	-	My Wil	Fi
Network Map	WiFi Networks					ou on						5			Other	s WiFi
ReadySHARE																
AirPrint		3					3		3							
My Media				2	2	2		2			2					
Network Support																
		1	2	3	4	5	6	7	8	9	10	11	12	13	Cha	nnel

- 5. Click the Change Channel button.
- 6. Specify the channel.
- 7. Click the Apply button.

The router WiFi channel changes. To make this change, the router must disconnect all computers and WiFi devices from the WiFi network.

#### **Change the Router WiFi Settings Locally**

You can change your router's WiFi settings locally (at home) or remotely (away from home). For more information about how to remotely access your router using the genie app, see *Chapter 4, Remotely Access Your Router*.

**Note:** When you change the router's WiFi settings, it must disconnect all computers and WiFi devices from the WiFi network. After the change takes effect, you can join the WiFi network with its new settings.

#### Change the Router WiFi Settings Using the Desktop genie App

> To change the router's WiFi settings locally using the desktop genie app for Windows and Mac computers:

- 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
- Launch the genie app

The Home page displays.

3. Click the Router Settings button.

The Router Login page displays.

- 4. In the Login as menu, click At home.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Click the **OK** button.

			Retrieve wireless password	About _ ×				
NE.	TGEAR <sup>®</sup> gei	nie <sup>.</sup>	S	elect Language				
Wireless	Network: NETGEAR96			English 🗸				
Home	Wireless Settings	ReadySHARE	Guest Access	Traf 4 🕨				
Internet	1 CHE	-						
WiFi Connection	24str		R	efresh				
Router Settings								
Network Map	Wireless Name (SSID): NETGEAR96							
Parental Controls								
ReadySHARE	242	Channel Selection: Auto						
AirPrint	2.4GHz							
My Media	Netwo	ork Key (Password): husky	vocean593					
Network Support	Netwo							
		Modify Export	Logout					
	Router Model R7000		Firmware Ve	rsion V1.0.5.36				

7. Click the Modify button.

NE	TGEAR <sup>®</sup> ge	nie <sup>.</sup>			About _ ×		
Wireless	Network: NETGEAR96				English 🗸		
Home	Wireless Settings	ReadySHARE		Guest Access	Traf 4 🕨		
Internet	2.ASP						
WiFi Connection	2 Au				Refresh		
Router Settings	Wi	reless Name (SSID):	NETGEAR	96			
Network Map		Channel Selection:	Auto 👻				
Parental Controls		Security Options:	<ul> <li>None</li> <li>WPA2-P</li> </ul>	PSK			
ReadySHARE			O WPA-PS	SK[TKIP]+WPA2-PSI	<[AES]		
AirPrint	Notw	ork Key (Password):	huskyocea	-502			
My Media	Netw	ork ney (rassword).	-	ncters or 64 hex dig	its)		
Network Support		Apply	Cancel				
		Appiy	Cancer				
	Router Model R7000			Firmwar	e Version V1.0.5.36		

- 8. Change the settings as needed:
  - Wireless Name (SSID). The name of the router's WiFi network.
  - **Channel Selection**. When set to **Auto**, the router automatically selects the best available channel. You can specify a particular channel.
  - **Security Options**. If your router came with preset WiFi security, NETGEAR recommends that you use its preset security, but you can change this setting.
  - Network Key (Password). If your router came with preset WiFi security, NETGEAR recommends that you use its unique password, which is on the router label. You can specify a different password here.
- 9. Click the Apply button.

The WiFi settings on the router change. The router disconnects all computers and WiFi devices on the WiFi network.

# Change the Router WiFi Settings Using the Android Mobile genie App

- To manage the router's WiFi settings locally using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - **2.** Launch the genie app.

The home page displays.

- 3. Tap the Login button.
- 4. In the Login as menu tap At home.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap the Login button.

The app returns to the home page.

7. Tap the Wireless Settings button

Back	Settings	Refresh
		2.4GHz 🔻
Signal Strength 100 %		
Link Rate 72 Mbps		
Name/SSID NETGEAR96		>
Channel Auto		>
Key/Password huskyocean593		>
	Scan OR code to connect.	
5 Č É		6:46 🕫 🗎

- 8. To change the following settings, tap a setting:
  - Name/SSID. The name of the WiFi network.
  - **Channel**. The channel for the WiFi signal. Usually, this field is set to Auto so that the router selects the best channel for its signal. You can select a specific channel number.
  - **Key/Password**. Go to the Wireless Security screen and view or change the WiFi security setting for the home network.
- 9. When you finish making changes, tap the **Save** button.

The router settings are saved.

#### Change the Router WiFi Settings Using the iOS Mobile genie App

- To manage the router's WiFi settings locally using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - **2.** Launch the genie app.

The home page displays.

3. Tap Login.


- 4. At the top of the Login page, tap **Options > At home**.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap Login.

The app returns to the home page.

7. Tap the Wireless Settings button

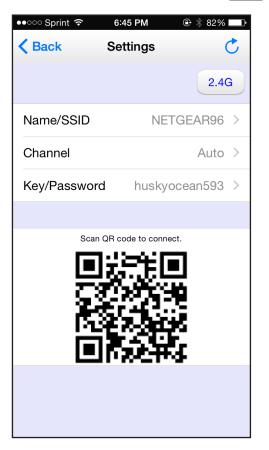

- 8. To change a WiFi setting, tap a setting:
  - Name/SSID. The name of the WiFi network.
  - **Channel**. The channel for the WiFi signal. Usually, this field is set to Auto so that the router selects the best channel for its signal. You can select a specific channel number.
  - **Key/Password**. Go to the Wireless Security screen and view or change the WiFi security setting for the home network.
- 9. When you finish making changes, tap the **Save** button.

The router settings are saved.

# Export Router WiFi Settings to a USB Device Using the Desktop genie App

You can export the router WiFi settings to a USB device such as a flash drive. Then you can connect the USB device to another computer so that it easily connects to your WiFi network.

You can also export your router's WiFi settings remotely using the genie app. For more information about how to remotely access your router using the genie app, see *Chapter 4, Remotely Access Your Router*.

# > To export your WiFi settings locally using the desktop genie app for Windows and Mac computers:

- 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
- Launch the genie app

The Home page displays.

3. Click the Router Settings button.

The Router Login page displays.

- 4. In the Login as menu, click At home.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Click the **OK** button.

The Wireless Settings page displays.

7. Click the **Export** button at the bottom of the page.

			Retrieve wireless password	About _ ×	
	TGEAR <sup>®</sup> geni	е.		English	
Home	Wireless Settings	ReadySHARE	Guest Access	Traf 4	
Internet WiFi Connection	24SH2	Welcome to Wireless	Export Wizard		
Router Settings Network Map Parental Controls		The wizard can export the wireless settings to an external USB drive. You can plug it into a USB port on another Windows			
ReadySHARE	Welcome	PC.Then, run the program genieWirelessConfig.exe on the USB drive to update that PC's wireless settings so it can connect to the wireless network.			
AirPrint My Media		Click "Next" to continue.			
Network Support			Next	Cancel	
	Router Model R7000		Firmware V	ersion V1.0.5.36	

8. Follow the wizard steps to export your WiFi settings to a USB storage device.

The WiFi settings are saved onto the USB device in a file named genieWirelessConfig.exe.

### View the Network Map Locally

The network map shows the router's Internet connection and computers and devices that are connected to the router. You can use the Turbo Transfer feature from this screen to copy files from one device to another. For more information about Turbo Transfer, see *Send Files With Turbo Transfer* on page 114.

You can also view the network map remotely using the genie app. For more information about how to remotely access your router using the genie app, see *Chapter 4, Remotely Access Your Router*.

#### View the Network Map Locally Using the Desktop genie App

- To view a network map locally using the desktop genie app for Windows and Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - 2. Launch the genie app 🐋

The Home page displays.

3. Click the Router Settings button.

The Router Login page displays.

- 4. In the Login as menu, click At home.
- **5.** Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Click the OK button.

The Wireless Settings page displays.


7. Click the Network Map button.

	Retrieve wireless password About _ ×
NETGEAR <sup>®</sup> genie <sup>®</sup> Wireless Network: NETGEAR96	Select Language
Home	<b>R (S</b> )
WiFi Connection Router Settings Router Login	
Network Map User Name: admin	
ReadySHARE (default is "password:	rord")
My Media Network Support	ancel
Notify me of new devices that connect to the network	

8. Enter the router password and click the **Login** button.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

The Network Map page displays.

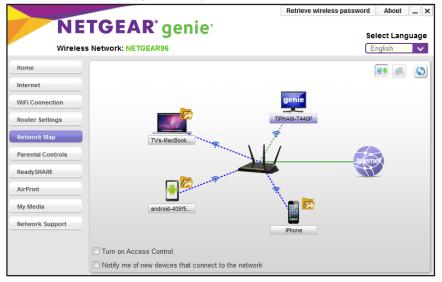

The network map displays the devices that are connected to the network. A green line indicates a good Internet connection. A red line indicates the Internet connection that is not working.

9. To update the page, tap the **Refresh** button.

# View the Network Map Locally Using the Android Mobile genie App

- > To view the network map locally using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.


- 3. Tap the Login button.
- 4. In the Login as menu tap At home.
- **5.** Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap the Login button.

The app returns to the home page.

7. Tap the **Network Map** button.

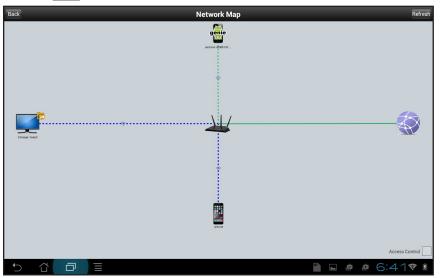

The network map displays the devices that are connected to the network. A green line indicates a good Internet connection. A red line indicates the Internet connection that is not working.

8. To update the page, tap the **Refresh** button.

## View the Network Map using the iOS Mobile genie App

- > To view the network map using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.

2. Launch the genie app.

The home page displays.


- 3. Tap Login.
- 4. At the top of the Login page, tap **Options > At home**.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap Login.

The app returns to the home page.

7. Tap the **Network Map** button.

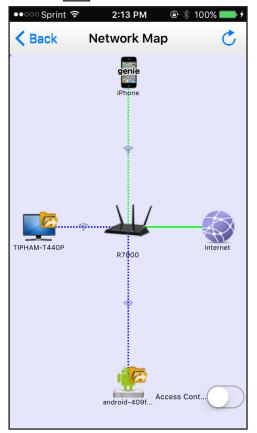

The network map displays the devices that are connected to the network. A green line indicates a good Internet connection. A red line indicates the Internet connection that is not working.

8. To update the page, tap the **Refresh** icon.

# Modify Device Information in the Network Map Locally

You can modify the device information that displays in the network map.

You can also modify the device information remotely using the genie app. For more information about how to remotely access your router using the genie app, see *Chapter 4, Remotely Access Your Router*.

# Modify Device Information Locally Using the Desktop genie App

To modify the device information that displays in the network map locally using the desktop genie app for Windows and Mac computers:

- 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
- **2.** Launch the genie app **A**

The Home page displays.

3. Click the Router Settings button.

The Router Login page displays.

- 4. In the Login as menu, click At home.
- **5.** Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Click the OK button.

The Wireless Settings page displays.


7. Click the Network Map button.

	Retrieve wireless password	About _	х
NETGEAR <sup>®</sup> genie <sup>®</sup> Wireless Network: NETGEAR96	_	lect Languag	
Home		<b>F</b> ð <b>F</b>	5
WiFi Connection Router Settings			
Network Map User Name: admin Parental Controls Password:			
ReadySHARE (default is "passw	ord")	×	
My Media Cogin C	ancel		
Notify me of new devices that connect to the network			

8. Enter the router password and click the **Login** button.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

The Network Map page displays.

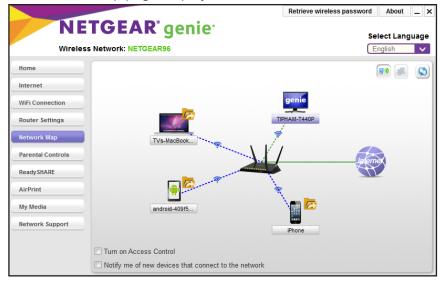

		Retrieve wireless passwo	ord About _
	STGEAR' genie'		Select Language
Home			<b>R R C</b>
Internet	android-409f57d116b879f1		
WiFi Connection	Custom Name: a	ndroid-409f57d116b879f1	
Router Settings	Туре: А	ndroid Tablet	
Network Map	Tr Connection Type: V	Vireless	
Parental Controls	IP Address: 1	92.168.1.6	
ReadySHARE	Status: O		
AirPrint	Signal Strength: 1		
My Media	Link Rate: 7: MAC Address: 1	2Mbps <u>What is it?</u> 4:DA:E9:29:0D:38	
Network Support	Parental Controls Filtering: N	lone	
	Send File  Modif	fy Close	
	$\hfill\square$ Notify me of new devices that connect to the network		

9. Click that device icon.

10. Click the Modify button.

				Retrieve wireless p	asswo	ord About _ ×
	TGEAR	-				Select Language
Wireless	Network: NETGEAR	R96				English 🗸
Home		<u>×</u> ,				<b>I</b>
Internet		android-409f57d116i	o879f1			
WiFi Connection		Custom Name:	android-40	9f57d116b879f1		
Router Settings		Type:	Android Ta	blet	-	
Network Map	Tr	Connection Type:			•	
Parental Controls		IP Address:	192.168.1.6 On Line	5		ernek
ReadySHARE						
AirPrint		Signal Strength:	100%			
AirPrint		Link Rate:	72Mbps	What is it?		
My Media		MAC Address:	14:DA:E9:2	!9:0D:38		
Network Support		Parental Controls Filtering:	None		-	
	Turn on Access C	Send File 🗸	Apply	Close		
	Notify me of new d	levices that connect to the net	work			

- 11. Select one of the following settings and modify:
  - **Custom Name**. The device name that displays in the network map.
  - **Type**. The device type that displays in the network map.
  - **Connection Type**. The device network connection type.
  - **Parental Controls Filtering**. The Parental Controls filtering level set for the device. In order for you to modify the Parental Controls from the network map, it must be enabled. For more information, see *Enable or Disable Parental Controls Using the Desktop genie App* on page 62.
- **12.** Click the **Apply** button.

Your settings are saved.

# Modify Device Information Locally Using the Android Mobile genie App

- > To modify the device information that displays in the network map locally using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - **2.** Launch the genie app.

The home page displays.


- 3. Tap the Login button.
- 4. In the Login as menu tap At home.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap the Login button.

The app returns to the home page.

7. Tap the **Network Map** button.

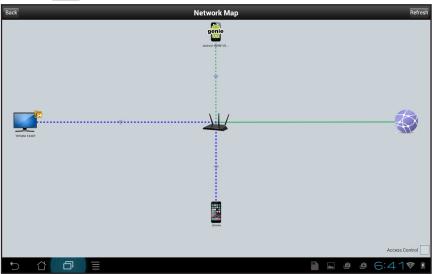

8. Tap a device icon.

Back	Network Map	
	iphone K	
	Custom Name iphone Type iPhone IP Address	
	192.168.1.4 Signal Strength 100% Link Rate	
type (1)	144Mbps <u>What is it?</u> MAC Address 70:48:0F:6C:B3:55 Parental Controls Filtering	
	Default level on router	
		Access Control
	💾 🖬 🖄 🖉	2:23 💎 💈

9. Tap the **Modify** button.

Back	Network Map Refresh
Duc.	Custom Name   iphone   Type   iphone   TP Address   192.168.1.4   Signal Strength   100%   Link Rate   144Mbps   Vhat is it?   Prental Controls Filtering   Default level on router   File Upload   Apply
5 십 🗗 🗏	🖺 🖬 单 2:23🕫 🖡

- **10.** Tap one of the following settings and modify:
  - **Custom Name**. The device name that displays in the network map.
  - **Type**. The device type that displays in the network map.
  - **Parental Controls Filtering**. The Parental Controls filtering level set for the device. In order for you to modify the Parental Controls from the network map, it must be enabled. For more information, see *Enable or Disable Parental Controls Using the Android Mobile genie App* on page 62.
- 11. Tap the Apply button.

Your settings are saved.

# Modify Device Information Locally Using the iOS Mobile genie App

- > To modify the device information that displays in the network map locally using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - **2.** Launch the genie app.

The home page displays.


- 3. Tap Login.
- 4. At the top of the Login page, tap **Options > At home**.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap Login.

The app returns to the home page.

7. Tap the **Network Map** button.

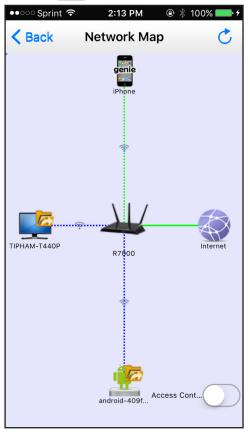

8. Tap a device icon.



- 9. Tap one of the following settings and modify:
  - **Device**. The device name that displays in the network map.
  - **Type**. The device type that displays in the network map.
  - **Parental Controls Filtering**. The Parental Controls filtering level set for the device. In order for you to modify the Parental Controls from the network map, it must be enabled. For more information, see *Enable or Disable Parental Controls Using the iOS Mobile genie App* on page 63.
- 10. Tap the Close button.

Your settings are saved.

## **Block or Allow Network Access Locally**

You can use access control to block or allow access to your network.

You can also remotely block or allow access to your network from the genie app. For more information about how to remotely access your router using the genie app, see *Chapter 4, Remotely Access Your Router*.

# Block or Allow Network Access Using the Desktop genie App

- > To block or allow to access the network using the desktop genie app:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - Launch the genie app

The Home page displays.


3. Click the Network Map button.

The Router Login page displays.

4. Enter the router password and click the Login button.

The default password is **password**. The router user name, which is **admin**, is automatically entered.


The Network Map page displays.

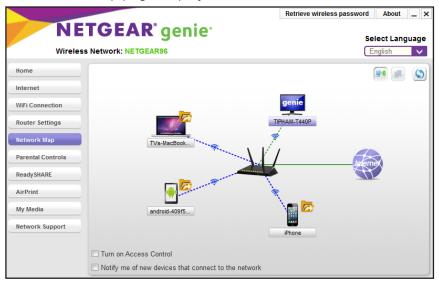

A good connection is shown in green. A red line indicates a connection that is not working.

5. Select the Turn on Access Control check box.

6. Click a device icon.

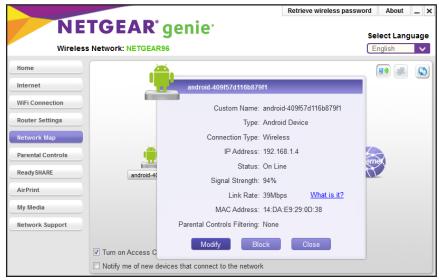

7. Click the **Block** button.

The device is blocked from the network.

		Retrieve wireless password About _ X
	TGEAR <sup>®</sup> genie <sup>®</sup> 8 Network: NETGEAR96	Select Language
Home		R (1)
Internet		
WiFi Connection	genie	
Router Settings	TIPHAM-T440P	
Network Map	*	
Parental Controls		Internet
ReadySHARE	android-409f5	
AirPrint	*	
My Media		
Network Support	2 H	
	iPhone	4
	✓ Turn on Access Control	
	$\hfill\square$ Notify me of new devices that connect to the network	

8. To allow a blocked device to access the network, click the device and click the Allow button.

		Retrieve wireless password About _ ×
	TGEAR <sup>®</sup> genie <sup>®</sup>	Select Language
Home	<b>—</b>	<b>R</b> Ø <b>(R</b> )
Internet	android_409f57d116b879f1	
WiFi Connection	Custom Name: android-	-409f57d116b879f1
Router Settings	Type: Android	I Device 👻
Network Map	Connection Type: Auto	-
Parental Controls	IP Address: 192.168.	.1.4
ReadySHARE	Status: On Line	ernek
ReadySHARE	android-40 Signal Strength: 94%	
AirPrint	Link Rate: 26Mbps	What is it?
My Media	MAC Address: 14:DA:E	9:29:0D:38
Network Support	Parental Controls Filtering: None	<b>_</b>
	Turn on Access C	Close
	Notify me of new devices that connect to the network	

**9.** For notifications, select the **Notify me of new devices that connect to the network** check box.

The genie app notifies you every time a new device joins your network.

#### Block or Allow Devices Network Access Using the Android Mobile genie App

- > To block or allow access to the network using the mobile genie app for Android device:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

- 3. Tap the Login button.
- 4. In the Login as menu tap At home.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap the Login button.

The app returns to the home page.


- Back
   Network Map
   Refresh

   Image: Second S
- 7. Tap the **Network Map** button.

- 8. Tap the Access Control check box.
- Tap a device on the network map.
   The device details window displays.
- 10. Tap the Modify button.

Back	Network Map	
Back	Matter of the second s	Refresh
		Access Control 🖌
		• 4.4 ( 😵 🗳

**11.** Click the **Block** button.

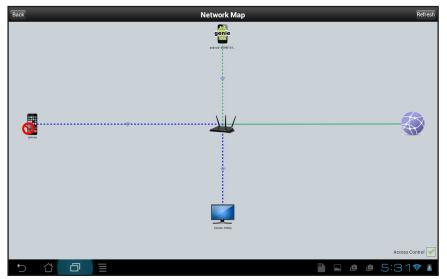

The device is blocked from the network.

12. To allow a blocked device to access the network, click the Allow button.

Network Map	Refresh
jenie 🗙	
 Custom Name iphone Type iPhone 6/6 Plus IP Address 192.168.1.3 Signal Strength 100% Link Rate 144Mbps MAC Address 70:48:0F:6C:B3:55	
Parental Controls Filtering Default level on router Modify Allow	Access Control
	🖬 🖻 🖄 4:48 🛜 💈

# Block or Allow Devices Network Access Using the iOS Mobile genie App

- > To block or allow access to the network using the mobile genie app for iOS device:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

- 3. Tap Login.
- 4. At the top of the Login page, tap **Options > At home**.

5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap Login.

The app returns to the home page.

- 7. Tap the Network Map button.
- 8. Slide the Access Control slider to the right.

9. Tap a device on the network map.



**10.** Slide the **Block** slider to the right.

●●○○ Sprint 훅	5:33 PM	@ ∦ 60% 💶
K Back Ne	etwork Map	Ċ
тірнам-т44ор	R7000	Internet

The device is blocked from the network.

11. To allow a blocked device to access the network, slide the **Block** slider to the left.



# Set Up Parental Controls Locally

Parental controls allow you to control the Internet content on your home network. After installation, Parental Controls automatically starts.

If your router supports Parental Controls, you can set it up using the genie app.

You can also set up Parental Controls remotely using the genie app. For more information about how to remotely access your router using the genie app, see *Chapter 4, Remotely Access Your Router*.

#### Set Up Parental Controls Locally Using the Desktop genie App

- To set up Parental Controls locally using the desktop genie app for Windows and Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - Launch the genie app

The Home page displays.

3. Click the **Parental Controls** button.

The genie app checks if your router's firmware supports Parental Controls.

Wirele	ss Network: NETGEAR91	E	nglish
lome	Parental Controls		
nternet	Powered by OpenDNS		
/iFi Connection	You're about to setup NETGEAR Live Parental Controls websites visited on your computers and other networker		r to filter
louter Settings			
letwork Map	THE INTERNET LIVE PARI		
Parental Controls			•
ReadySHARE	MODEM	FILTERING: NON	
AirPrint	✓ Set different filtering rules for each user on your network.		IE
/ly Media	✓ Set rules based on the time of day.	FILTERING: LOV	v
letwork Support	Our custom settings let you relax security settings for s	some users or at some times of the d	lay. <u>Learn mor</u>

- 4. Click the **Next** button.
- 5. Read the note and click the **Next** button again to proceed.

Because Parental Controls uses free OpenDNS accounts, you are prompted to log in or create a free account.

		Retrieve wireless password About _ ×
NE	TGEAR <sup>®</sup> genie <sup>®</sup>	Select Language
Wireless	s Network: NETGEAR96	English 🗸
Home	Setting up Live Parental Controls	
Internet	Welcome, this setup wizard will quickly configure NETGEAP on your NETGEAR router.	R Live Parental Controls Powered by OpenDNS
WiFi Connection	In order to use Live Parental Controls, you need a free Open	DNS account. Do you already have one?
Router Settings	Yes, use my existing OpenDNS account.	
Network Map	◎ No, I need to create a free OpenDNS account.	
Parental Controls		
ReadySHARE		
AirPrint		
My Media		
Network Support		
	Cancel	Previous Next

- 6. Select the radio button that applies to you:
  - If you already created an OpenDNS account, leave the **Yes** radio button selected.
  - If you did not yet create an OpenDNS account, select the **No** radio button.
- 7. Click the **Next** button.
- 8. If you clicked the **No** radio button, do the following:
  - a. Complete the fields and click the **Next** button.

The filtering level page displays.

- b. Select a filtering level and click the Next button.The Setup is complete page displays.
- c. Click the Take me to the status screen button.The Parental Controls page displays.
- 9. If you clicked the Yes radio button, do the following:
  - a. Enter your OpenDSN user name and password and click the Next button.
     The filtering level page displays.
  - b. Select a filtering level and click the Next button.
     The Setup is complete page displays.
  - c. Click the Take me to the status screen button.

		Retrieve wireless password About _ ×
	TGEAR <sup>®</sup> genie <sup>®</sup>	Select Language
WITEIESS	Network. NetGEAR/4	
Home		)
Internet	Status	
WiFi Connection		
Router Settings	Live Parental Controls: disabled	Enable Live Parental Controls
Network Map	Live Falental Controls. Usabled	
Parental Controls	Filtering level: None	Change Basic Settings
ReadySHARE	Nothing blocked.	Change Custom Settings
AirPrint		
My Media	OpenDNS account: tipham	
Network Support		
		Refresh

10. To enable Parental Controls, click the Enable Live Parental Controls button.

The genie app sends the command to your router and waits for the response. When parental controls is turned on, you can view or change the following settings:

- Parental Controls. Turns parental controls on or off.
- **Filtering Level**. Contains five levels that can limit access to Internet content: (1) High, (2) Moderate, (3) Low, (4) Minimal, and (5) None. You can also select the **Custom** option which displays a list of applications you can block.
- **Change Custom Settings**. Opens a web browser and log in to OpenDNS. Then choose which categories to block from the category list.
- OpenDNS Account. Displays the login name. Once the router is managed the first time by an OpenDNS user, only that user can manage this router's Parental Controls settings.
- **Bypass Account**. Displays the bypass account associated with your OpenDNS account.

#### Set Up Parental Controls locally Using the Android Mobile genie App

- > To set up parental controls locally using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

- 3. Tap the Login button.
- 4. In the Login as menu tap At home.
- **5.** Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap the Login button.

The app returns to the home page.

7. Tap the Parental Controls button

A message displays asking if you already created an OpenDNS account.

- 8. Tap a button that applies to you:
  - If you already created an OpenDNS account, tap the **Yes** button.
  - If you did not yet create an OpenDNS account, tap the **No** button.
- 9. If you tapped the **No** button, do the following:
  - Enter the fields that display to create an account.
     After you log in, the filtering level window displays.
  - **b.** Tap a filtering level and tap the **Next** button.

The Setup is complete window displays.

c. Tap the Take me to the status screen button.

The Parental Controls page displays.

- **10.** If you tapped the **Yes** button, do the following:
  - a. Enter your OpenDSN user name and password and tap the Login button.
     The Filtering Level page displays.
  - b. Tap a filtering level and click the Next button.
     The Setup is complete page displays.

c. Tap the Take me to the status screen button.

Back	Parental Controls	Refresh
Parental Controls		
Filtering level None		>
Change Custom Settings		>
OpenDNS Account tipham		
Bypass Account		>
5 십 🗇 🗏		🖺 🖬 6:44 💎 🛔

11. To enable Parental Controls, tap the Parental Controls check box.

The genie app sends the command to your router and waits for the response. When parental controls is turned on, you can view or change the following settings:

- Parental Controls. Turns parental controls on or off.
- Filtering Level. Contains five levels that can limit access to Internet content: (1) High, (2) Moderate, (3) Low, (4) Minimal, and (5) None. You can also select the Custom option which displays a list of applications you can block.
- **Change Custom Settings**. Opens a web browser and log in to OpenDNS. Then choose which categories to block from the category list.
- OpenDNS Account. Displays the login name. Once the router is managed the first time by an OpenDNS user, only that user can manage this router's Parental Controls settings.
- **Bypass Account**. Displays the bypass account associated with your OpenDNS account.

#### Set Up Parental Controls Locally Using the iOS Mobile genie App

- > To set up parental controls locally using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

- 3. Tap Login.
- **4.** At the top of the Login page, tap **Options > At home**.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap Login.

The app returns to the home page.

7. Tap the **Parental Controls** button **11**.

A message displays asking if you already created an OpenDNS account.

- 8. Tap a button that applies to you:
  - If you already created an OpenDNS account, tap the **Yes** button.
  - If you did not yet create an OpenDNS account, tap the **No** button.
- 9. If you tapped the **No** button, do the following:
  - Enter the fields that display to create an account.
     After you log in, the filtering level window displays.
  - b. Tap a filtering level and tap the Next button.The Setup is complete window displays.
  - c. Tap the Take me to the status screen button.The Parental Controls page displays.
- 10. If you tapped the Yes button, do the following:
  - a. Enter your OpenDSN user name and password and tap the Login button.
     A message displays.

**b.** Read the message and tap the **OK** button.

●●○○○ Sprint 🗢 6:43 PM	
Back Parental Contro	ols 🕐
Parental Controls	
Filtering level	None >
Change Custom Settings	(j) >
OpenDNS Account	tipham
Bypass Account	>

11. To enable Parental Controls, slide the Parental Controls slider to the right.

The genie app sends the command to your router and waits for the response. When parental controls is turned on, you can view or change the following settings:

- Parental Controls. Turns parental controls on or off.
- Filtering Level. Contains five levels that can limit access to Internet content: (1) High,
   (2) Moderate, (3) Low, (4) Minimal, and (5) None. You can also select the Custom option which displays a list of applications you can block.
- **Change Custom Settings**. Open a web browser and log in to OpenDNS. Then choose which categories to block from the category list.
- **OpenDNS Account**. Display the login name. Once the router is managed the first time by an OpenDNS user, only that user can manage this router's Parental Controls settings.

# **Enable or Disable Parental Controls Locally**

After you set up an OpenDNS Account, you can enable or disable Parental Controls from your computer or WiFi device.

You can enable or disable your router's Parental Controls locally or remotely. For more information about how to remotely access your router using the genie app, see *Chapter 4, Remotely Access Your Router*.

#### Enable or Disable Parental Controls Using the Desktop genie App

- To enable or disable Parental Controls locally using the desktop genie app for Windows and Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - 2. Launch the genie app 🐋

The Home page displays.

3. Click the Parental Controls button.

	Retrieve wireless password About _ ×
TGEAR <sup>®</sup> genie <sup>®</sup>	Select Language
Status	
Live Parental Controls: enabled	Disable Live Parental Controls
Filtering level: None	Change Basic Settings
Nothing blocked.	Change Custom Settings
OpenDNS account: tipham	
Bypass account:	Bypass Login
-11	
	Refresh
	s Network: NETGEAR74  Status Live Parental Controls: enabled Filtering level: None

- 4. To enable Parental Controls, click the Enable Live Parental Controls button.
- 5. To disable Parental Controls, click the Disable Live Parental Controls button.

# Enable or Disable Parental Controls Using the Android Mobile genie App

- To enable or disable Parental Controls locally using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

- 3. Tap the Login button.
- 4. In the Login as menu tap At home.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap the Login button.

The app returns to the home page.

7. Tap the Parental Controls button

None Change Custom Settings OpenDNS Account tipham Empse Account	Back	Parental Controls	Refresh
None Change Custom Settings Scout tipham Settings Scout tipham Settings Scout Settings Scout Settings Scout Settings Scout Setting Scout Setti	Parental Controls		
OpenDNS Account tipham			>
tipham Pumper Asseut	Change Custom Settings		>
Bypass Account	OpenDNS Account tipham		
	Bypass Account		>
<ul> <li>· · · · · · · · · · · · · · · · · · ·</li></ul>	5 A A	=	6.448

- 8. To enable parental controls, tap the **Parental Controls** check box.
- 9. To disable parental controls, clear the **Parental Controls** check box.

## Enable or Disable Parental Controls Using the iOS Mobile genie App

- > To enable or disable Parental Controls using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - **2.** Launch the genie app.

The home page displays.

- 3. Tap Login.
- **4.** At the top of the Login page, tap **Options > At home**.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap Login.

The app returns to the home page.

- 7. Tap the Parental Controls button
- 8. To enable Parental Controls, slide the Parental Controls slider to the right.
- 9. To enable Parental Controls, slide the **Parental Controls** slider to the left.

## Create a Bypass Account Using the genie App

After you set up parental controls, you can create a bypass account that lets you set custom filtering levels that you can save. After you create a bypass account, you can visit *https://netgear.opendns.com/* to change your account settings.

#### Create a Bypass Account Using the Desktop genie App

- To create a bypass account using the desktop genie App for Windows and Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - Launch the genie app

The Home page displays.

3. Click the Parental Controls button.

NIE	TCEAD	Retrieve wireless password About _ >
	STGEAR <sup>®</sup> genie <sup>®</sup>	Select Language
Home		
Internet	Status	
WiFi Connection		
Router Settings	Live Parental Controls: enabled	Disable Live Parental Controls
Network Map	Filtering level: None	Change Basic Settings
Parental Controls	Nothing blocked.	Change Custom Settings
ReadySHARE		
AirPrint	OpenDNS account: tipham	
My Media	Bypass account:	Bypass Login
Network Support	Dypass account.	Cypass Login
		Refresh

4. Click the Change Custom Settings button.

A web browser automatically opens and redirects to the *NETGEAR OpenDSN Parental Controls* web page.

- 5. Enter your OpenDSN user name and password in the fields and click the **Sign in** button.
- 6. Follow the onscreen instructions to create a bypass account.

Your bypass account is created.

7. (Optional) To return to your NETGEAR OpenDNS account, visit https://netgear.opendns.com/.

## Create a Bypass Account Using the Android Mobile genie App

- > To create a bypass account using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

- 3. Tap the Login button.
- 4. In the Login as menu tap At home.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap the Login button.

The app returns to the home page.

7. Tap the Parental Controls button

Back	Parental Controls	Refresh
Parental Controls		
Filtering level None		>
Change Custom Settings		>
OpenDNS Account tipham		
Bypass Account		>
		6:44 💎 🗎

8. Tap Change Custom Settings.

A web browser automatically opens and redirects to the *NETGEAR OpenDSN Parental Controls* web page.

- 9. Enter your OpenDSN user name and password in the fields and click the Sign in button.
- **10.** Follow the onscreen instructions to create a bypass account.

Your bypass account is created.

11. (Optional) To return to your NETGEAR Open DNS account, visit https://netgear.opendns.com/.

#### Create a Bypass Account Using the iOS Mobile genie App

- > To create a bypass account using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

- 3. Tap Login.
- 4. At the top of the Login page, tap **Options > At home**.
- **5.** Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap Login.

The app returns to the home page.

7. Tap the Parental Controls button

●●○○○ Sprint 훅	6:43 PM	🕒 🕴 84% 💷 ب
<b>K</b> Back Par	rental Contro	ols 💍
Parental Con	trols	
Filtering level		None >
Change Cust	om Settings	(i) >
OpenDNS Ac	count	tipham
Bypass Acco	unt	>

8. Tap Change Custom Settings.

A web browser automatically opens and redirects to the *NETGEAR OpenDSN Parental Controls* web page.

- 9. Enter your OpenDSN user name and password in the fields and click the Sign in button.
- **10.** Follow the onscreen instructions to create a bypass account.

Your bypass account is created.

11. (Optional) To return to your NETGEAR Open DNS account, visit https://netgear.opendns.com/.

# Set Parental Controls Filtering Levels Locally for Each Device

After you set up parental controls, you can set different filtering levels for each device connected to the router network.

You can also set the Parental Control filtering level remotely using the genie app. For more information, see *Chapter 4, Remotely Access Your Router*.

# Set the Parental Controls Filtering Level Using the Desktop genie App

- > To set the parental controls filtering level for each device locally using the desktop genie app for Windows and Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - 2. Launch the genie app .

The Home page displays.

3. Click the Parental Controls button.

The Status page displays.

4. Make sure that Parental Controls is enabled.

If Parental Controls is not enabled, click the **Enable Live Parental Controls** button.

5. Click the Network Map button.

The Router Login page displays.

6. Enter the router password and click the Login button.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

The Network Map page displays.

		Retrieve wireless password	About _ ×
	TGEAR <sup>®</sup> genie <sup>®</sup>	_	lect Language
Home		(	
Internet			
WiFi Connection	_	genie	
Router Settings		PHAM-T440P	
Network Map	TVs-MacBook		
Parental Controls		Interne	
ReadySHARE			
AirPrint		_	
My Media	android-40915	N 🗖 🔁	
Network Support		iPhone	
	Turn on Access Control		
	Notify me of new devices that connect to the network		

- Retrieve wireless password About \_ × NETGEAR<sup>®</sup> genie<sup>®</sup> Select Language Wireless Network: NETGEAR96 English 🗸 Home 🔊 🔳 🔇 Internet roid-409f57d116b879f1 WiFi Connection Custom Name: android-409f57d116b879f1 Router Settings Type: Android Tablet Connection Type: Wireless Tr IP Address: 192.168.1.6 Parental Controls Status: On Line ReadySHARE Signal Strength: 100% AirPrint Link Rate: 72Mbps What is it? My Media MAC Address: 14:DA:E9:29:0D:38 Network Support Parental Controls Filtering: None Send File 🚽 Modify Close Turn on Access C Notify me of new devices that connect to the network
- 7. Click a device icon.

8. Click the Modify button.

				Retrieve wireless pass	word About _ ×
	TGEAR	-			Select Language
Wireless	S Network: NETGEAR	196			English 🗸
Home		<b>_</b>			
Internet		android-409f57d116i	o879f1		
WiFi Connection		Custom Name:	android-40	9f57d116b879f1	)
Router Settings		Туре:	Android Ta	blet 👻	
Network Map	Tr	Connection Type:	Auto	•	]
Parental Controls		IP Address:		6	amat
ReadySHARE		Status:	On Line		
		Signal Strength:	100%		
AirPrint		Link Rate:	72Mbps	What is it?	
My Media		MAC Address:	14:DA:E9:2	29:0D:38	
Network Support		Parental Controls Filtering:	None	•	]
	Turn on Access C	Send File 🚽	Apply	Close	
	Notify me of new d	evices that connect to the net	work		

- 9. In the Parental Controls Filtering menu, select a filtering level for the device.
- **10.** Click the **Apply** button.

Your settings are saved.

### Set the Parental Control Filtering Level Using the Android Mobile genie App

- > To set the parental controls filtering level for each device locally using an the mobile genie app for Android device:
  - 1. Connect your device to the router's WiFi network.

2. Launch the genie app.

The home page displays.


- 3. Tap the Login button.
- 4. In the Login as menu, tap At home.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap the Login button.

The app returns to the home page.

- 7. Tap the **Parental Controls** button
- 8. Make sure that Parental Controls is enabled.
- 9. If Parental Controls is disabled, tap the Parental Controls check box to enable it.
- 10. Tap the Network Map button

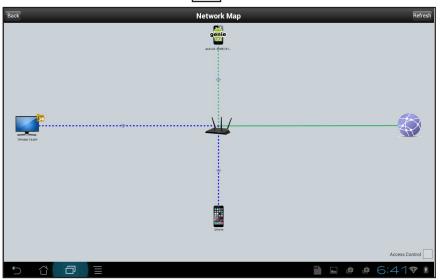

- Network Map genie d android-409f57d116b879f1 Custom Name android-409f57d116b879f1 IP Address 192.168.1.4 Signal Strength 100% Link Rate 72Mbps What is it? MAC Address 14:DA:E9:29:0D:38 Parental Controls Filtering None Modify 🗎 🖬 1:21 📚 💈
- **11.** Tap a device connected to the router.

12. Tap the Modify button.

Back	Network Map	Refresh
	Martial Controls Filtering Apply	
5 Č 🗇 🗏	1:21	😵 🛔

13. Tap the Parental Controls Filtering menu.

Back	Network Ma	p	Refresh
	gonio gonio sure android-409f57d11	166879f1 💥	
	Bypass Login	<u> </u>	
	None	۲	<del>de</del>
	Minimal	6	R
	Low	0	
	Moderate	$\odot$	
	High	6	
	TPHANETELOP		
			Access Control
			1:37 💎 🛯

**14.** Tap a filtering level.

The filtering level is set.

15. Tap the Apply button.

Your settings are saved.

# Set the Parental Control Filtering Level Using the iOS Mobile genie App

- To set the parental controls filtering level for each device locally using the mobile genie app for iOS device:
  - 1. Connect your device to the router's WiFi network.
  - 2. Tap Login.
  - **3.** At the top of the Login page, tap **Options > At home**.
  - 4. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

5. Tap Login.

The app returns to the home page.

- 6. Make sure that Parental Controls is enabled.
- 7. If Parental Controls is disabled, slide the **Parental Controls** slider to the right to enable it.

8. Tap the **Network Map** button .

••०० Sprint ᅙ	2:13 PM	🐵 🕴 100% 💴 <del>/</del>
K Back	Network Ma	p 💍
тірнам-тааор	iPhone R7600	Liternet

●●○○○ Sprint 🗢 1:23	BPM	
<b>K</b> Back Netwo	rk Map 🛛 💍	
iPh	one	
Device:	iPhone	
Туре:	iPhone 6/6 Plus	
IP Address:	192.168.1.3	
Status:	Online	
Signal Strength:		
	72Mbps <u>What is it?</u>	
MAC Address:	F8:27:93:72:63:90	
Parental Controls:	Default level	
Cic	ose	
Transformer TF		

9. Tap a device connected to the router.

- ID. Tap the Parental Controls button.
- **10.** Tap the **Parental Controls** button.

**11.** Tap a filtering level.

The filtering level is set.

### Set Up a Guest WiFi Network Locally

ccess Control

If your router supports a guest WiFi network, you can view and change the settings. You can even allow guest access for a specific length of time. A guest network allows others to use your WiFi router to access the Internet, but not content on other computers or devices on the same network.

You can also set up a guest WiFi network remotely. For more information, see *Chapter 4, Remotely Access Your Router*.

### Set Up a Guest WiFi Network Locally Using the Desktop genie App

- > To set up a guest network locally using the desktop genie app for Windows and Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.

2. Launch the genie app 🐋

The Home page displays.

3. Click the Router Settings button.

The Router Login page displays.

- 4. In the Login as menu, click At home.
- **5.** Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Click the OK button.

The Wireless Settings page displays.

#### 7. At the top, select the Guest Access tab.

			Retrieve wireless password	About _ ×
	TGEAR <sup>®</sup> ge	nie <sup>.</sup>		lect Language
Wireless	s Network: NETGEAR96		E	nglish 🗸
Home	Wireless Settings	ReadySHARE	Guest Access	Traf 4 🕨
Internet	- ALE			
WiFi Connection	2 ABH		Ref	resh
Router Settings				
Network Map				
Parental Controls		Current Setting: Disal	bled	
ReadySHARE	2.4GHz			
AirPrint	2.40			
My Media	5GHz V			
Network Support	20 20			
		Modify Lo	ogout	
	Router Model R7000		Firmware Ver	sion V1.0.5.36

8. Click the Modify button.

					About _ ×
NE	TGEAR <sup>®</sup> gei	nie <sup>.</sup>			Select Language
Wireless	Network: NETGEAR96				English 🗸
Home	Wireless Settings	ReadySHARE		Guest Access	Traf 4 🕨
Internet	ZASH				
WiFi Connection					Refresh
Router Settings		Disable Guest Access			
Network Map	© E	Enable Guest Access			
Parental Controls					
ReadySHARE					
AirPrint					
My Media					
Network Support					
		Apply	Cancel		
	Router Model R7000			Firmwa	re Version V1.0.5.36

9. Select the Enable Guest Access radio button.

NE	TGEAR <sup>®</sup> gei	nie <sup>.</sup>			About
	Network: NETGEAR96	inc.			Select Languag
Home	Wireless Settings	ReadySHARE		Guest Access	Traf 4
Internet	CHP				
WiFi Connection	24str				Refresh
Router Settings		Disable Guest Access			
Network Map		uest Access (SSID):	NETGE	AR-Guest	
Parental Controls		Time Period:	Always	•	
ReadySHARE		Security Options:		2-PSK[AES]	
AirPrint				-PSK[TKIP]+WPA2-PSł	KIAES1
My Media					· · · · · · ·
letwork Support					
		Apply	Canc	el	
	Router Model R7000			Firmward	e Version V1.0.5.3

- **10.** Change the settings as needed to customize your guest network.
- **11.** Click the **Apply** button.
- **12.** When prompted to confirm the change, click the **OK** button.

The router guest network settings are updated and the new guest network settings display. The screen displays a QR code that can be used to connect to the guest network.

# Set Up a Guest WiFi Network Locally Using the Android Mobile genie App

- > To set up a guest WiFi network locally using the mobile genie App for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - **2.** Launch the genie app.

The home page displays.

**3.** Launch the genie app.

The home page displays.

- 4. Tap the Login button.
- 5. In the Login as menu tap At home.
- 6. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

7. Tap the Login button.

The app returns to the home page.

8. Tap the Guest Access button 🔢



9. If the guest access setting is off, tap the **Guest Access** check box.

Back	Guest Settings	Save
Name/SSID		
NETGEAR-Guest		
Time Period		
Always		-
Security		
None		-
5 Å Ø	■ 6:3	33 🕈 🛔

- **10.** Change the settings as needed to customize your guest network.
- **11.** When you finish, tap the **Save** button.

Back	Guest Acces	S Refresh
		2.4GHz 🔻
Guest Access		
Name/SSID NETGEAR-Guest		>
Key/Password None		>
Time Period Always		>
	Scan QR code to C	
5 Č 🗇		🖺 🖬 6:36 🕏 🖡

### Set Up a Guest WiFi Network locally Using the iOS Mobile genie App

- > To set up a guest WiFi network locally using the mobile genie App for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - **2.** Launch the genie app.

The home page displays.

- 3. Tap Login.
- **4.** At the top of the Login page, tap **Options > At home**.

5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap Login.

The app returns to the home page.

7. Tap the Guest Access button



8. If the guest access setting is off, slide the **Guest Access** slider to the right.

●●○○○ Sprint 🗢 6	5:38 PM
Guest Access	Guest Settings Save
Name/SSID	NETGEAR-Guest
Time Period	Always >
Security	None >

9. Change the settings as needed to customize your guest network.

10. When you finish, tap the Save button.

●●●○○ Sprint 奈	6:41 PM	€ 🖇 84% ا	Þ
Kerk Gue	est Access	(	5
		2.40	
Guest Access			)
Name/SSID	NETGEA	R-Guest	>
Key/Password			>
Time Period		Always	>
Scan QF	R code to connec	ot.	

### Connect to a WiFi Network Locally Using a QR Code

The genie app can generate a QR code of your router's WiFi network and guest access. Other phones and tablets can then use their genie app's QR code scanner to scan the QR code and connect to the WiFi network. To use the genie app's QR code scanner, your phone or tablet must include a camera.

You can also view the WiFi network QR code remotely. For more information, see *Chapter 4, Remotely Access Your Router*.

**Note:** You can use the Kindle Fire to generate a QR code, but because it does not include a camera, the Kindle Fire cannot scan QR codes.

### Display the WiFi Network QR Code

You must display the WiFi network QR code on another computer or WiFi device before you can scan the QR code using the mobile genie app that is installed on an Android or iOS device.

### Display the WiFi Network QR Code on the Desktop genie App

- > To display the WiFi network QR code on the desktop genie app for Windows or Mac computer:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - 2. Launch the genie app

The Home page displays.

3. Click the Router Settings button.

The Router Login page displays.

- 4. In the Login as menu, click At home.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Click the OK button.

The WiFi network QR code displays on the Wireless Settings page.

			Retrieve wireless passwo	rd About _ ×
NE.	<b>FGEAR'</b> genie <sup>.</sup>			Select Language
Wireless	Network: NETGEAR96			English 🗸
Home	Wireless Settings ReadySHA	RE	Guest Access	Traf 4 🕨
Internet	2.4Str			
WiFi Connection	2 th			Refresh
Router Settings				
Network Map	Wireless Name (SSIE	): NETGI	EAR96	
Parental Controls				
ReadySHARE	✓ Channel Selectio	n: Auto		
AirPrint	2.46			
My Media	Network Key (Password ອ	): husky	ocean593	
Network Support	06 Modify	Export	Logout	
	Router Model R7000		Firmware	Version V1.0.5.36

- If you set up a guest WiFi network, click the Guest Access tab to display the QR code for the guest WiFi network.
- 8. Scan the WiFi network QR code using the Android or iOS mobile genie app to connect the device to the WiFi network.

For more information, see *Scan a WiFi Network QR Code Using Mobile genie App* on page 86.

### Display the WiFi Network QR Code on the Android Mobile genie App

- > To display the WiFi network QR code on the Android mobile genie app:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

- 3. Tap the Login button.
- 4. In the Login as menu tap At home.
- **5.** Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap the Login button.

The app returns to the home page.

7. Tap the Wireless Settings button



The WiFi network QR code displays on the Settings page.

Back	Settings	Refresh
		2.4GHz 🔻
Signal Strength 100 %		
Link Rate 72 Mbps		
Name/SSID NETGEAR96		>
Channel Auto		>
Key/Password huskyocean593		>
	Scan QR code to connect	
		6:46 💎 🛔

- 8. If you set up a guest WiFi network, tap the **Guest Access** button **()** on the home page to display the QR code for the guest WiFi network.
- **9.** Scan the WiFi network QR code using the Android or iOS mobile genie app to connect the device to the WiFi network.

For more information, see *Scan a WiFi Network QR Code Using Mobile genie App* on page 86.

### Display the WiFi Network QR Code on the iOS Mobile genie App

- > To display the WiFi network QR code on the iOS mobile genie app:
  - 1. Connect your device to the router's WiFi network.
  - **2.** Launch the genie app.

The home page displays.

- 3. Tap Login.
- **4.** At the top of the Login page, tap **Options > At home**.
- **5.** Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.


6. Tap Login.

The app returns to the home page.

7. Tap the Wireless Settings button

**?** 

The WiFi network QR code displays on the Settings page.

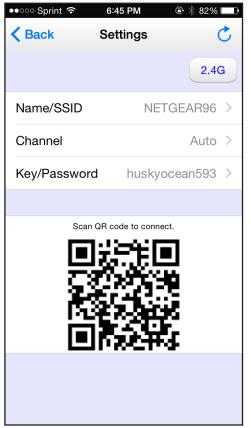

- 8. If you set up a guest WiFi network, tap the **Guest Access** button **1** on the home page to display the QR code for the guest WiFi network.
- 9. Scan the WiFi network QR code using the Android or iOS mobile genie app to connect the device to the WiFi network.

For more information, see *Scan a WiFi Network QR Code Using Mobile genie App* on page 86.

### Scan a WiFi Network QR Code Using Mobile genie App

The Android and iOS mobile genie app includes a QR scanner so that you can scan a WiFi network QR code that displays on another device so that your device can join the WiFi network.

### Scan a WiFi Network QR Code Using the Android Mobile genie App

- To connect to a WiFi network using the QR code scanner on the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - **2.** Launch the genie app.

The home page displays.

- 3. Swipe the home page to the left and tap the **QR Code** button
- 4. When prompted, align the QR code within the frame.

Your phone or tablet scans the QR code for the network.

If you are using an Android device, it connects to the WiFi network automatically.

For other WiFi devices, the password is copied to the clipboard.

**5.** If you are prompted to enter a password to connect to the network, paste the password from the clipboard.

### Scan a WiFi Network QR Code Using the iOS Mobile genie App

- To connect to a WiFi network using the QR code scanner on the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - **2.** Launch the genie app.

The home page displays.

- 3. Swipe the home page to the left and tap the **QR Code** button
- 4. When prompted, align the QR code within the frame.

Your phone or tablet scans the QR code for the network.

If you are using an Android device, it connects to the WiFi network automatically.

For other WiFi devices, the password is copied to the clipboard.

**5.** If you are prompted to enter a password to connect to the network, paste the password from the clipboard.

# **Remotely Access Your Router**

4

This chapter contains the following sections:

- Manage Your Home Network Remotely Using the genie App
- Create a Remote Access Account
- Register Your Router with your Remote Access genie Account
- Remotely Access Your Router Using the genie App
- Remote Access Troubleshooting

**Note:** The router shown in the images in this chapter is the Nighthawk X6 AC3200 Tri-Band WiFi Model R8000 router running firmware version V1.0.2.46.

## Manage Your Home Network Remotely Using the genie App

The genie app allows you to remotely access your router and manage its settings. With remote access enabled, the following router functions can be managed remotely:

- **WiFi settings**. Access you WiFi network name (SSID) and password. Help your family connect to the WiFi home network.
- **Guest access**. Set up guest access remotely. Allow your guests to easily access the WiFi home network while ensuring that shared resources such as your ReadySHARE USB hard disk drive (HDD) are not accessible.
- **Network map**. Access the network map remotely and see what devices are connected to the WiFi home network. You can also allow or block devices from connecting to the WiFi home network.
- Traffic meter. Access your broadband Internet usage data.
- **Parental controls**. Access and change parental controls easily from anywhere.

To use the remote access feature on the genie app, you need the following:

• Latest version of the NETGEAR genie app for your computer or mobile device

If you already installed the genie app, make sure you installed the latest version of the genie app. For more information about how to update the genie app, see *Update the genie App* on page 172.

Remote access is currently supported for the following devices:

- Windows computer
- iOS mobile device
- Android mobile device
- NETGEAR router with the latest firmware

Remote access is only supported for certain NETGEAR routers. To determine if your router supports remote access, see the product data sheet for your router. You can get the product data sheet online at *http://downloadcenter.netgear.com*.

You need to update your router with the latest firmware version in order to use the remote access feature. For more information on how to update your router's firmware, see your router's user manual. You can get the user manual online at *http://downloadcenter.netgear.com*.

• Remote access account

#### > To set up remote access with the Windows desktop, iOS, or Android genie app:

1. Create a remote access account.

For more information about how to create an account, see the following:

- Create a Remote Access Account Using the Windows Desktop genie App on page 90
- Create a Remote Access Account Using the iOS Mobile genie App on page 92
- Create a Remote Access Account Using the Android Mobile genie App on page 91
- 2. Register your router with your remote access genie account.

For more information about how to register your router, see the following support articles:

- Register Your Router Using the Windows Desktop genie App on page 94
- Register Your Router Using the Android Mobile genie App on page 95
- Register Your Router Using the Android Mobile genie App on page 95

You can now remotely access your router from a computer or mobile device.

For more information about how to remotely access your router, see the following support articles:

- Remotely Access Your Router from a Windows Computer on page 100
- Remotely Access Your Router from an iOS Device on page 103
- *Remotely Access Your Router from an Android Mobile Device* on page 102

### Create a Remote Access Account

You must create a remote access account before you can register your router and remotely access your router.

# Create a Remote Access Account Using the Windows Desktop genie App

# To create a remote access account using the desktop genie app for Windows computers:

- 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
- 2. Launch the genie app 🐋

The Home page displays.

3. If a message displays to update the genie app, click the message.

You need the latest version of the genie app to set up remote access. For more information, see *Update the Desktop genie App* on page 172.

4. Select Router Settings.

The Router Login page displays.

5. If you already logged into the router, select the **Wireless Settings** tab and click the **Logout** button.

The Router Login page displays.

6. From the Login as menu, select Remote Access.

NETGE	AR'genie'
Home	English
Internet	
WiFi Connection	Router Login
Router Settings	Login as: Remote access  The mail At home
Network Map	Password:
Parental Controls	Forgot your password?
ReadySHARE	Remember my ID and password     OK Cancel
AirPrint	Don't have an ID? Sign up
My Media	
Network Support	Login is required to manage these router settings: -Wireless Settings -Guest Access -Traffic Meter

7. Click the **Sign up** link.

The New Account screen displays.

8. Complete the fields and click the **Create** button.

A window displays that confirms you successfully created an account and a confirmation message is sent to your email account.

- 9. Click the **OK** button.
- **10.** Open your confirmation email message and click the **Confirm Email** link.

Your email address is confirmed and you are now ready to register your router with your remote genie account. For more information, see *Register Your Router Using the Windows Desktop genie App* on page 94.

# Create a Remote Access Account Using the Android Mobile genie App

- > To create a remote access account using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Check the Google Play Store if an update is available for the mobile genie app.

You need the latest version of the genie app to set up remote access. For more information, see *Update the Android Mobile genie App* on page 173

3. Launch the genie app.

The home page displays.

4. Tap the Login button.

The Login page displays.

5. From the Login as menu, tap **Remote access**.

Back	Login
Login as	
Remote access	<b>▼</b>
Email	
email	
Password	
Forgot your password?	
Remember my ID and password	
Cancel	Login
Don't have an ID? Sign up	
	<b>≥</b> 7:04₹ <b> </b>

6. At the bottom of the Login screen, tap Sign up.

The Sign Up page displays.

7. Complete the fields and tap the **Create** button.

A message displays confirming that your account was successfully created and a confirmation message is sent to your email account.

8. Tap the **OK** button.

Open your confirmation email message and tap the **Confirm Email** link.

Your email address is confirmed and you are now ready to register your router with your remote access genie account. For more information, see *Register Your Router Using the Android Mobile genie App* on page 95.

### Create a Remote Access Account Using the iOS Mobile genie App

- > To create a remote access genie account using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Check the Apple App Store if an update is available for the mobile genie app.

You need the latest version of the genie app to set up remote access. For more information, see *Update the IOS Mobile genie App* on page 174.


3. Launch the genie app.

The home page displays.

4. Tap Login.

The Login page displays.

5. At the top of the page, tap **Options > Remote access**.

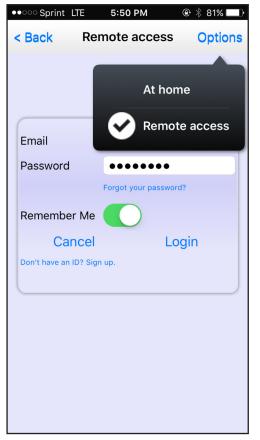

- At the bottom of the Remote access screen, tap Don't have an ID? Sign up. The Sign Up page displays.
- 7. Complete the fields and tap Sign Up.

A message displays confirming that you successfully created an account and a confirmation message is sent to your email account.

- 8. Tap OK.
- 9. Open your confirmation email message and tap the Confirm Email link.

Your email address is confirmed and you are now ready to register your router with your remote access genie account. For more information, see the *Register Your Router Using the Android Mobile genie App* on page 95.

## Register Your Router with your Remote Access genie Account

After you create a remote access account, you need to register your router with your account. Your router must support remote access with the genie app. To determine if your NETGEAR router supports remote access with the genie app, see the product data sheet for your router. You can get the product data sheet online at *http://downloadcenter.netgear.com*.

### **Register Your Router Using the Windows Desktop genie App**

> To register your router with your remote access genie account using the desktop genie app for Windows computers:

- 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
- Launch the genie app

The Home page displays.

3. Select Router Settings.

The Router Login page displays.

4. If you already logged into the router, select the **Wireless Settings** tab and click the **Logout** button.

The Router Login page displays.

5. From the Login as menu, select Remote Access.

NETGE	AR° genie <sup>.</sup>	About _ X Select Language
Home		
Internet		
WiFi Connection	Router Login	
Router Settings	Login as: Remote access	
Network Map	Password:	
Parental Controls	Forgot your password?	
ReadySHARE	Remember my ID and password	
AirPrint	Don't have an ID? Sign up	
My Media		
Network Support	Login is required to manage these router settings: -Wireless Settings -Guest Access -Traffic Meter	

6. Enter your remote access account email and password and click the OK button.

If you do not have a remote access account, see *Create a Remote Access Account Using the Windows Desktop genie App* on page 90.

The Wireless Settings page displays. The genie app detects if the router has been registered with your account. If the router has not been registered, a note displays asking you to register your router.

7. Click the **OK** button to register the router.

Your router is registered.

After the router registration, a note displays informing that the cloud icon by displays on the Router Settings windows indicating that you can remotely manage the router.

8. Click the **OK** button.

You can now access your router anywhere from your computer. For more information, see *Remotely Access Your Router from a Windows Computer* on page 100

### **Register Your Router Using the Android Mobile genie App**

- > To register your router with your remote access account using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - **2.** Launch the genie app.

The home page displays.

3. At the top of the page, tap the **Login** button.

The Login page displays.

4. From the Login as menu, tap Remote access.

Back	Login
Login as	
Remote access	•
Email	
email	
Password	
Forgot your password?	
Remember my ID and password	
Cancel	Login
Don't have an ID? Sign up	
	⊾ 7:04 <del></del> ₹ 🕯

5. Type your remote access account email address and password and tap the Login button.

If you do not have a remote access genie account, see *Create a Remote Access Account Using the Android Mobile genie App* on page 91.

The Remote Devices page displays the router that your device is connected to.

Back	Remote Devices	My Profile
R8000		R8000
Serial:BTA0457W00034		Register

6. Tap the **Register** button.

Your router is registered.

7. On the Registered Devices page, tap the router icon to connect.

The Login page displays.

8. Type the router user name and password and tap the Login button.

The router user name is **admin** and the default password is **password**. Both are case-sensitive.

A note displays informing that a cloud icon displays at the top-right corner of each button on the dashboard indicating that you can remotely manage the router.



9. Tap the **OK** button.

You are can now access your router anywhere from your mobile device. For more information, see *Remotely Access Your Router from an Android Mobile Device* on page 102.

### Register Your Router Using the iOS Mobile genie App

# > To register your router with your remote access genie account using the mobile genie app for iOS:

- 1. Connect your device to the router's WiFi network.
- 2. Launch the genie app.

The genie home page displays.

3. At the top of the page, tap Login.

The Login page displays.

4. At the top of the page, tap **Options > Remote access**.

●●○○ Sprint LTE 5:50 PM
< Back Remote access Options
At home
Email
Password •••••
Forgot your password?
Remember Me
Cancel Login
Don't have an ID? Sign up.

5. From the Remote access screen, type your remote access account email and password and tap Login.

If you do not have a remote access genie account, see *Create a Remote Access Account Using the iOS Mobile genie App* on page 92.

The Remote Devices page displays the router that your device is connected to.

••••• Sprin	nt 🗢 3:13 PM	
K Back	Remote Devices	My Profile
	Nighthawk X6 R80 SN:BTA0457W00034	Register

6. Tap the **Register** button.

Your router is registered.

7. On the Registered Devices page, tap the router icon to connect.

The Remote access page displays.

8. Type the router user name and password and tap Login.

The router user name is **admin** and the default password is **password**. Both are case-sensitive.

A note displays informing you that a cloud icon displays at the top-right corner of each button on the dashboard indicating that you can remotely manage the router.

●●○○○ Sprint ᅙ 11	i:59 AM 🕀 😤 91% 🔲
Logout NETG	EAR'genie <sup>.</sup> (i)
💎 NETGEAR74	Q Search Support
Wireless Settings	Guest Access
Network Map	Parental Controls
Traffic Meter	Router Reboot
	• •

You are can now access your router anywhere from your mobile device. For more information, see *Remotely Access Your Router from an iOS Device* on page 103.

### **Remotely Access Your Router Using the genie App**

After you create a remote access account and register your router with your account, you are now ready to access your router remotely.

### **Remotely Access Your Router from a Windows Computer**

#### > To remotely access your router from your Windows computer:

- 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
- 2. Launch the genie app 🐋

The genie app launches and the Home page displays.

3. Select Router Settings.

The Router Login window displays.

4. From the Login as menu, select **Remote Access**.

NETGE	<b>AR</b> ' genie <sup>.</sup>	Select Language
Home		
Internet		
WiFi Connection	Router Login	
Router Settings	Login as: Remote access	
Network Map	Password: Remote access	
Parental Controls	Forgot your password?	
ReadySHARE	Remember my ID and password	
AirPrint	Don't have an ID? Sign up	
My Media		
Network Support	Login is required to manage these router settings: -Wireless Settings -Guest Access -Traffic Meter	

5. Type your remote access account email address and password and click the **OK** button.

If you do not have a remote access genie account, see *Create a Remote Access Account Using the Windows Desktop genie App* on page 90.

The Wireless Settings window displays. The cloud icon big displays on the window indicating that you can remotely manage the router.

	<b>TGEAR</b> <sup>®</sup> ger			Select Language
Home	Wireless Settings	Guest Access	Traffic Meter	Parent 4
internet	2.4612			$\sim$
WiFi Connection	2 As			Refresh
Router Settings				
Network Map	Wireless Name (SSID): NETGEAR74			
Parental Controls				
	Channel Selection: Auto			
	۲ ۲	Channel Selection: Auto		
	2.4GHz	Channel Selection: Auto		
Ready SHARE	2.46H	Channel Selection: Auto	ird534	
Ready SHARE	V 2.4GH		ird534	

6. At the bottom of the Wireless Settings screen, make sure that the router you want to remotely manage is selected in the Router Model menu.

You are can now access your router anywhere from your computer.

7. Click the **Refresh** button on the Router Settings windows to update the remote access genie management status.

### **Remotely Access Your Router from an Android Mobile Device**

- > To remotely access your router from your Android mobile device:
  - 1. Connect your device to a different WiFi network.
  - **2.** Launch the genie app.

The genie home screen displays.

3. At the top of the screen, tap the **Login** button.

The Login screen displays.

- 4. From the Login as menu, tap **Remote access**.
- 5. Type your remote access account email address and password and tap the Login button.

If you do not have a remote access account, see *Create a Remote Access Account Using the Android Mobile genie App* on page 91.

The Remote Devices screen displays a list of routers registered with your remote access genie account.

6. On the Registered Devices page, tap a register router whose status displays as **Online** to connect to the registered router.

Back	Remote Devices	My Profile
للسطار	R8000	R8000
-	Serial:BTA0457W00034	Online

The Login page displays.

7. Type the router user name and password and tap the Login button.

The router user name is **admin** and the default password is **password**. Both are case-sensitive.

A note displays informing you that the cloud icon displays at the top-right corner of each button on the dashboard indicating that you can remotely manage the router.

8. Tap the OK button.



You can now access your router anywhere from your mobile device.

9. Tap the **Refresh** button at the top of each router settings screen to update the remote access genie management status.

### Remotely Access Your Router from an iOS Device

- > To remotely access your router from your iOS mobile device:
  - 1. Connect your device to a different WiFi network.
  - 2. Launch the genie app.

The genie home screen displays.

3. At the top of the page, tap Login.

The Login page displays.

**4.** At the top of the page, tap **Options > Remote access**.

•••••• Sprint LTE 5:	50 PM
< Back Remot	e access Options
Email	At home Remote access
Password	
	ot your password?
Remember Me	
Cancel	Login
Don't have an ID? Sign up.	

5. Enter your remote access account email and password and tap Login.

If you do not have a remote access genie account, see *Create a Remote Access Account* Using the iOS Mobile genie App on page 92.

The Remote Devices page displays the router that your device is connected to.

6. On the Registered Devices page, tap a registered router whose status displays as **Online** to connect to the registered router.

●oooo Sprir	nt ᅙ 4:04 PM	۹ 🖇 62% 💷
<b>&lt;</b> Back	Remote Device	es My Profile
	<b>R8000</b> SN:BTA0457W00034	Online

The Login page displays.

7. Type the router user name and password and tap Login.

The router user name is **admin** and the default password is **password**. Both are case-sensitive.

A note displays informing you that a cloud icon displays at the top-right corner of each button on the dashboard indicating that you can remotely manage the router.

8. Tap the **OK** button.



You can now access your router anywhere from your mobile device.

**9.** Tap the Refresh icon at the top of each router settings screen to update the remote access genie management status.

### **Remote Access Troubleshooting**

#### I don't see the Remote Access option in the genie app. What should I do?

The Remote Access option displays on the genie Login page.

On the Windows desktop genie app, select **Router Settings** to view the Login screen. If you are already logged in, go to the **Wireless Settings tab** and click the **Logout** button, then **log in** again.

If you still cannot find the Remote Access option, try these troubleshooting tips:

• Make sure that your router supports remote access with the genie app.

Remote access is supported for certain NETGEAR routers. To determine if your NETGEAR router supports remote access with the genie app, see the product data sheet for your router. You can get the product data sheet online at *http://downloadcenter.netgear.com*.

• Make sure that your router is updated to the latest firmware.

For more information about how to update your router's firmware, see your router's user manual. You can get the user manual online at *http://downloadcenter.netgear.com*.

- Make sure you downloaded the latest version of the genie app.
- The first time that you connect the genie app to the router, you must connect the genie app to the router locally (at home), not remotely (away from your router's home network).

# I can log into my remote access genie account, but I don't see my router. What should I do?

Try these troubleshooting tips:

• Make sure that your router supports remote access with the genie app.

Remote access is supported for certain NETGEAR routers. To determine if your NETGEAR router supports remote access with the genie app, see the product data sheet for your router. You can get the product data sheet online at *http://downloadcenter.netgear.com*.

• Make sure that your router is updated to the latest firmware.


For more information on how to update your router's firmware, see your router's user manual. You can get the user manual online at *http://downloadcenter.netgear.com*.

- When you register your router, make sure that your computer or mobile device is connected to the router locally (at home). You can't register the router remotely (away from your router's home network).
- After the router is registered, when you log into your remote access genie account, the router status should display as **Online**:
  - If you are using the Windows desktop genie app, after you log into your account, in the Router Model menu displays the registered router status as **Online**.

NET	GEAR <sup>®</sup> ge	nio		About _ ×	
	Select Language				
Wireless	Network: NETGEAR74			English 🗸	
Home	Wireless Settings	Guest Access	Traffic Meter	Parent 4 ►	
Internet	2.4612				
WiFi Connection	2. As			Refresh	
Router Settings					
Network Map	Wireless Name (SSID): NETGEAR74				
Parental Controls					
ReadySHARE	Channel Selection: Auto				
AirPrint	7				
My Media	Network Key (Password): royalbird534				
Network Support	5				
		Modify Unregister	Logout		
$\langle$	Router Model R8000(BTA	0457W00034) - Online 🔻	Set alias Firmy	are Version V1.0.2.44	

- If you are using the iOS or Android mobile genie app, after you log into your account, the Remote Devices page displays the registered router status as **Online**.

	Back	Remote Devices	My Profile
(	R8000		R8000
$\langle$	Serial:BTA0457W00034		Online

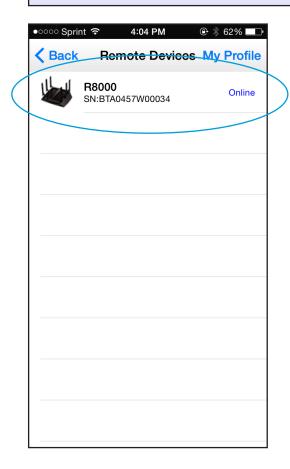

# **Share Files**

This chapter contains the following sections:

- Access Files on a USB Storage Device Attached to the Router
- Send Files With Turbo Transfer
- Enable or Disable the Turbo Transfer Power Saving Feature
- View Turbo Transfer History

# Access Files on a USB Storage Device Attached to the Router

You can access files stored on a USB storage device that is connected to your router's USB port or eSATA port. Not all router models include these ports.

#### Access Files on a USB Storage Device Using the Desktop genie App

> To access files on a USB storage device using the mobile genie app for Windows and Mac computers:

- 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
- 2. Launch the genie app

The Home page displays.

3. Click the ReadySHARE button.

The Router Login page displays.

**4.** Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

5. Click the **OK** button.

The ReadySHARE page displays.

6. Select the **Basic** radio button and click the **Continue** button.

		Retrieve wireless password	About _ ×
	TGEAR <sup>®</sup> genie <sup>®</sup>	_	elect Language
Home	ReadySHARE		
Internet			
WiFi Connection	Basic		
Router Settings	Network/Device Name: \\192.168.1.1		
Network Map			
Parental Controls ReadySHARE			
AirPrint			
My Media		<sup>44</sup> 🗖	
Network Support			Back
	Router Model R7000	Firmware Ve	rsion V1.0.5.36

7. Click the network device name link.

A window displays the files and folders on the USB storage device.

# Access Files on a USB Storage Device Using the Android Mobile genie App

- > To access files on a USB storage device attached to the router using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

3. Tap the ReadySHARE button



4. At the bottom of the page, tap the **ReadySHARE** button.

'		501101			.ge, u		
	Home		View	ReadySHARE	<b>S</b> Refresh	Qp	tions .
	USB_Storage						
	USB_Storage						
		Lecal			ę	RoselySHARE	
	5 í	ð	Ξ			3:4	0 😤 🛔

5. Tap a USB storage device to access it.

# Access Files on a USB Storage Device Using the iOS Mobile genie App

- > To access files on a USB storage device attached to the router using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - **2.** Launch the genie app.

3. Tap the ReadySHARE button

●●○○○ S	orint ᅙ 6:20	PM 🕀 🔅	\$ 100% <b>•</b> +
< Bac	k Lo	cal	Ŵ
	Photo Librar	у	>
	Received		>
	Sent		>
	Video Librar	/	>
	history.plist		
	Local	Ready	SHARE

**4.** At the bottom of the page, tap the **ReadySHARE** button.

••••• Sprint 穼 6:2	20 PM
<b>K</b> Back Ready	SHARE
USB_Storage	>
Local	ReadySHARE

5. Tap a USB storage device to access it.

# Send Files With Turbo Transfer

If at least two computers or devices are connected to your network, you can use the network map to copy files from one device to another.

## Send Files With Turbo Transfer Using the Desktop genie App

To send files with Turbo Transfer using the desktop genie app for Windows or Mac computers:

- 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
- 2. Launch the genie app 🐋

The Home page displays.

 Click the Router Settings button. The Router Login page displays.

- 4. In the Login as menu, click At home.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Click the OK button.

The Wireless Settings page displays.

7. Click the Network Map button.

		Retrieve wireless password About	×
	TGEAR <sup>®</sup> genie <sup>®</sup> 8 Network: NETGEAR96	Select Langua	age V
Home		<b>E (</b>	\$
WiFi Connection	Router Login		
Router Settings	User Name: admin		
Parental Controls ReadySHARE	Password: •••••••	ord")	
AirPrint My Media	Remember password		
Network Support	Login C	ancel	
	Notify me of new devices that connect to the network		


8. Enter the router password and click the **Login** button.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

	TGEAR <sup>®</sup> genie <sup>®</sup> 5 Network: NETGEAR96	Retrieve wireless password About _ X Select Language English	
Internet WiFi Connection Router Settings		genie	Your computer
Network Map Parental Controls ReadySHARE AirPrint	TVs-MacBook	e utime	Turbo transfer icon
My Media Network Support	android-409f5	Phone	Destination device
	$\hfill\square$ Notify me of new devices that connect to the network		

9. Right-click the destination device.

A Turbo Transfer icon displays next to the destination device. Only the destination device with the Turbo Transfer icon can receive files by Turbo Transfer.

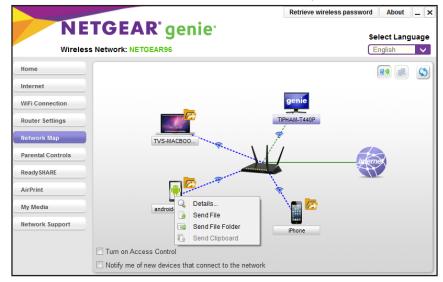

#### 10. Select Send File or Send File Folder.

Some destination devices might not be able to receive folders.

**11.** Select the file or folder that you want to send.

Messages displays on the destination device about the file.

**12.** Read the messages that display on the destination device for information on how to save the file.

**Note:** If the destination device does not receive the file or folder, restart the NETGEAR genie app on both devices and try again.

#### Send Files With Turbo Transfer Using the Android Mobile genie App

- > To send files with Turbo Transfer using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

3. Swipe the home page to the left and tap the **Turbo Transfer** button



A list of destination devices on your network displays.

4. Tap a destination device to select it.

If you do not see any devices on the page, you must disable power saving mode.

To disable power saving mode:

a. Tap the Settings button.

The power saving mode window displays.

- b. Clear the Enable Power Saving Mode check box and tap the Close button.
- **5.** When prompted, select a file type.

You can select File, Music, Video, Photo, or History.

A list of files displays.

6. Select a file and tap the **OK** button.

The genie app asks you to verify that you want to send the files you selected.

7. Tap the **OK** button.

Messages displays on the destination device about the file.

8. Read the messages that display on the destination device for information about how to save the file.

**Note:** If the destination device does not receive the file or folder, restart the NETGEAR genie app on both devices and try again.

## Send Files With Turbo Transfer Using the iOS Mobile genie App

- > To send files with Turbo Transfer using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

3. Swipe the home page to the left and tap the **Turbo Transfer** button

A list of destination devices on your network displays.



4. Tap a destination device to select it.

If you do not see any devices on the page, you must disable power saving mode.

To disable power saving mode:

a. Tap Settings.

The power saving mode window displays.

- b. Clear the Enable Power Saving Mode check box and tap the Close button.
- 5. When prompted, select a file type.

You can select Photo, Video, or History record.

A list of files displays.

If no files display, you must set your iOS privacy settings to allow the genie app to access your files.

6. Select a file and tap **Done**.

The genie app asks you to verify if you want to send the files you selected.

7. Tap the **Send** button.

Messages display on the destination device about the file.

8. Read the messages that display on the destination device for information about how to save the file.

**Note:** If the destination device does not receive the file or folder, restart the NETGEAR genie app on both devices and try again.

# Enable or Disable the Turbo Transfer Power Saving Feature

To conserve battery power for your Android or iOS device, the genie app comes with a Turbo Transfer power saving feature that is automatically enabled. With the power saving feature enabled, other genie devices on your network can only transfer files to this device or access media files on this device when you navigate to the Turbo Transfer or My Media page.

# Enable or Disable Turbo Transfer Power Saving On an Android Device


- To enable or disable the turbo transfer power saving feature using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

3. Swipe the home page to the left and tap the **Turbo Transfer** button **U** 

A list of devices on your network displays.

4. Tap the Settings button.

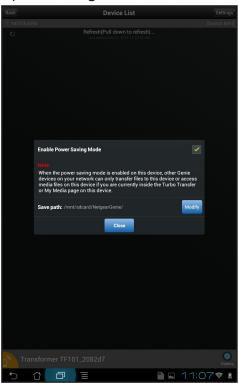

- 5. To enable power saving mode, tap the Enable Power Saving Mode check box.
- 6. To disable power saving mode, clear the Enable Power Saving Mode check box.
- 7. Tap the Close button.

# Enable or Disable Turbo Transfer Power Saving On an iOS Device

- > To enable or disable the turbo transfer power saving feature using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

3. Swipe the home page to the left and tap the **Turbo Transfer** button

A list of devices on your network displays.

4. Tap Settings.



- 5. To enable power saving mode, tap the **Enable Power Saving Mode** check box.
- 6. To disable power saving mode, clear the Enable Power Saving Mode check box.
- 7. Tap the Close button.

# **View Turbo Transfer History**

You can view the turbo transfer sent and receive history on your Android or iOS device.

#### View Turbo Transfer History Using the Mobile genie App for Android

- > To view the turbo transfer history using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - **2.** Launch the genie app.

The home page displays.

3. Swipe the home page to the left and tap the **Turbo Transfer** button

 Transformer TF101\_2082d7

 Transformer TF101\_2082d7

A list of destination devices on your network displays.

#### 4. Tap History.



- 5. To view a list of files received by the Android device, tap the Received files button.
- 6. To view a list of files sent by the Android device, tap the Sent files button.
- 7. To share a file, select the arrow next to the file, tap **Share**, and when prompted, tap an app that you want the share the file with.
- 8. To delete a file, select the arrow next to the file and tap **Delete**.
- 9. To delete al the files in the list, tap the Clear All button.


#### View Turbo Transfer History Using Mobile genie App for iOS

- > To view the turbo transfer history using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

3. Swipe the home page to the left and tap the **Turbo Transfer** button **u** 

A list of destination devices on your network displays.

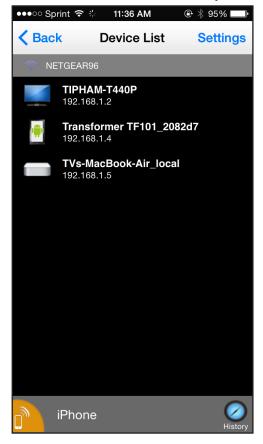

4. Tap History.

A list of files sent or received by the iOS device displays.

••000 S	print 穼 ⊹ 1:32 PM 🛞 🖗 🖇 63	3% 💷 ·
	vice List History record	Edit
Sent	files	
1	201509231209520.PNG 2015-09-23 12:10:16	>
	201509230118110.PNG 2015-09-23 01:18:38	>
Rece	eived files	
<b>.</b>	21182283198_40b84c85e 2015-09-23 11:32:20	· >
·		
·		
	Clear all	

- 5. To delete a file, tap **Edit** and tap the delete icon next to the file that you want to delete.
- 6. To delete all the files, tap the **Clear all** button.

# 6

# Use MyMedia to Play and Share Media Files

You can use the MyMedia<sup>®</sup> feature on the genie app to play media stored on computer and WiFi devices that are connected to your NETGEAR router's network.

This chapter contains the following sections:

- Use Your Device to Play Media From Your Home Network
- Share Media With Chromecast Using the Mobile genie App
- MyMedia Views
- Change the MyMedia Player
- Restart MyMedia Service on Mobile Devices
- Refresh the MyMedia Source Folders on Mobile Devices
- Allow Devices on the Network to Access Files
- Allow Media Files to Play on Your Device
- Change the Media File Settings Using the Desktop genie App

# Use Your Device to Play Media From Your Home Network

Use the genie app to play media files stored on devices that are connected to your router's home network.

For you to play media from your home network on a device, the device must support the DLNA Player profile. Game consoles (like Xbox 360 or PS3) and DVRs do not support the DLNA Player profile. For this reason, they do not display as players in MyMedia.

MyMedia finds only the media types supported by the player. For example, an iPad does not play Adobe Flash files because this format is not supported.


If you want to access media files stored on a USB storage device connected to the router, you must set up the router as a DLNA media server. For more information, see your router's user manual. Your router's user manual is available online at <a href="http://downloadcenter.netgear.com">http://downloadcenter.netgear.com</a>.

#### Play Media From Your Home Network on a Computer

- To play media from your home network on the desktop genie app for Windows or Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - Launch the genie app Y.

The Home page displays.

3. Select the My Media button.

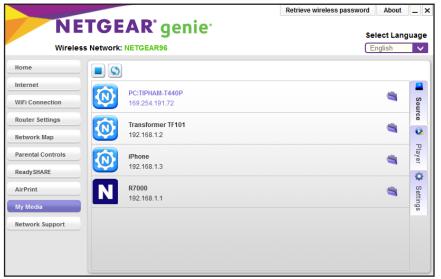

4. Select the **Player** tab.

The Player page displays.

5. Select a device.

6. Select the **Source** tab.

The Source page displays.


- 7. Double-click a device.
- Double-click a folder and select a media file within the folder.
   The media plays on your device.

#### Play Media From Your Home Network on an Android Device

- > To play media with the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

3. Tap the My Media button

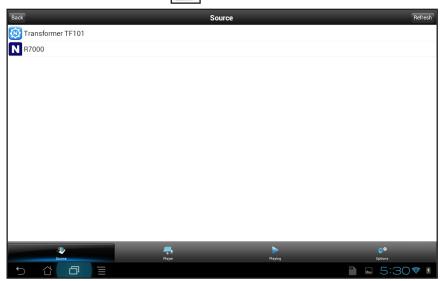

4. At the bottom, tap Player.

The Player page displays.

- 5. Tap a device.
- 6. At the bottom, tap **Source**. The Source page displays
- 7. Tap a device.

The media folders on the device display.

Tap a folder and tap a media file within the folder.
 The media file plays on the selected player.

9. To view the media file that is playing, tap **Playing**. The Playing page displays.

## Play Media on an iOS Device

- > To play media with the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

3. Tap the My Media button ●●○○○ Sprint 🗢 11:54 AM 🕀 🕴 87% 🗖 Source N iPhone > R7000 > Transformer TF101 > PC:TIPHAM-T440P > 40 Ģ. Я ► Play Option Sour Playing 4. At the bottom, tap Player.

The Player page displays.

- 5. Tap a device.
- 6. At the bottom, tap **Source**. The Source page displays.
- 7. Tap a device.

The media folders on the device displays.

8. Tap a folder and tap a media file within the folder.

The media file plays on the selected player.

 To view the media file that is playing, at the bottom, tap Playing. The Playing page displays.

# Share Media With Chromecast Using the Mobile genie App


Chromecast is a media streaming device that plugs into the HDMI port on your TV. If you use Chromecast, the mobile genie app lets you use Chromecast to play media from devices on your network on your TV.

#### Share Media With Chromecast Using an Android Device

- > To share media on the network with Chromecast using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Make sure that your Chromecast is connected to your router's network.
  - **3.** Launch the genie app.

The home page displays.

4. Tap the My Media button

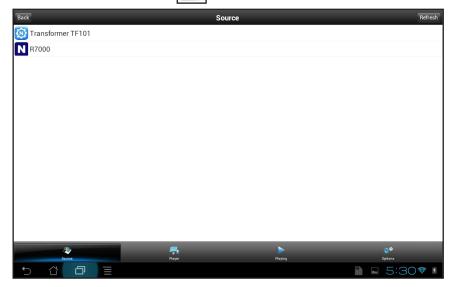

5. At the bottom, tap **Options**.

Back	Options		
Restart media service			Refresh
Refresh source folder			Refresh
Share files in network			
Allow play in network			
External player			>
Enable Chromecast Support			
Note: Restart media service when the wireless network setting is changed. Tap Refresh source folder if there is any change in media folder(s). Share file in network to allow people access to files on this device over Allow people to use this device to play files over the network.	he network.		
Source Player	Playin	9	Options
5 G 🗇 🗏			🖬 🖻 🖞 7:28 🕫 👔

- 6. Tap the Enable Chromecast Support check box.
- 7. At the bottom, tap Player.

Back		Player		Refresh
🔯 Transformer TF101				
🔯 iPhone				
🍬 Chromecast				
2			0 <sup>0</sup>	
Source	Player	Playing	Options	
			🗋 🖬 🖻 🏚 7:28	😵 🧧

- 8. Tap Chromecast.
- 9. Tap Source.

The Source page displays.

10. Tap a device.

The media folders on the device displays.

**11.** Tap a folder and tap a media file within the folder.

The media files play on your TV through Chromecast.

12. Use the MyMedia Play and Control modes to control how you play the media.

## Share Media With Chromecast Using an iOS Device

- > To share media on the network with Chromecast using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Make sure that your Chromecast is connected to your router's network.
  - **3.** Launch the genie app.

The home page displays.

4. Tap the My Media button ●●○○○ Sprint 훅 11:54 AM 🕒 🕴 87% 🗖 Source iPhone > R7000 > > Transformer TF101 PC:TIPHAM-T440P > 40 R Ģ. ► Player Plavin Optio

#### 5. At the bottom, tap **Player**.

	nt	-	∦ 100% 💷•
Back	Pla	ayer	C
	iPhone		
	Chromec	ast	
	- <b>-</b>		\$ <sup>0</sup>
Source	Player	Playing	Options

- 6. Tap Chromecast.
- 7. Tap Source.

The Source page displays.

8. Tap a device.

The media folders on the device displays.

9. Tap a folder and tap a media file within the folder.

The media files play on your TV through Chromecast.

**10.** Use the MyMedia Play and Control modes to control how you play the media.

# **MyMedia Views**

For the mobile genie app, the MyMedia view that displays depends on which of the following items you select:

- Source. View a list of devices on your network that are sharing media files.
- **Player**. View a list of devices that can play media files over the network.
- **Playing**. View and control media that is playing on the selected player.

• **Option**. View the MyMedia settings.

For the desktop genie app, the MyMedia view that displays depends on which of the following taps you select:

- Source. View a list of devices on your network that are sharing media files.
- Player. View a list of devices that can play media files over the network.
- Settings. View the MyMedia settings.

# Change the MyMedia Player


You can change the device that the media plays on.

#### Change the MyMedia Player on a Computer

- > To change the player device using the desktop genie app Windows or Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - Launch the genie app

The Home page displays.

3. Select the My Media button.

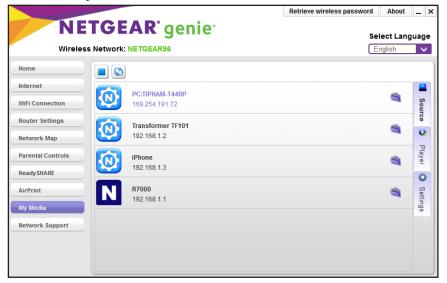

4. Select the Player tab.

The Player page displays.

- 5. Select a device.
- 6. If the device you want to select does not display, click the **Refresh** button to refresh the page.

# Change the MyMedia Player on an Android Device

- > To change the player device using the mobile genie app for Android device:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

3. Tap the My Media button

Back	Source	Refresh
🞯 Transformer TF101 N R7000		
<b>N</b> R7000		
Source Player	Playing	Options
Source Prayer	· Pagying	uppons ■ 5:30 ♥ ♪

4. At the bottom, tap Player.

The Player page displays.

- 5. Tap a device.
- 6. If the device you want to select does not display, tap the **Refresh** button to refresh the page.

## Change the MyMedia Player on an iOS Device

- > To change the player device using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

3. Tap the My Media button **[**\_\_\_\_\_].



- **4.** At the bottom, tap **Player**. The Player page displays.
- 5. Tap a device.
- 6. If the device you want to select does not display, tap the **Refresh** icon to refresh the page.

# **Restart MyMedia Service on Mobile Devices**

On the mobile genie app, you can restart the MyMedia service if the WiFi settings change.

#### **Restart MyMedia Service Using an Android Device**

- > To restart media service using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

3. Tap the My Media button

Back	Sou	rce	Refresh
🔞 Transformer TF101			
<b>N</b> R7000			
Source Source	Flayer	Playing	Options
	гарб	raşıng	uppons ■ 5:30 ♥ ∦

**4.** At the bottom, tap **Options**.

Back	Options	:	
Restart media service			Refresh
Refresh source folder			Refresh
Share files in network			
Allow play in network			
External player			>
Enable Chromecast Support			
Note: Restart media service when the wireless network set Tap Refresh source folder if there is any change in n Share file in network to allow people access to files Allow people to use this device to play files over the	nedia folder(s). on this device over the network.		
No. Source	Flayer	Playing	ÇÇ <sup>Ç</sup> Options
5 6 0 1			6:25 line

**5.** In the Restart media service section, tap the **Refresh** button. The media service restarts.


## **Restart MyMedia Service Using an iOS Device**

- > To restart media service using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

3. Tap the My Media button



#### 4. At the bottom, tap **Options**.

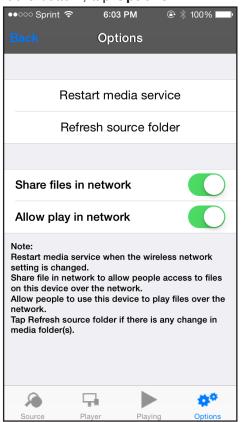

5. Tap Restart media service.

The media service restarts.

# **Refresh the MyMedia Source Folders on Mobile Devices**

On the mobile genie app, you can refresh the MyMedia source folders if any changes are made to the media folders.

#### Refresh the MyMedia Source Folders Using an Android Device

- > To refresh the source folder using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - **2.** Launch the genie app.

3. Tap the My Media button

Back	Sou	rce	Refresh
🔯 Transformer TF101			
<b>N</b> R7000			
2	Player	>	¢°
	Player	Playing	Options

4. At the bottom, tap **Options**.

Back Options	3	
Restart media service		Refresh
Refresh source folder		Refresh
Share files in network		
Allow play in network		
External player		>
Enable Chromecast Support		
Note: Restart media service when the wireless network setting is changed. Tap Refresh source folder if there is any change in media folder(s). Share file in network to allow people access to files on this device over the network. Allow people to use this device to play files over the network.		
ې چې	► \$°	
Source Player	PlayingOptions	<del>?</del> 1

 In the Refresh source folder section, tap the **Refresh** button. The source folders refreshes.


## Refresh the MyMedia Source Folder Using an iOS Device

- > To refresh the source folder using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

3. Tap the My Media button



4. At the bottom, tap **Options**.

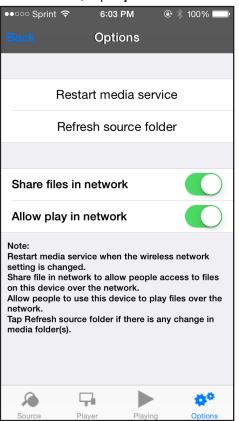

5. Tap Refresh source folder.

The source folder refreshes.

## Allow Devices on the Network to Access Files

You can allow devices on the network to access files that are on your device.

#### Allow Devices to Access Files on a Computer

- > To allow devices to access files on your Windows or Mac computer using the desktop genie app:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - Launch the genie app

		Retrieve wireless password About	_ :	
NETGEAR <sup>®</sup> genie <sup>®</sup> Wireless Network: NETGEAR96		Select Language English		
Home				
Internet				
WiFi Connection	PC:TIPHAM-T440P 169.254.191.72		Source	
Router Settings	Transformer TF101			
Network Map	192.168.1.2		0	
Parental Controls	iPhone		Player	
ReadySHARE	192.168.1.3	-	0	
AirPrint	<b>N R7000</b> 192.168.1.1		Settings	
My Media			s6u	
Network Support				

3. Select the My Media button.

4. Select the Settings tab.

			Retrieve wireless passwor	d About	_ ×
NE	TGEAI	<b>R</b> °genie <sup>.</sup>		Select Lang	juage
Wireless	Network: NETG	EAR96	(	English	$\sim$
Home					
Internet	Service	My Media Server Name: PC:TIPHAM-1	440P	OK	
WiFi Connection	Video	Share files in network			Source
Router Settings		Share file in network to allow people acc	ess to files on this device over	the network.	
Network Map	📢 Audio	Allow play in network Allow people to use this device to play fil	es over the network		•
Parental Controls	💌 Picture				Player
ReadySHARE					•
AirPrint					Set
My Media					Settings
Network Support					

5. Select the Share files in network check box.

Devices in the network can now access files on this computer.

#### Allow Devices to Access Files on an Android Device

- > To allow devices to access files on your Android device using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

**3.** Launch the genie app.

The home page displays.

4. Tap the My Media button



5. At the bottom, tap **Options**.

Back	Option	IS	
Restart media service			Refresh
Refresh source folder			Refresh
Share files in network			
Allow play in network			
External player			>
Enable Chromecast Support			
Note: Restart media service when the wireless network setting Tap Refresh source folder if there is any change in medi Share file in network to allow people access to files on th Allow people to use this device to play files over the netw	a folder(s). his device over the network.		
No. Source	Player	Playing	¢¢. Options
5 샵 @ =			6:25

6. Tap the Share files in the network check box.

Devices in the network can now access files on this device.

#### Allow Devices to Access Files on an iOS Device


- > To allow devices on the network to access files on the iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

3. Tap the My Media button



4. At the bottom, tap **Options**.

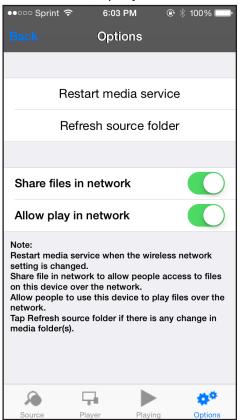

5. Slide the **Share files in the network** slider to the right.

Devices in the network can now access files on this device.

#### Allow Media Files to Play on Your Device

You can allow devices on the network to play media files on your device.

For example, to use your smartphone or iPad to view photos on a computer or device in your network, leave the Allow play in network feature set to On. This setting controls whether the photos from other devices can be viewed on this smartphone or iPad.

#### Allow Media Files to Play on Your Computer

- > To allow devices on the network to play media files on the desktop genie app for Windows or Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - Launch the genie app

The Home page displays.

		Retrieve wireless password About	_ :
NETGEAR <sup>®</sup> genie <sup>®</sup> Wireless Network: NETGEAR96		Select Lan English	guage
Home			
Internet			
WiFi Connection	PC:TIPHAM-T440P 169.254.191.72		Source
Router Settings	Transformer TF101		
Network Map	192.168.1.2		0
Parental Controls	iPhone		Player
ReadySHARE	192.168.1.3	-	0
AirPrint	<b>R7000</b> 192.168.1.1		Settings
My Media			sbu
Network Support			

3. Select the My Media button.

4. Select the Settings tab.

			Retrieve wireless password	d About	_ ×
NE.	NETGEAR <sup>®</sup> genie <sup>®</sup> Select Languag				
Wireless	Network: NETG	EAR96	(	English	$\sim$
Home					
Internet	Service	My Media Server Name: PC:TIPHAM-T	440P	ОК	
WiFi Connection	Video	Share files in network			Source
Router Settings		Share file in network to allow people acce	ss to files on this device over t	the network.	
Network Map	📢 Audio	Allow play in network Allow people to use this device to play file	es over the network		•
Parental Controls	💌 Picture	raiow people to doe this denies to play inc	S over the network.		Player
ReadySHARE					0
AirPrint					Set
My Media					Settings
Network Support					

5. In the Service page, select the Allow play in network check box.

Devices on the network can now play media files using your computer.

#### Allow Media Files to Play on Your Android Device

- > To allow devices on the network to play media files on the mobile genie app on your Android device:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

3. Tap the My Media button

Back	Sou	rce	Refresh
🔯 Transformer TF101			
<b>N</b> R7000			
2	Player	>	¢°
	Player	Playing	options

4. At the bottom, tap **Options**.

Back	Option	s	
Restart media service			Refresh
Refresh source folder			Refresh
Share files in network			
Allow play in network			
External player			>
Enable Chromecast Support			
Note: Restart media service when the wireless network setting Tap Refresh source folder if there is any change in media Share file in network to allow people access to files on th Allow people to use this device to play files over the network	folder(s). s device over the network.		
20 Sara		Piaying	<b>بې و</b> Options
5 Č 🗗 🗏			🖺 🖬 6:25 📚 👔

5. Tap the Allow play in network check box.

Devices on the network can now play media files using your Android device.

#### Allow Media Files to Play on Your iOS Device


- To allow devices on the network to play media files on the mobile genie app on your iOS device:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

3. Tap the My Media button



4. At the bottom, tap **Options**.

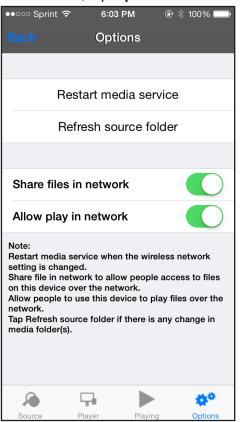

5. Slide the Allow play in the network slider to the right.

Devices on the network can now play media files using your iOS device.

#### Change the Media File Settings Using the Desktop genie App

You can change the following media file settings using the desktop genie app:

- Video, audio, and image source folders on your computer that other devices can access.
- The folder that files download to on your computer.
- The amount of time images displays on your computer.

#### Change the Video File Settings Using the Desktop genie App

You can change the default video folder from which other devices can access video files and change the folder on your computer to which video files are download to.

## > To change the video file settings on your Windows or Mac computer using the desktop genie app:

- 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
- 2. Launch the genie app 👾.

The Home page displays.

3. Select the My Media button.

		Retrieve wireless password	About _
	GEAR <sup>®</sup> genie <sup>®</sup>	Selec Engl	ot Language
Home			
Internet	PC:TIPHAM-T440P		
WiFi Connection	169.254.191.72		Source
Router Settings	Transformer TF101		100
Network Map	192.168.1.2		<b></b>
Parental Controls	iPhone		Player
ReadySHARE	192.168.1.3		0
AirPrint	R7000		Settings
My Media	192.108.1.1		ings
Network Support			
L			

4. Select the Settings tab.

			Retrieve wireless password About	t _ ×
	NETGEAR genie     Select Langua       Wireless Network: NETGEAR96     English			
Home				
Internet	Service	My Media Server Name: PC:TIPHAM-	1440P OK	
WiFi Connection	Video	Share files in network		Source
Router Settings			ess to files on this device over the networ	
Network Map	📢 Audio	Allow play in network Allow people to use this device to play fi	las quas the naturals	•
Parental Controls	💌 Picture	Allow people to use this device to play it	les over the network.	Player
ReadySHARE				0
AirPrint				-
My Media				Settings
Network Support				

5. On the left, select Video.

			Retrieve wireless password Al	bout _ ×
NETGEAR <sup>®</sup> genie <sup>®</sup> Wireless Network: NETGEAR96		Select Englis	Language	
Home				
Internet WiFi Connection	Service	Default Video Folder: Default Download Folder:	C:/Users/tipham/Videos C:/Users/tipham/Videos	Source
Router Settings Network Map Parental Controls	<b>╡</b> II Audio			e 🔇 Player
ReadySHARE AirPrint My Media				Settings
Network Support				

- 6. To change the default video folder from which other devices can access video files, in the Default Video Folder section, click the button to change the path.
- **7.** To change the folder on your computer to which video files are download, in the Default Download Folder section, click the button to change the path.

#### Change the Audio File Settings on the Using the Desktop genie App

You can change the default audio folder from which other devices can access video files from and change the folder on your computer to which audio files are download to.

- > To change the audio file settings on your Windows or Mac computer using the desktop genie app:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - 2. Launch the genie app 🤟.

The Home page displays.

- Retrieve wireless password About 🔔 🗙 **NETGEAR**<sup>®</sup> genie<sup>®</sup> Select Language Wireless Network: NETGEAR96 English 🗸 Home Internet PC:TIPHAM-T440P 169.254.191.72 Source WiFi Connection Router Settings Transformer TF101 N 0 192.168.1.2 Network Map Player Parental Controls iPhone 192.168.1.3 ReadySHARE Q R7000 Ν Settings AirPrint 192.168.1.1 My Media Network Support
- 3. Select the My Media button.

4. Select the Settings tab.

			Retrieve wireless password About	_ ×
		R'genie <sup>.</sup>	Select Lang	guage
Home				
Internet WiFi Connection	Service	My Media Server Name: PC:TIPHAM-T4	40Р ОК	Source
Router Settings Network Map	Video	Share file in network to allow people access		0
Parental Controls Ready SHARE	Picture	Allow people to use this device to play file	s over the network.	Player
AirPrint My Media				Settings
Network Support				sf

-

Source

0

Player

Ô Settings

- Retrieve wireless password About \_ × **NETGEAR**<sup>®</sup> genie<sup>®</sup> Select Language Wireless Network: NETGEAR96 English 🗸 Home Internet Service Default Music Folder: C:/Users/tipham/Music WiFi Connection Default Download Folder C:/Users/tipham/Music 📑 Video **Router Settings** Audio Network Map Picture Parental Controls ReadySHARE AirPrint My Media Network Support
- 5. On the left, select Audio.

- 6. To change the default music folder from which other devices can access audio files, in the Default Music Folder section, click the button to change the path.
- 7. To change the folder on your computer to which audio files are download, in the Default Download Folder section, click the button to change the path.

#### Change the Image File Settings Using the Desktop genie App

You can change the default video folder from which other devices can access image files and change the folder on your computer to which image files are download.

You can also change the amount of time images display in the desktop genie app.

- To change the image file settings on your Windows or Mac computer using the  $\geq$ desktop genie app:
  - Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - 2. Launch the genie app 👾.

The Home page displays.

- Retrieve wireless password About 🔔 🗙 **NETGEAR**<sup>®</sup> genie<sup>®</sup> Select Language Wireless Network: NETGEAR96 English 🗸 Home Internet PC:TIPHAM-T440P 169.254.191.72 Source WiFi Connection Router Settings Transformer TF101 N 0 192.168.1.2 Network Map Player Parental Controls iPhone 192.168.1.3 ReadySHARE Q R7000 Ν Settings AirPrint 192.168.1.1 My Media Network Support
- 3. Select the My Media button.

4. Select the Settings tab.

			Retrieve wireless password About	_ ×
			Select Lan	guage
Home				
Internet WiFi Connection Router Settings Network Map Parental Controls	Service Video I Audio Picture	My Media Server Name: PC:TIPHAM-T4 Share files in network Share file in network to allow people access Allow play in network Allow people to use this device to play file	as to files on this device over the network.	Source Source
ReadySHARE AirPrint My Media Network Support				Settings

5. On the left, select **Picture**.

			Retrieve wireless password	About _ ×
NETGEAR <sup>®</sup> genie <sup>®</sup> Wireless Network: NETGEAR96		_	ect Language	
Home				
Internet	Service	Amount of time to display each image	3 sec	3 🌲 🚨
WiFi Connection		Default Picture Folder:	C:/Users/tipham/Picture	
Router Settings	Video	Default Download Folder:	C:/Users/tipham/Picture	s
Network Map	📢 Audio			•
Parental Controls	Picture			Player
ReadySHARE				Q
AirPrint				-
My Media				Settings
Network Support				

- 6. To change the amount of time images display in the desktop genie app, select a value from the menu.
- **7.** To change the default image folder from which other devices can access music files, in the Default Picture Folder section, click the button to change the path.

To change the folder on your computer to which image files are download, in the Default Download Folder section, click the button to change the path.

## Set Up an AirPrint Printer Using the genie App

The NETGEAR genie app AirPrint feature turns your printer into an AirPrint printer so that your iOS devices can use printers in the same network. For more information about AirPrint, see the Apple support website.

This chapter contains the following sections:

- Set Up an AirPrint Printer Using the Desktop genie App
- Print from an iOS Device Using AirPrint

#### Set Up an AirPrint Printer Using the Desktop genie App

Use AirPrint to print from your iOS device, such as an iPhone or iPad, to an AirPrint printer. To use AirPrint, you must first convert your printer into an AirPrint printer using the desktop genie app.

**Note:** The iOS images used in this section were taken with an iPhone 5S running iOS 8.4.

## To set up an AirPrint printer using the desktop genie app for Windows and Mac computers:

- 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
- 2. Connect your printer to the router's network using one of the following methods:
  - Connect your printer to a USB port on the computer with a USB cable.
  - Connect your printer to a USB port on the router with a USB cable.

For you use this connection, your router must support ReadySHARE Printer and you must install the ReadySHARE Printer utility on your computer. For more information, see the ReadySHARE Printer User Manual, which is available online at *http://downloadcenter.netgear.com*.

• Connect your printer to the router's WiFi network.

You can connect your printer to the router's WiFi network using the manual method or the Wi-Fi Protected Setup (WPS) method:

- **Manual method**. Connect to your printer router's WiFi network by manually entering the router's WiFi settings. You might need your router's WiFi network name (SSID), password, and security type to connect with WiFi. The SSID and password are located on the router's product label. For information on how to view the router's security type, see the router's user manual, which is available at *http://downloadcenter.netgear.com*.
- **WPS method**. If your printer supports, you can also use WPS to connect to your printer to the router's WiFi network.
- Connect your printer to the router using an Ethernet connection with an Ethernet cable.
- 3. Make sure that the Apple iTunes and Adobe Acrobat Reader applications are installed on your computer.
- 4. Make sure that your computer can connect to the printer and print.
- Launch the desktop genie app

The Home page displays.

6. Select AirPrint.

		Retrieve wireless password About _ X
	STGEAR <sup>®</sup> genie <sup>®</sup>	Select Language
Home	List of printers this computer can see:	Refresh
Internet		
WiFi Connection	Adobe PDF	You can use NETGEAR genie to convert a regular printer to an
Router Settings	Canon MX430 series FAX	AirPrint-capable printer. Then you can use AirPrint on your Apple iOS devices (iPad. iPhone. or iPod
Network Map	Canon MX430 series Printer	Touch) to print wirelessly.
Parental Controls ReadySHARE	Fax	Step 1: Make sure that your computer can print to the printer. The printer can be connected to
AirPrint	Foxit PhantomPDF Printer	the computer using USB, or it can be connected to the router either
My Media	Foxit Reader PDF Printer	wirelessly or using the router's USB port with NETGEAR ReadySHARE Printer support.
Network Support	Microsoft XPS Document Writer	Step 2: Select the printer.
	Print to Evernote	Your iPad, iPhone, or iPod Touch wirelessly connected to the router

A list of printers to which your computer can connect displays.

7. Select the check box next to the printer that is connected to your router's network.

You are ready to print from your iOS devices.

#### Print from an iOS Device Using AirPrint

You can access AirPrint on your iOS device from Mail, Safari, Photos, Notes, and other apps with print capability. The AirPrint feature is available in iOS version 4.2 or later. To determine if your iOS device supports AirPrint, see the documentation that came with your iOS device.

**Note:** The iOS images used in this section were taken with an iPhone 5S running iOS 8.4.

#### > To print from an iOS device to the AirPrint printer:

- 1. Make sure that the AirPrint printer is connected to the router's network.
- 2. Connect your iOS device to the router's WiFi network.
- 3. Open a file on your iOS device.

#### NETGEAR genie App

4.		are icon and tap the Print button	Print .
	●●○○ Sprint 🤝	► 10:53 PM	
	Cancel	Printer Options	
	Printer	Brother MFC-240C >	
	1 Сору	- +	
		Print	

- 5. In the **Printer** menu, select the AirPrint printer.
- 6. Tap **Print** to print the photo.

Your file prints.

# 8

## View WiFi Analytics Using the Android Mobile genie App

The Android mobile genie app includes WiFi analytics. This chapter contains the following sections:

- View the WiFi Signal Strength
- Test the WiFi in Different Rooms in Your Home
- View the Network Status
- View Channel Interference
- View a Channel Graph
- View a WiFi Signal Graph


#### View the WiFi Signal Strength

You can view the WiFi signal strength in your current location using the mobile genie app for Android devices.

- > To view the Wifi signal strength using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

- 3. Swipe the home page to the left and tap the **WiFi Analytics** button (((?)))
- 4. Tap the Signal Strength button

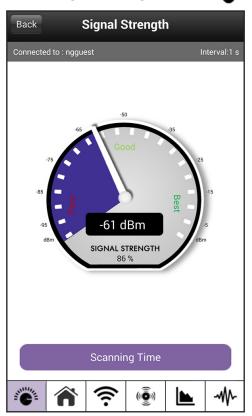

#### Test the WiFi in Different Rooms in Your Home

You can test the WiFi signal strength in each room and save the results with room names.

- > To test the WiFi signal strength in different rooms using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

- 3. Swipe the home page to the left and tap the WiFi Analytics button (((9)))
- 4. Tap the Home Testing button 3.

Back Home Testing					
Connected to : nggu	est				
	Add	E	dit	Del	
Living Room Now:77% signal N/A	and 5 Mb	ps		Test	
Bedroom1 Now:82% signal N/A	and 5 Mb	ps			
Bedroom2 N/A N/A					
Home Office N/A N/A					
Kitchen N/A N/A					
	(îr			-₩-	

5. Select the name of the room where you are located.

You can use the Add, Edit, and Del buttons to customize the room choices.

6. Tap the **Test** button.

The genie app tests the WiFi signal in your location and displays the results. The results are saved.

#### View the Network Status

You can view a list of WiFi networks in your area and the signal strength for each network. You can filter the list and you can specify when to scan the WiFi signals and for how long.

- > To view the network status using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

- 3. Swipe the home page to the left and tap the **WiFi Analytics** button
- 4. Tap the Network Status button 🛜 .

Back	Network	< Status	\$	
Connected to	: ngguest		Fi	lter : Both
🛜 WPA2	NETGEAR05 Mac ID:08:bd:4 82	, 13:aa:dd:fl	o -63dBr	n
😭 WPA2	SH-D6300-5 Mac ID:84:1b:5	5e:53:0e:5	7 -65dBr	n
😭 WPA2	NETGEAR40 Mac ID:e8:fc:a 73	f:7d:ad:e0		n
😭 WPA2	NETGEARD25317_5G, Ch: 128           Mac ID:04:a1:51:d2:53:1c           WPA2         66%			
	NETGEAR90-5G, Ch: 44			
Scan Now Filter				
	JTO SCAN EVERY	3	SECONDS	
· 1	<b>î</b> ?			

A list of WiFi networks in your area displays, with the signal strength shown for each.

- 5. To reduce the number of networks that display, tap the **Filter** button.
- 6. To change the frequency of auto update, select the AUTO SCAN EVERY check box and enter a different number in the SECONDS field.

#### **View Channel Interference**

If many WiFi networks are broadcasting their WiFi signals using the same channel, interference is likely to occur on that channel. You can view the channel interference and select a different channel for your WiFi network, if needed.

- > To view channel interference using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

- 3. Swipe the home page to the left and tap the WiFi Analytics button ((()).
- 4. Tap the Channel Interference button (

Back Channel	Interference
Connected to : ngguest	
Current Channel: 6	
# of Networks on this channel	8 POOR
Recommended Channels: 3,4,5	5,8,9,10,11,40,128
Refr	resh
Channel Number of Netwo	orks Channel clarity
1	7 POOR
3	2 GREAT
4	2 GREAT
5	1 BEST
6	8 POOR
8	1 BEST
9	2 GREAT
<b>A</b>	() <b>(</b> )


**Note:** To change the WiFi channel, use the Wireless Settings screen. For more information, see *Change the Router WiFi Settings Locally* on page 30

#### View a Channel Graph

You can view a graph that shows channel usage for the WiFi networks in your area.

- > To view a channel graph using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

- 3. Swipe the home page to the left and tap the WiFi Analytics button (((9)))
- 4. Tap the Channel Graph button 📐 .

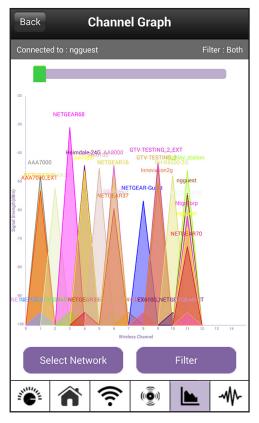

You can use the **Select Network** and **Filter** buttons to view specific networks and channels.

#### View a WiFi Signal Graph

A WiFi signal graph shows the strength of WiFi signals over time.

- > To view a signal graph using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

3. Swipe the home page to the left and tap the WiFi Analytics button



Back	Signal	Graph		
Connected to : ngg	juest		Fi	lter : Both
20 40 40 51+R8000-561 10 10 10 10 10 10 10 10 10 1				
Select Ne		Time(S)	Filter	
*	(î•	(		

5. To view specific networks, use the Select Network and Filter buttons.

## Administration and Troubleshooting



This chapter contains the following sections:

- Register Your Product
- Update the Router Firmware Locally Using the Desktop genie
- Update the genie App
- Reboot the Router Locally
- Run a Ping Test Using the Desktop genie
- Run the Trace Route Utility Using the Desktop genie App
- Perform a DNS Lookup Using the Desktop genie App
- View a Computer Profile Using the Desktop genie App
- View FAQs About the genie App Using the Desktop genie App
- Get Network Support Using the Desktop genie App

#### **Register Your Product**

NETGEAR recommends that you register your product. You must register your product before you can use NETGEAR telephone support.

#### **Register Your Product Using the Desktop genie App**

- > To register your product using the desktop genie app for Windows and Mac computers:
  - 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
  - Launch the genie app

The Home page displays.

3. Click the Network Support button.

			Retrieve wireless pass	word About _ ×
	TGEAR® ge	nie		Select Language
Home	Product Registration	FAQ	Tools	Suj 4 🕨
Internet				
WiFi Connection				
Router Settings				
Network Map		Sign In to MyN	NETGEAR	
Parental Controls		E-mail:		
ReadySHARE		Password:		
AirPrint		Forgot your pa		
My Media		Sign In	Cancel	
Network Support				
		Create a new MyNE	TGEAR account	
	L			

- 4. If you do not have a MyNETGEAR account, click the **Create a new MyNETGEAR account** link to create an account.
- 5. If you have a MyNETGEAR account, type your account email address and password in the fields and click the **Sign In** button.

The Product Registration page displays a list of products that are registered and are not registered with your account.

		Retrieve wireless pa	ssword About _ ×
TGEAR <sup>®</sup> gen	ie <sup>.</sup>		Select Language
Product Registration	FAQ	Tools	Sul 4 🕨
Registered Products:			Refresh
		Warranty Valid Until	
2KE1147G	0559F	Expired	
Not-registered Products:			
\			Register
000036720	00183		Not Mine
Add Serial Number Manually:		Register	Sign Out
	Registered Products: Not-registered Product	Product Registration     FAQ       Registered Products:     WNDR4000       2KE1147G0559F       Not-registered Products:       Diamon Products       R7000       0000367200183	Vertical Registration       FAQ       Tools         Registered Products:       WNDR4000       Warranty Valid Until         VEX.1147G0559F       Warranty Valid Until         Not-registered Products:       Expired         Not-registered Products:       R7000         0000367200183       O000367200183

6. In the Not-registered Products section, click the **Register** button next to the product you want to register.

The genie app detects the serial number for your product.

- 7. If the genie app is unable to discover your product's serial number, locate the serial number on the product label and enter it in the **Add Serial Number Manually** field.
- 8. Click the **Register** button.

Your product is registered.

#### **Register Your Product Using the Android Mobile genie**

- > To register your product using the mobile genie app for Android devices
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

3. Swipe the home page to the left and tap the **Product Registration** button **[**].

#### The Sign in to MyNETGEAR page displays.

- 4. If you do not have a MyNETGEAR account, tap the **Create a new MyNETGEAR account** link to create an account.
- 5. If you have a MyNETGEAR account, type your account email address and password in the fields and tap the **Sign In** button.

The Registered Products page displays a list of products that are registered and are not registered with your account.

6. In the Not-registered Products section, tap the **Register** button next to the product you want to register.

The genie app detects the serial number for your product.

- 7. If the genie app is unable to discover your product's serial number, locate the serial number on the product label and enter it in the **Serial Number** field.
- 8. Tap the **Register** button.

Your product is registered.

#### **Register Your Product Using the iOS Mobile genie App**

- > To register your product using the mobile genie app for iOS devices
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

3. Swipe the home page to the left and tap the **Product Registration** button **[**.

The Sign in to MyNETGEAR page displays.

- 4. If you do not have a MyNETGEAR account, tap the **Create a new MyNETGEAR account** link to create an account.
- **5.** If you have a MyNETGEAR account, type your account email address and password in the fields and tap the **Sign In** button.

The Product Registration page displays a list of products that are registered and are not registered with your account.

6. In the Not-registered Products section, tap the **Register** button next to the product you want to register.

The genie app detects the serial number for your product.

- 7. If the genie app is unable to discover your product's serial number, locate the serial number on the product label and enter it in the **Serial Number** field.
- 8. Tap the **Register** button.

Your product is registered.

## Update the Router Firmware Locally Using the Desktop genie

You can check for new firmware for your router and update the router to the latest version. You can also check for new firmware remotely using the genie app. For more information, see *Remotely Access Your Router* on page 88.

### > To check for firmware updates locally using the desktop genie app for Windows and Mac computers:

- 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
- Launch the genie app

The Home page displays.

3. Click the **Router Settings** button.

The Router Login page displays.

- 4. In the Login as menu, click At home.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Click the **OK** button.

The Wireless Settings page displays.

7. Click the Router Update tab.

If you do not see the **Router Update** tab, use the arrows to display more tabs.

				Retrieve v	vireless password	About	_	×
NE	TGEA	<b>R</b> °genie			Se	lect Lang	Juag	ge
Wireless	s Network: NE	TGEAR96			E	nglish	×	~
Home	cess	Traffic Meter	Router Upo	late	Others		• •	
Internet		r					1	1
WiFi Connection								
Router Settings								
Network Map	1							
Parental Controls			Router Update This feature can help	you downlos	ad the latest router fi	rmware		
ReadySHARE			This leature can help	you downloa	au the latest fouter in	mware.		
AirPrint								
My Media								
Network Support								
					Next	Cance		
	Router Mo	del R7000			Firmware Ver	sion V1.0	.5.3	6

8. Click the Next button.

The genie app checks for firmware updates. You see either the message "Current firmware version is the most recent" or a page that shows that a newer firmware version is available.

- 9. If a newer firmware version is available, click the Next button.
- **10.** Follow the onscreen instructions to download the firmware and update the router.

#### Update the genie App

If a new version of the genie app is available, a message displays at the top of the genie app window.

#### Update the Desktop genie App

#### > To update the desktop genie app for Windows and Mac computer:

- 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
- 2. Launch the genie app

The Home page displays.

If a new version of the genie app is available, a message displays at the top of the page.

			wireless password About _ 🗙				
	<b>FGEAR</b> <sup>®</sup> genie		Select Language				
Wireless	Wireless Network: NETGEAR96 🕴 A new NETGEAR genie upgrade is available. Click here. 🗽 English 🔍						
Home							
Internet		al a					
WiFi Connection		1111					
Router Settings							
Network Map	Internet	WiFi Connection	Router Settings				
Parental Controls	STATUS GOOD	STATUS Connected	Click here				
ReadySHARE							
AirPrint							
My Media		Щŵ.					
Network Support	-						
	Network Map	Parental Controls	ReadySHARE				
	Number of devices: 1	Click here	Click here				

3. Click the upgrade message.

		Re	trieve wireless password	About _ ×
NE	TGEAR <sup>®</sup> genie	9.	S	elect Language
Wireless	s Network: NETGEAR96 🚺 A new	NETGEAR genie upgrade is ava	ilable. Click here.  🔳	English 🗸
Home				
Internet				
WiFi Connection	NETGEAR genie Upgrade			
Router Settings	NETGEAR Genie version 2.4.12			
Network Map	1. Enable device level filtering in Pare 2. Bug fixes.	ental Controls.	er	Settings
Parental Controls			lick	here
ReadySHARE				
AirPrint				-
My Media				
Network Support		Download	Cancel	_
	Network Map	Parental Controls	Ready	SHARE
	Number of devices: 1	Click here	Click	here

4. Click the **Download** button.

The genie app updates.

5. When the update is complete, click the **Finish** button.

#### Update the Android Mobile genie App

- > To upgrade the genie app using an Android device:
  - On your Android device, open the Google Play Store and search for NETGEAR genie. If a new version of the genie app is available, an UPDATE button displays on the app page.



2. Tap the UPDATE button.


The genie app reinstalls.

3. When the genie app is done installing, tap the **OPEN** button to open the app.

#### Update the IOS Mobile genie App

- > To upgrade the genie app using an iOS device:
  - **1.** On your iOS device, open the App Store and search for NETGEAR genie.

If a new version of the genie app is available, an **UPDATE** button displays on the app page.

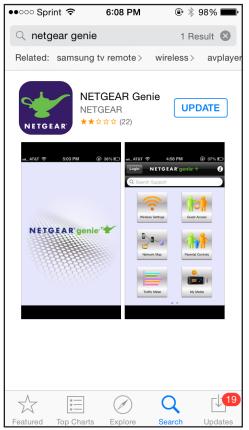

2. Tap the UPDATE button.

The genie app reinstalls.

3. When the genie app is done installing, tap the **OPEN** button to open the app.

#### **Reboot the Router Locally**

You can reboot the router from the genie app locally or remotely. For more information about how to remotely access your router using the genie app, see *Chapter 4, Remotely Access Your Router*.

#### Reboot the Router Locally Using the Desktop genie App

> To reboot the router locally using the desktop genie app for Windows and Mac computers:

- 1. Connect your computer to the router's network with WiFi or a wired Ethernet connection.
- Launch the genie app

The Home page displays.

3. Click the Router Settings button.

The Router Login page displays.

- 4. In the Login as menu, click At home.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Click the OK button.

The Wireless Settings page displays.

7. Click the Others tab.

If you do not see the **Others** tab, use the arrows to display more tabs.

				Retrieve wireless passw	rord About _ ×
	Network: N	<b>AR<sup>®</sup> genie</b> <sup>®</sup>			Select Language
Home	cess	Traffic Meter	Router Upd	ate Oth	ers ( )
WiFi Connection					
Router Settings					
Network Map			Reboot		
Parental Controls					
ReadySHARE			Documentation	n	
AirPrint My Media					
Network Support					
	Router M	odel R7000		Firmware	Version V1.0.5.36

8. Click the **Reboot** button.

A message displays asking you to confirm that you want to reboot the router.

9. Click the OK button.

The router reboots.

#### **Reboot the Router Using the Android Mobile genie App**

- > To reboot the router using the mobile genie app for Android devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

- 3. Tap the Login button.
- 4. In the Login as menu tap At home.
- **5.** Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap the Login button.

The app returns to the home page.

7. Tap the Router Reboot button

A message displays asking you to confirm that you want to reboot the router.

8. Click the OK button.

The router reboots.

#### Reboot the Router Using the iOS Mobile genie App

- > To reboot the router using the mobile genie app for iOS devices:
  - 1. Connect your device to the router's WiFi network.
  - 2. Launch the genie app.

The home page displays.

- 3. Tap Login.
- 4. At the top of the Login page, tap **Options > At home**.
- 5. Enter the router password.

The default password is **password**. The router user name, which is **admin**, is automatically entered.

6. Tap Login.

The app returns to the home page.

7. Tap the Router Reboot button

A message displays asking you to confirm that you want to reboot the router.

8. Click the OK button.

The router reboots.

#### Run a Ping Test Using the Desktop genie

You can use ping to test the path from your computer to a destination that you specify.

- > To use ping using the desktop genie app for Windows and Mac computers:
  - 1. Open the app that you use to manage your WiFi connections.
  - 2. Locate your home network and join it.
  - 3. Click the **genie** icon **v** on your desktop or in the Windows taskbar.

The Home screen displays.

4. Click the Network Support button.

The Product Registration page displays.

5. Click the **Tools** tab.

The Tools page displays.

6. Click the **Ping** button on the left side of the screen.

eless password About _			
Select Languag	5.	IGEAR <sup>®</sup> geni	
ls Sur I	FAQ	Product Registration	Home
hese tools may be of	quality of your Internet	If you would like to check th assistance.	Internet WiFi Connection Router Settings
uter can reach a particular host	Use PING to test wheth or website.		letwork Map
ost and click the button.	Type the name or IP ac	Ping	Parental Controls
Ping	Host: www.netgear.c	Trace Route	leady SHARE
time=42ms TTL=48 time=37ms TTL=48	Reply from 54.187.188 Reply from 54.187.188 Reply from 54.187.188	DNS Lookup	ly Media
time=97ms TTL=48	Reply from 54.187.188 Finished	Computer Profile	letwork Support
	Finished	Computer Profile	

- 7. In the Host field, type a URL.
- 8. Click the **Ping** button located next to the URL.

The router displays ping results.

#### Run the Trace Route Utility Using the Desktop genie App

To display the route and measure transit delays of packets across an IP, run the trace route utility.

- To run the trace route utility using the desktop genie app for Windows and Mac computers:
  - 1. Open the app that you use to manage your WiFi connections.
  - 2. Locate your home network and join it.
  - 3. Click the **genie** icon **v** on your desktop or in the Windows taskbar.

The Home screen displays.

4. Click the **Network Support** button.

The Product Registration page displays.

5. Click the **Tools** tab.

The Tools page displays.

6. Click the **Trace Route** button on the left side of the screen.

			Retrieve wireless passv	vord About _ ×
	TGEAR <sup>®</sup> gen 5 Network: NETGEAR96	ie <sup>.</sup>		Select Language
Home	Product Registration	FAQ	Tools	Suj 4 🕨
Internet				
WiFi Connection	If you would like to check assistance.	the quality of your Interne	t Connection these tools	may be of
Router Settings				
Network Map			to identify the route taken by ( host. Trace route helps the f	
Parental Controls	Ping		firewalls that may be blockin ype the name or IP address	
ReadySHARE				
AirPrint	Trace Route	Host: www.netgea	23 ma 203.23 1.232. 134	Trace Route
My Media	DNS Lookup	16 * * * 1	27 ms 205.251.232.149 Request timed out Request timed out	
Network Support		18 * * * 1	Request timed out	
	Computer Profile		Request timed out 40 ms 54.244.8.71	
		Finished		

 Click the Trace Route button located next to the Host field. The trace route results display.

#### Perform a DNS Lookup Using the Desktop genie App

Find the IP address of a host name (typically a website).

- > To perform a DNS lookup using the desktop genie app for Windows and Mac computers:
  - **1.** Open the app that you use to manage your WiFi connections.
  - 2. Locate your home network and join it.
  - 3. Click the **genie** icon **w** on your desktop or in the Windows taskbar.

The Home screen displays.

4. Click the Network Support button.

			Retrieve wireless pas	sword About _ ×
	TGEAR <sup>®</sup> ge	nie <sup>.</sup>		Select Language
Home	Product Registration	FAQ	Tools	Suj 4 🕨
Internet				
WiFi Connection				
Router Settings				
Network Map		Sign In to My	NETGEAR	
Parental Controls		E-mail:		
ReadySHARE		Password:		
AirPrint		Forgot your p	assword? er password	
My Media		Sign In	Cancel	
Network Support				
		Create a new MyNt	ETGEAR account	

- 5. If you created a MyNETGEAR account, click the **Create a new MyNETGEAR account** link to create an account.
- 6. If you did not create a MyNETGEAR account, type your account email address and password in the fields and click the **Sign In** button.

The Product Registration page displays a list of products that are registered and are not registered with your account.

			Retrieve wireless	oassword About _ ×
	TGEAR® ge	enie <sup>.</sup>		Select Language
Home	Product Registration	FAQ	Tools	Suj 4 🕨
Internet				
WiFi Connection	Registered Products:			Refresh
Router Settings		R4000	Warranty Valid Until	
Network Map	2KE1	1147G0559F	Expired	
Parental Controls				
ReadySHARE	Not-registered Products:			
AirPrint	X / R700	)0		Register
My Media	0000	367200183		Not Mine
Network Support				
	Add Serial Number Manua	ally:	Register	<u>Sign Out</u>

7. Click the **Tools** tab.

The Tools page displays.

8. Click the DNS Lookup button on the left side of the screen.

			Retrieve wireless password	About _ ×
	TGEAR <sup>®</sup> gen	ie <sup>.</sup>	_	elect Language
Home	Product Registration	FAQ	Tools	Suj 4 🕨
Internet				
WiFi Connection	If you would like to check t assistance.	the quality of your Interne	t Connection these tools may	y be of
Router Settings				
Network Map			o find the IP address of a hostnar k-attached device with a name, ty	
Parental Controls	Ping	website. Type the na	me of the host and click the butto	n.
ReadySHARE	Trace Route	Host: www.netgea		DNS Lookup
AirPrint	Trace Route	Primary DNS: 54.2 Secondary DNS: 54.2	244.8.71	
My Media	DNS Lookup	54.187.188	8.149	
Network Support				
	Computer Profile			
				]

9. Click the DNS Lookup button located next to the Host field.

The results of the DNS lookup display.

#### View a Computer Profile Using the Desktop genie App

View details about the computer that you are currently using, such as its current network connections and operating system.

- > To view a computer profile using the desktop genie app for Windows and Mac computers:
  - **1.** Open the app that you use to manage your WiFi connections.
  - 2. Locate your home network and join it.
  - 3. Click the **genie** icon **v** on your desktop or in the Windows taskbar.

The Home screen displays.

4. Click the Network Support button.

			Retrieve wireless passwo	ord About _ ×
	TGEAR <sup>®</sup> ge	nie <sup>.</sup>		Select Language
Home	Product Registration	FAQ	Tools	Suj 4 🕨
Internet				
WiFi Connection				
Router Settings				
Network Map		Sign In to MyNETG	GEAR	
Parental Controls		E-mail:		
ReadySHARE		Password:		
AirPrint		Forgot your passw		
My Media			Cancel	
Network Support				
		Create a new MyNETGE	AR account	

- 5. If you created a MyNETGEAR account, click the **Create a new MyNETGEAR account** link to create an account.
- 6. If you did not create a MyNETGEAR account, type your account email address and password in the fields and click the **Sign In** button.

The Product Registration page displays a list of products that are registered and are not registered with your account.

NE	TGEAR <sup>®</sup> ge	enie <sup>.</sup>	Retrieve wireless p	
	s Network: NETGEAR96			Select Language
Home	Product Registration	FAQ	Tools	Suj 4 🕨
Internet				
WiFi Connection	Registered Products:			Refresh
Router Settings		DR4000	Warranty Valid Until	
Network Map	2KE	1147G0559F	Expired	
Parental Controls				
ReadySHARE	Not-registered Products:			
AirPrint	\ / R70	00		Register
My Media	0000	0367200183		Not Mine
Network Support				
	Add Serial Number Manu	ally:	Register	<u>Sign Out</u>

7. Click the **Tools** tab.

The Tools page displays.

8. Click the Computer Profile button.

Wireles	s Network: NETGEAR96			English
Home	Product Registration	FAQ	Tools	Suj 4
nternet				
ViFi Connection	If you would like to check assistance.	the quality of your Interne	et Connection these tools r	nay be of
Router Settings				
letwork Map		Your Computer		
Parental Controls	Ping	<ul> <li>▷ Network Inte</li> <li>▷ Operating S</li> </ul>		
eadySHARE				
lirPrint	Trace Route			
Ny Media	DNS Lookup			
letwork Support				

Your computer profile displays.

#### View FAQs About the genie App Using the Desktop genie App

The frequently asked questions (FAQ) page list common questions users have about NETGEAR products.

- > To get network support:
  - 1. Open the app that you use to manage your WiFi connections.
  - 2. Locate your home network and join it.
  - 3. Click the **genie** icon **v** on your desktop or in the Windows taskbar.

The Home screen displays.

4. Click the Network Support button.

			Retrieve wireless passwor	d About _ 🗙
	TGEAR <sup>®</sup> ge	enie <sup>.</sup>		Select Language
Home	Product Registration	FAQ	Tools	Suj 4 🕨
Unternet WiFi Connection				
Router Settings Network Map		Sign In to MyNET	GEAR	
Parental Controls ReadySHARE		E-mail: Password:		
AirPrint		Forgot your passy		
My Media Network Support		Sign In	Cancel	
		Create a new MyNETGE	EAR account	

- 5. If you created a MyNETGEAR account, click the **Create a new MyNETGEAR account** link to create an account.
- 6. If you did not create a MyNETGEAR account, type your account email address and password in the fields and click the **Sign In** button.

The Product Registration page displays a list of products that are registered and are not registered with your account.

			Retrieve wireless pa	assword About _ ×
	TGEAR <sup>®</sup> ge	nie <sup>.</sup>		Select Language
Home	Product Registration	FAQ	Tools	Suj 4 🕨
Internet				
WiFi Connection	Registered Products:			Refresh
Router Settings	WNDR4		Warranty Valid Until	
Network Map	2KE114	7G0559F	Expired	
Parental Controls				
ReadySHARE	Not-registered Products:			
AirPrint	X / R7000			Register
My Media	000036	7200183		Not Mine
Network Support				
	Add Serial Number Manually	c [	Register	Sign Out

7. Click the FAQ tab.

If you do not see the **FAQ** tab, use the arrows to display more tabs.

				Retrieve wi	reless password	About _ ×
		<b>R°genie</b> <sup>®</sup>			_	ect Language
Home	gistration	FAQ	Tools		Support	
Internet						
WiFi Connection	Frequently as	ked questions for your NET	GEAR product are	answered h	ere.	
Router Settings	How can a	new computer or wireless	device connect to r	ny wireless n	etwork	*
Network Map	I can conne	ct to the router, but not to t	he Internet			*
Parental Controls	What to do	first when there is no conn	ection to the router	or the Intern	et	*
ReadySHARE	What is the	password to log in to my r	outer?			٠
AirPrint	My router s	topped working and the Po	wer LED blinks slo	wly, what sho	uld I do?	*
My Media	Troublesho	oting Wireless Networks				٠
Network Support	One PC is n	ot connected to the Interne	et, but other PCs are	e		٠
	What kind o	of wireless security should	l use for my netwo	rk?		۲

A list of FAQs displays.

8. Click the more buttons next a FAQ to view the answer.

#### Get Network Support Using the Desktop genie App

Network support helps you solve a network problem or learn more about your network.

#### > To get network support:

- 1. Open the app that you use to manage your WiFi connections.
- 2. Locate your home network and join it.
- 3. Click the genie icon with on your desktop or in the Windows taskbar.

The Home screen displays.

4. Click the Network Support button.

			Retrieve wireless passy	word About _ ×
	TGEAR <sup>®</sup> ge	nie <sup>.</sup>		Select Language
Home	Product Registration	FAQ	Tools	Sul 4 >
Internet				
WiFi Connection				
Router Settings				
Network Map		Sign In to MyNE	TGEAR	
Parental Controls		E-mail:		
ReadySHARE		Password:		
AirPrint		Forgot your pass		
My Media		Sign In	Cancel	
Network Support				
		Create a new MyNETG	EAR account	

- 5. If you created a MyNETGEAR account, click the **Create a new MyNETGEAR account** link to create an account.
- 6. If you did not create a MyNETGEAR account, type your account email address and password in the fields and click the **Sign In** button.

The Product Registration page displays a list of products that are registered and are not registered with your account.

			Retrieve wireless pa	ssword About _ ×
	TGEAR <sup>®</sup> gei	nie		Select Language
Home	Product Registration	FAQ	Tools	Sur + +
Internet				
WiFi Connection	Registered Products:			Refresh
Router Settings	WNDR4	000	Warranty Valid Until	
Network Map	2KE114	7G0559F	Expired	
Parental Controls				
ReadySHARE	Not-registered Products:			
AirPrint	\   / R7000			Register
My Media	000036	7200183		Not Mine
Network Support				
	Add Serial Number Manually:		Register	<u>Siqn Out</u>

7. Click the **Support** tab.

If you do not see the **Support** tab, use the arrows to display more tabs.

				Retrieve w	ireless password	About	_
	STGEAI	<b>R° genie</b> ' EAR96			_	ect Lan	guage
Home	gistration	FAQ	Tools	ſ	Support		• •
nternet							
ViFi Connection	If you would lik may be of ass	e to know more about our istance.	NETGEAR produc	ts, these lin	ks to the NETGEAF	R website	
Router Settings							
etwork Map							
arental Controls			Downloads				
teadySHARE			<b>F</b>				
irPrint			Forums				
y Media			Contact Us				
etwork Support							

- 8. Click a button to select an option:
  - **Downloads**. See downloads for your product at the NETGEAR website.
  - Forums. Visit forums for NETGEAR products.
  - **Register Your Product**. Register your product so that you can use NETGEAR support.
  - **Premium Support**. Learn about premium support options for your product.